



# SS180<sup>®</sup> M

TRUCK MOUNTED ATTENUATOR USING TRUCK HYDRAULICS

PRODUCT MANUAL



**PN 626823**

AUGUST 2022

# SS180<sup>®</sup> M

## USING TRUCK HYDRAULICS

The SS180<sup>®</sup> M Truck Mounted Attenuator (“TMA”) has been tested pursuant to American Association of State Highway and Transportation Officials (“AASHTO”) Manual for Assessing Safety Hardware (“MASH”) specifications.

### Product Description Assembly Manual



15601 Dallas Parkway  
Suite525  
Addison, Texas 75001



**Warning:** The local highway authority, distributors, owners, contractors, lessors, and lessees are **RESPONSIBLE** for the assembly, maintenance, and repair of the SS180<sup>®</sup> M. Failure to fulfill these **RESPONSIBILITIES** with respect to the assembly, maintenance, and repair of the SS180<sup>®</sup> M could result in serious injury or death.



**Important:** These instructions are for standard assembly specified by the appropriate highway authority. In the event the specified system assembly, maintenance, or repair would require a deviation from standard assembly parameters, contact a Valtir representative.

**This manual must be available to the worker overseeing and/or assembling the product at all times. For additional copies, contact Valtir directly at (888) 323-6374 or visit [Valtir.com](http://Valtir.com).**

The instructions contained in this manual supersede all previous information and manuals. All information, illustrations, and specifications in this manual are based on the latest SS180<sup>®</sup> M information available to Valtir at the time of printing. We reserve the right to make changes at any time. Please contact Valtir to confirm that you are referring to the most current instructions.

## **Table of Contents**

Customer Service Contacts .....	3
Important Introductory Notes .....	3
System Overview .....	4
Safety Symbols .....	4
Safety Rules for Assembly .....	4
Limitations and Warnings .....	5
Know Your SS180® M System .....	6
Assembly .....	11
Recommended Tools .....	11
Preparation .....	12
Operation .....	18
Folding and Unfolding the System .....	18
Maintenance .....	19
Routine Maintenance .....	19
Detaching and Attaching the System .....	20
Lubrication .....	22
Grease Pivot Points .....	22
Technical Specifications .....	23
Repair Instructions .....	24
Post Impact .....	24
Troubleshooting Guide .....	26
Hydraulic Fluid .....	27
Hydraulic System Check .....	28
Pressure Relief Valve .....	29
Counterbalance Valve .....	30
Hydraulic Cylinder .....	31
Hydraulic System Priming .....	32
Priming Process .....	32
Electrical Shorts or Open Circuits .....	32
Troubleshooting Decision Trees and System Drawings .....	33
SS180®M MO .....	34
Support Frame Assembly .....	35
Cartridge A .....	38
Cartridge B .....	39
LED Lighting Assembly .....	40
Miscellaneous Part Assembly .....	43
Hydraulic Control Assembly .....	44
Hydraulic Cylinder Assembly .....	47
Truck Hydraulic Hookup .....	48
Truck Power Harness Limit Switch .....	49
Impact Face Assembly .....	50
Attachment Assembly .....	51
Underride Assembly .....	52

## Customer Service Contacts

Valtir is committed to the highest level of customer service. Feedback regarding the SS180® M system, its assembly procedures, supporting documentation, and performance is always welcome. Additional information can be obtained from the contact information below:

### **Valtir:**

Telephone	(888) 323-6374 (USA) +1 (214) 589-8140 (International)
Contact Link	<a href="http://Valtir.com/Contact">Valtir.com/Contact</a>
Website	<a href="http://Valtir.com">Valtir.com</a>

## Important Introductory Notes

Proper assembly, deployment and future maintenance of the SS180® M are critical to achieve tested performance under accepted MASH criteria. Take the time to review this manual thoroughly before performing all necessary work. These instructions should be read in their entirety and understood before assembling the TMA. These instructions are to be used only in conjunction with the assembly of the SS180® M system and are for standard assemblies only as specified by the applicable highway authority.

In the event your system assembly requires or involves deviation from standard parameters or, during the assembly process a question arises, please contact Valtir customer service. These instructions are intended for an individual who is qualified to both read and accurately interpret them as written. They are intended for the individual who is experienced and skilled in the assembly of highway products which are specified and selected by the highway authority.

If additional information is required, please contact Valtir Customer Service. If there are deviations, alterations, or departures from the assembly protocol specified in this manual, the SS180® M may not perform as tested.



**Important:** It is the responsibility of the installer to maintain a safe work area including the use of standard work zone safety equipment & PPE: gloves, safety-toe shoes, and eye / ear protection.



**Important: DO NOT** use any component part that has not been specifically crash tested and/or approved for this system during assembly or repair. Such use may cause serious injury or death.



## System Overview

The SS180® M system has shown to reduce the risk of injury to passengers of an errant vehicle and to the driver of the truck to which the system is attached when the system is impacted within the applicable MASH criteria. The system mounts on the rear of a truck and may be used in stationary applications (e.g. as a truck block in a work zone) and mobile operations (e.g. striping, sweeping, plowing, etc.).

## Safety Symbols

This section describes safety symbols that may appear in the SS180® M manual. Read this manual for complete safety, assembly, operating, maintenance, repair, and service information.

### Symbol

### Meaning



**Safety Alert Symbol:** Indicates Danger, Warning, or Caution. Failure to read and follow the Danger, Warning, Caution, or Important statements could result in serious injury or death to workers and bystanders.



**Warning:** Read safety instructions thoroughly and follow the assembly directions and suggested safe practices before assembling, maintaining, or repairing the SS180® M. Failure to follow this warning can result in serious injury or death to the worker and/or bystanders.



**Important:** Please keep up-to-date instructions for later use and reference by anyone involved with this product.

## Safety Rules for Assembly

### **\* Important Safety Instructions \***

This manual must be kept in a location where it is readily available to persons who assemble, maintain, or repair the SS180® M. Additional copies of this manual are available from Valtir by calling (888) 323-6374 or contact us using [Valtir.com/Contact](http://Valtir.com/Contact). Please contact Valtir if you have any questions concerning the information in this manual.



**Important:** It is the responsibility of the installer to use proper safety precautions when operating power equipment, mixing chemicals, and when moving heavy equipment or SS180® M components. The installer is responsible for proper use of hand, eye, foot, and back protection.



**Warning:** Safety measures incorporating appropriate traffic control devices specified by the highway authority must be used to protect all personnel while the TMA is in use. The traffic control plan established by the highway authority must always be observed when utilizing this product.

## **Limitations and Warnings**

Valtir, in compliance with MASH “Recommended Procedures for the Safety Performance of Highway Safety Features”, contracts with FHWA approved testing facilities to perform crash tests, evaluation of tests, and submittal of results to the FHWA for review.

The SS180® M was tested to meet the impact criteria, requirements, and guidelines of MASH. These tests, specifically set forth by the FHWA, evaluate product performance by simulating those impacts outlined by MASH involving a typical range of vehicles on our roadways, from lightweight cars (approx. 2420 lb. [1100kg]) to full size pickup trucks (approx. 5000 lb. [2270 kg]) as specified by the FHWA. A product can be certified for multiple Test Levels. The SS180® M is certified to the Test Level as shown below:

### **Test Level 3: 62 mph [100 kph]**

**These FHWA directed tests are not intended to represent the performance of systems when impacted by every vehicle type or every impact condition existing on the roadway. This system is tested only to the test matrix criteria of MASH as approved by the FHWA.**

Valtir expressly disclaims any warranty or liability for injury or damage to persons or property resulting from any impact, collision or harmful contact with products, other vehicles, or nearby hazards or objects by any vehicle, object or person, whether or not the products were assembled in consultation with Valtir or by third parties.

The SS180® M is intended to be assembled, delineated, and maintained within specific state and federal guidelines. It is important for the highway authority specifying the use of a highway product to select the most appropriate product configuration for its site specifications. The customer should be careful to properly select, assemble, and maintain the product. Careful evaluation of the site lay out, vehicle population type; speed, traffic direction, and visibility are some of the elements that require evaluation in the selection of a highway product.

After an impact occurs, the debris from the impact should be removed from the area immediately and the product should be evaluated and restored to its original specified condition or replaced as soon as possible. All components and assemblies should be inspected and any parts that are damaged should be replaced with original Valtir replacement parts. Contact the Customer Service Department prior to repair if you have any questions (p. 3).



**Warning:** It is the responsibility of the installer to ensure that the SS180® M and delineation used meet all federal, state, specifying agency, and local specifications.



**Warning:** It is the responsibility of the installer to ensure that your assembly meets all appropriate Manual on Uniform Traffic Control Devices (MUTCD) and local standards.

# Know Your SS180<sup>®</sup> M System



**Warning:** Stay clear of all moving parts when folding or unfolding the TMA.

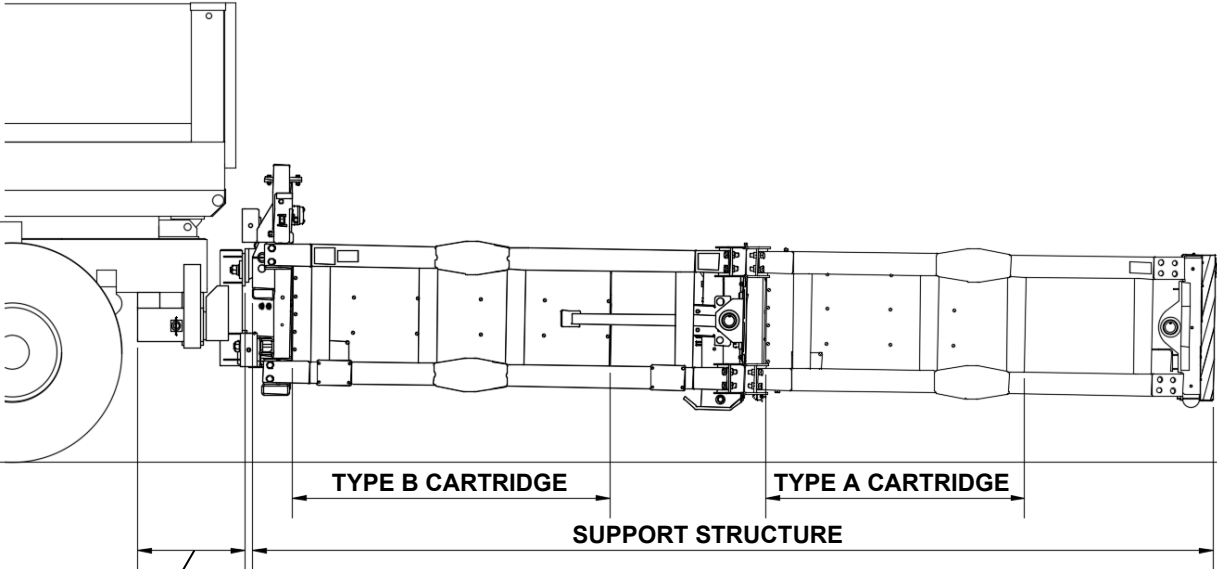


Figure 1

SOCKET HITCH UNDERRIDE


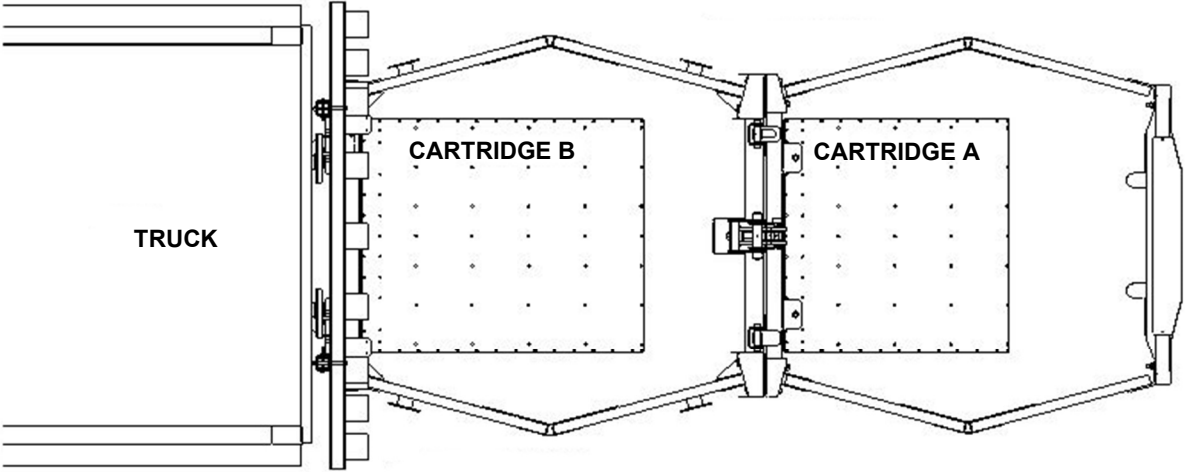


Figure 2

1. The SS180<sup>®</sup> M shall be rigidly fastened to the truck. In the horizontal position, the bottom of the TMA shall be 11" to 13" [280 to 330 mm] from the ground to the bottom of the Rear Impact Face (Figure 3).



**Warning:** The SS180<sup>®</sup> M can only absorb the energy of an impacting vehicle when in the unfolded position.

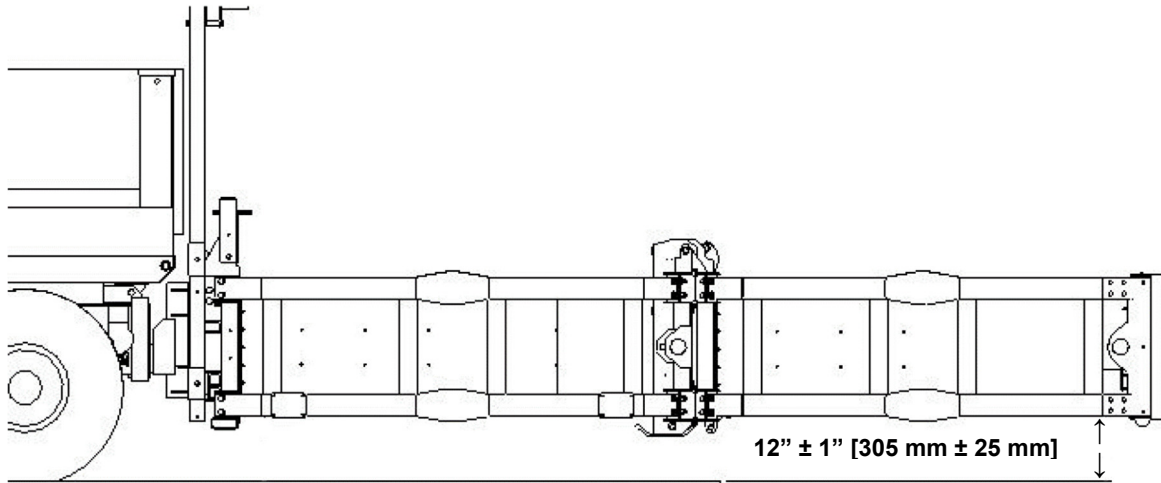

**Figure 3**

2. Jacks shall be used to support the SS180<sup>®</sup> M when it is detached from the truck. The Jacks must be stored while the TMA is attached to the truck.




**Important:** The SS180<sup>®</sup> M must be deployed in the unfolded position at **all times** while operating as either a **Barrier** or **Shadow Vehicle**.

The SS180<sup>®</sup> M can be in the "**unfolded**" position when traveling short distances at low speed (not greater than 30 mph).


The SS180<sup>®</sup> M must be in the "**folded**" position when traveling long distances at a high speed (greater than 30 mph).



3. The SS180<sup>®</sup> M is intended to support its own weight and dissipate the kinetic energy of errant vehicles per MASH criteria. Do not drag the TMA or place anything on its top or damage will result. Do not sit, stand, or lean on any part of the TMA (Figures 4 & 5).

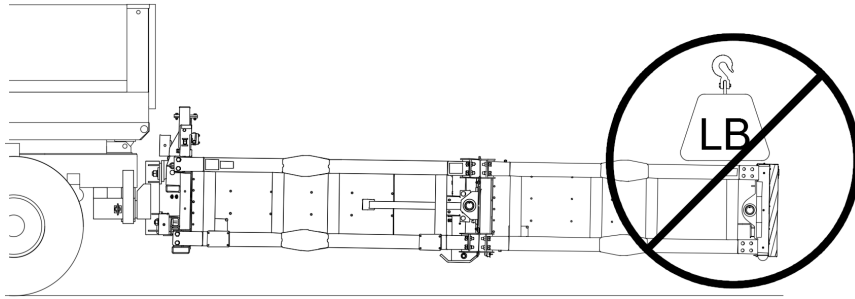


**Figure 4**

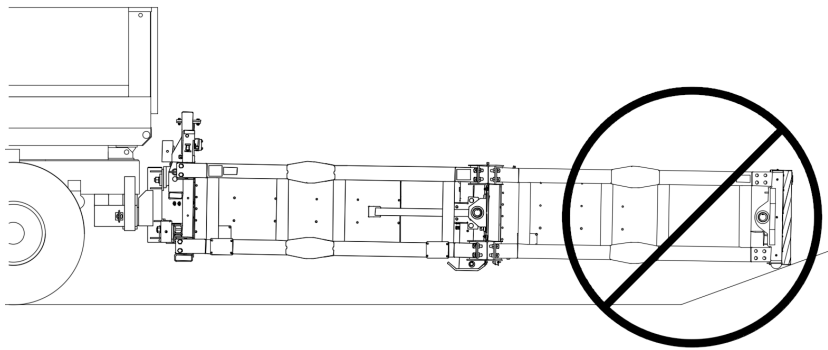

**Figure 5**

4. Before raising or lowering the TMA, the operator shall be fully trained in its proper operation. All operators are required to fully understand the contents of this manual prior to operating the system. The operator should never stand under the TMA while it is being raised or lowered.
5. Folding the TMA provides the best maneuverability and driving characteristics. The TMA shall be in its folded transport position while travelling between deployment locations. Refer to local agency policies as required for additional guidance. Unfold the system before entering a job site or beginning shadow vehicle operations. The support vehicle must be fully stopped before TMA folding and unfolding.
6. All persons shall stand clear before folding or unfolding the TMA. The system must be stopped in full folded position before allowing anyone directly behind the folded system.

7. Ballast and other heavy objects **MUST BE ADEQUATELY ANCHORED** to the truck to prevent shifting during an impact (Figure 6). The force exerted on the tie-down straps could be 20 times the weight of the ballast.

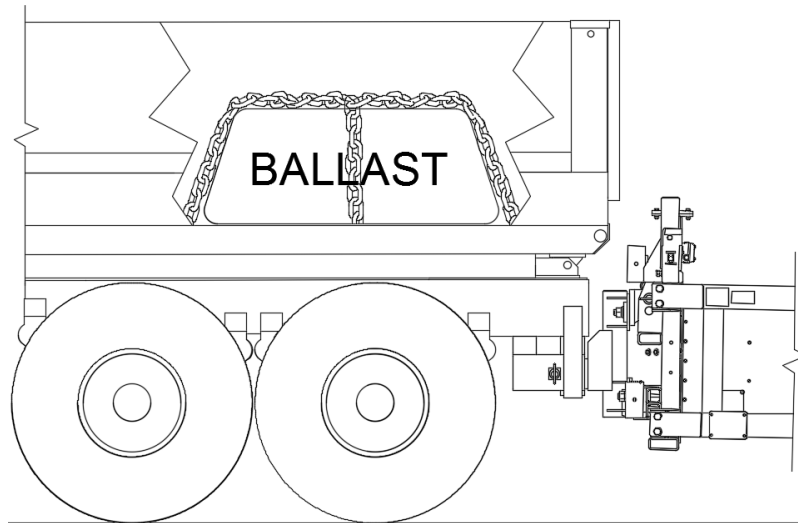

**Figure 6**

8. The agency responsible for the truck shall inspect it for adequate operator safety equipment (e.g., seat belts, head rests, etc.)
9. The SS180<sup>®</sup> M can only be mounted to trucks weighing 13,500 - 25,000 lbs. [6,120 - 11,340 kg].
10. Make sure that the performance and safety of the TMA is not impaired by damage or corrosion.



**Warning:** This TMA is intended to be used as an impact attenuator on the rear of trucks weighing 13,500 - 25,000 lbs. [6,120 - 11,340 kg]. The TMA must not be used for any other purpose.

11. Regular maintenance of the TMA is critical for proper operation. Refer to the maintenance section of this manual for additional information.
  - a. Regular inspection of frame members, cartridges, and fasteners is necessary to ensure proper system performance.
  - b. Regular inspection of hydraulic hoses is critical. A broken or damaged hose will cause the system to operate uncontrollably.
  - c. Clean any hydraulic spills or leakage to prevent bodily injury, fire, etc.
12. The driver shall be cautious while making turns with the TMA in the unfolded position. The TMA extends beyond the end of the truck and will swing wide while turning.
13. This system is an impact attenuator and is therefore used in high risk areas. Stay clear of traffic whenever possible.

14. The Hydraulic Assembly was designed to fold and unfold the TMA. Any other use may be hazardous to people or equipment.
- Do not use the system to push a load.
  - Do not use the raised end of the system to support any load.
  - Do not use any part of the TMA for towing or hauling a load. This could cause the lift mechanism to malfunction and permanently damage the system.
  - Do not use the TMA as a ladder.



**Warning:** Do not leave the TMA raised, even slightly, when deployed.

**BARRIER VEHICLE** - A truck on which a TMA is mounted, while positioned upstream (towards the direction that traffic is approaching) of a work zone.

**SHADOW VEHICLE** - A truck on which a TMA is mounted, which is following behind a moving operation such as striping, spraying, etc.

**THE USE OF A TMA ON THE BACK OF A TRUCK, WHEN IMPACTED WITHIN THE APPLICABLE MASH CRITERIA, HAS BEEN SHOW TO:**

- Reduce the severity of the impact
- Help protect the occupants of the impacting vehicle
- Help protect the barrier or shadow vehicle occupants
- Help reduce damage to the barrier or shadow vehicle

**HAS NOT BEEN SHOWN TO:**

- Affect the skid (roll ahead) distance of an impacted truck

**CONTROLLING SKID DISTANCE (ROLL AHEAD):**

- Skid distance is significantly increased and is less predictable for lightweight shadow vehicles.
- Skid distance is reduced and is more consistent when heavier shadow vehicles are used.
- Required Truck + TMA weight: 15,500 lbs. [7,030 kg] up to 27,000 lbs. [12,250 kg]

## **Assembly**

Read and understand all instructions before beginning assembly.

The weight of the vehicle shall be between 13,500 lbs. [6,120 kg] and 25,000 lbs. [11,340 kg] for tested performance.

The system must be attached to the truck by welding parts to the frame. Do not weld on the bottom flange of the truck frame forward of the rear leaf spring hangers to ensure structural integrity of frame. Use certified or professional welders to ensure durable attachment of the TMA system. Disconnect the truck battery before any welding on truck or TMA.

The truck frame must be suitable and accessible for mounting a TMA. If there are any questions regarding the suitability, contact the Customer Service Department for input as to your specific application.

### **Shipping list**

Check the shipping list against the actual parts.

### **Recommended Tools**

- Welding equipment (for 1/2" plate) GMAW or SMAW
- Cutting torch
- Hammer
- Drift pin or alignment pin (12" long)
- Tape measure
- 1/2" drive socket wrench w/6" extension
- 1/2" drive sockets (9/16", 1-1/8", 1-1/2", 9/16" deep well)
- Open end wrenches –(9/16", 1-1/8", 1-1/2")
- 12" crescent wrenches – (2)
- Marking implement (pencil, soap stone)
- Drill for 13/16" diameter bit
- 13/16" diameter bit and pilot drill bit for same
- Center punch
- Torque wrench - 90 ft-lb [120 N-m]
- Hydraulic fluid (Dexron™ III fluid only) - Shipped with system
- Floor jack or Forklift
- Work gloves and other personal protection equipment as required
- Bubble level



**Important: The above list of tools is a general recommendation. Depending on specific site conditions and the complexity of the assembly specified by the appropriate highway authority, additional or fewer tools may be required. Decisions as to what tools are needed to perform the job are entirely the responsibility of the specifying highway authority and the authority's selected contractor performing the assembly of the system at the authority's specified assembly site.**



## Preparation

### 1A) Assembly Must Be Performed On Level Surface

The system's framework is very heavy.

### 1B) Truck Ballast


Use a bubble level to verify that the truck is parked on a level surface. The truck shall be as close to the final driving weight as possible. If ballast must be added to achieve the minimum weight, add it at this time. Ballast must be properly anchored to the truck to keep it in place during an impact. Ideally, an adequately sized truck, that requires no ballast, should be used. Because the 2,000 lbs. [910 kg] weight of the rearward protruding TMA is supported by the back of the shadow vehicle, care must be taken not to exceed the manufacturer's published maximum axle loads. To ensure that the driving characteristics of the vehicle are maintained, the manufacturer's recommended center-of-gravity zone shall be followed completely.

## 2) Interference Check

Before attempting to assemble the Underride, check for interference concerns.

The TMA folds so the Impact Face is very close to the mounting location (p. 23, Figure 25). If you are not using a standard Socket Receiver Hitch Underride skip to Step 8.

Temporarily position the Underride Socket Receiver under truck frame as shown (p. 13, Figure 8) and check for interference concerns. Interference concerns with tail lights, springs, dump bodies (in the folded or unfolded positions), etc., shall be corrected before proceeding.

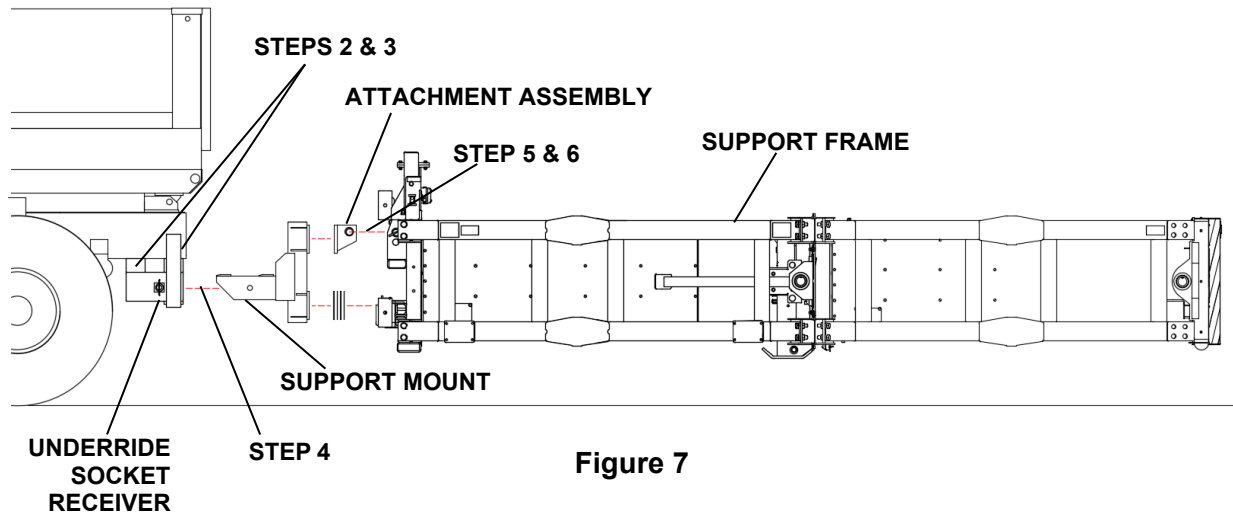

### 3) Underride Assembly

With the truck at its actual driving weight and parked on a level surface, measure the distance from the ground to the bottom of the truck frame. A distance of  $28\pm 1$ " [711 $\pm$ 25 mm] is required. Spacer Tubes may be added to the bottom of the frame to achieve this height (p. 14, Figure 10).



**Important:** The truck's springs may settle with the weight of the TMA, sometimes as much as 2" [50 mm]. Adjust the height to compensate for anticipated settling.

Measure from the back end of the frame forward to the rear-most leaf spring hanger. Look for any obstruction on the bottom of the frame that could interfere with the Socket Receiver. A minimum of 12" [305 mm] is required from the back end of the frame forward to the rear-most leaf spring hanger (p. 52).

Position the Socket Receiver at the rear end of the frame so that the 3" x 15-1/4" [76 x 387 mm] flat bar is along the outside of the frame member and the Socket Receiver Assembly is flush with the end of frame. If spacers are required, weld them to the Socket Receiver and lap the Spacer Splices (pieces of 3/8" x 2" x 4" [10 x 51 x 103 mm] flat bar) across the Socket Receiver and Spacer at the rear-most location (p. 52). The top of the Socket Receiver shall be  $28\pm 1$ " [711 $\pm$ 25 mm] from the level ground for proper system height (p. 14, Figure 10).

Weld the Socket Receiver to the bottom of the truck frame with the 3" x 15-1/4" [76 x 387 mm] flat bar on the outer side of the frame (p. 14, Figure 10).



**Important:** Welding must be performed by professional or certified welder.



**Caution:** The truck frame is high carbon steel. To avoid cracking, do not weld or apply excessive heat to the bottom flange forward of the rear-most leaf spring hangers.

**Prime and paint all welded areas.**

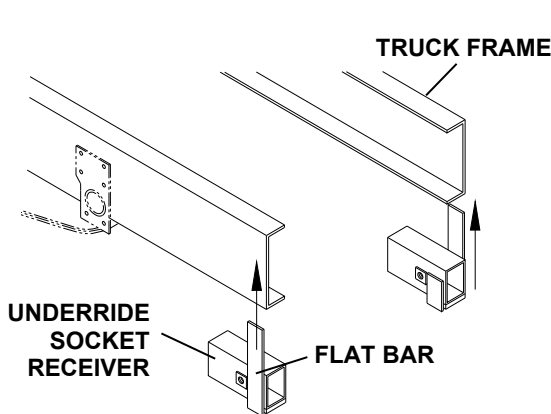


Figure 8


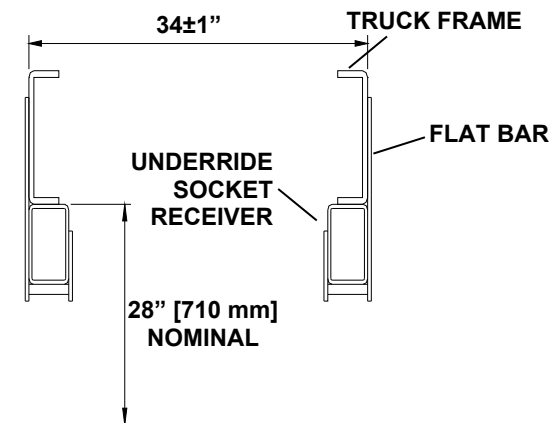



Figure 9



**Important: Left and right Underride Socket Receivers must be parallel and level with each other.**

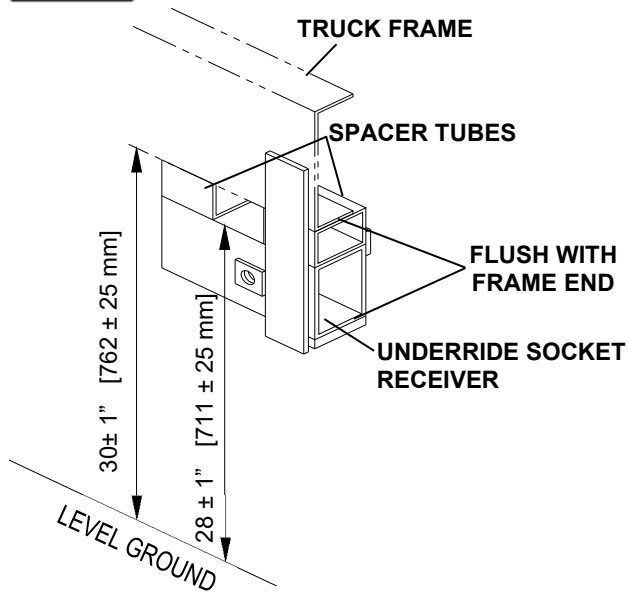

**WITH SPACERS**

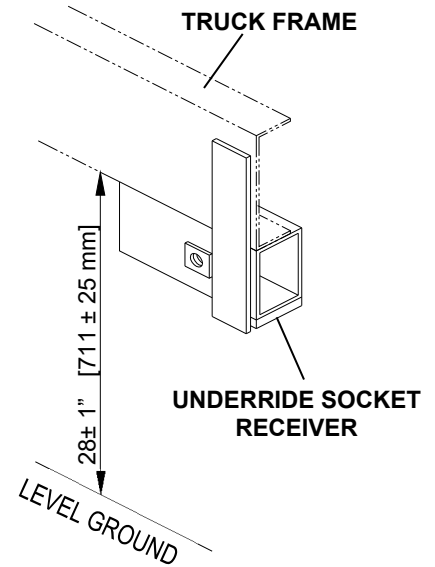


**WITHOUT SPACERS**

**Figure 10 – Socket Hitch  
Left Side Shown**

#### **4) - Socket Hitch Assembly**

Insert the Socket Hitches and pin them into place using the 1" x 6 3/4" Hitch Pins and Retainer Pins shipped with the system.

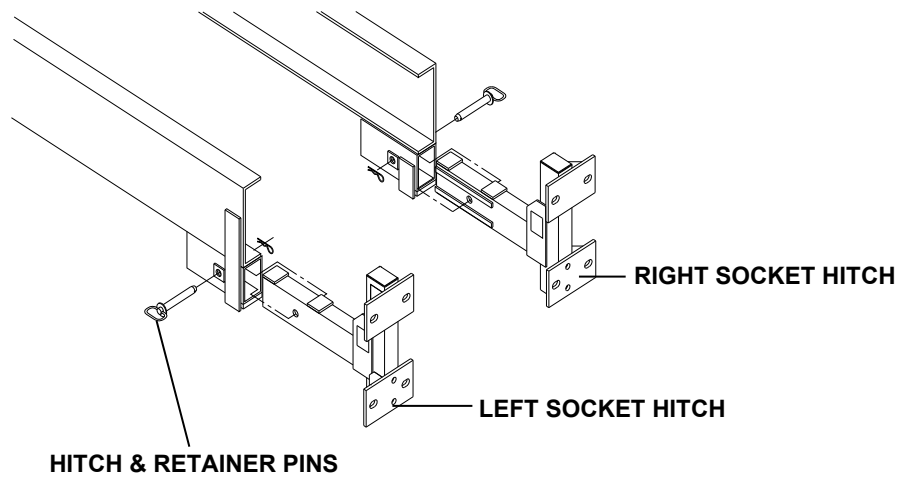

**Figure 11**

### 5) Mount the Support Brackets to Socket Receivers

Mount the Support Brackets to the Socket Hitches as shown in Figure 12. Shims are used to level the system. It is recommended that two (2) 1/4" Shims per side be used initially. This may be adjusted once the system is assembled.

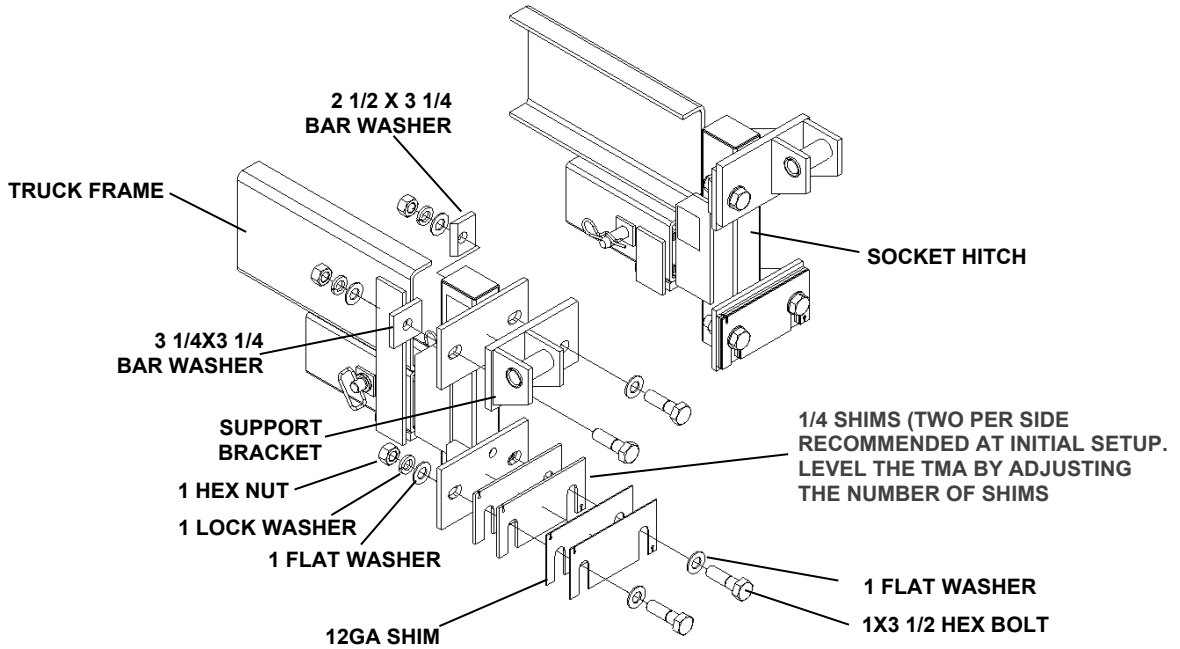


Figure 12

### 6) Attach the Support Frame / Backup to the Attachment Assembly

Move the system to the truck and pin the Support Frame/Backup Assembly to the Support Brackets (Figure 13). The system is to be assembled as a whole unit. Use forklift slings to support the system. Use the upper set of mounting holes for the attachment.

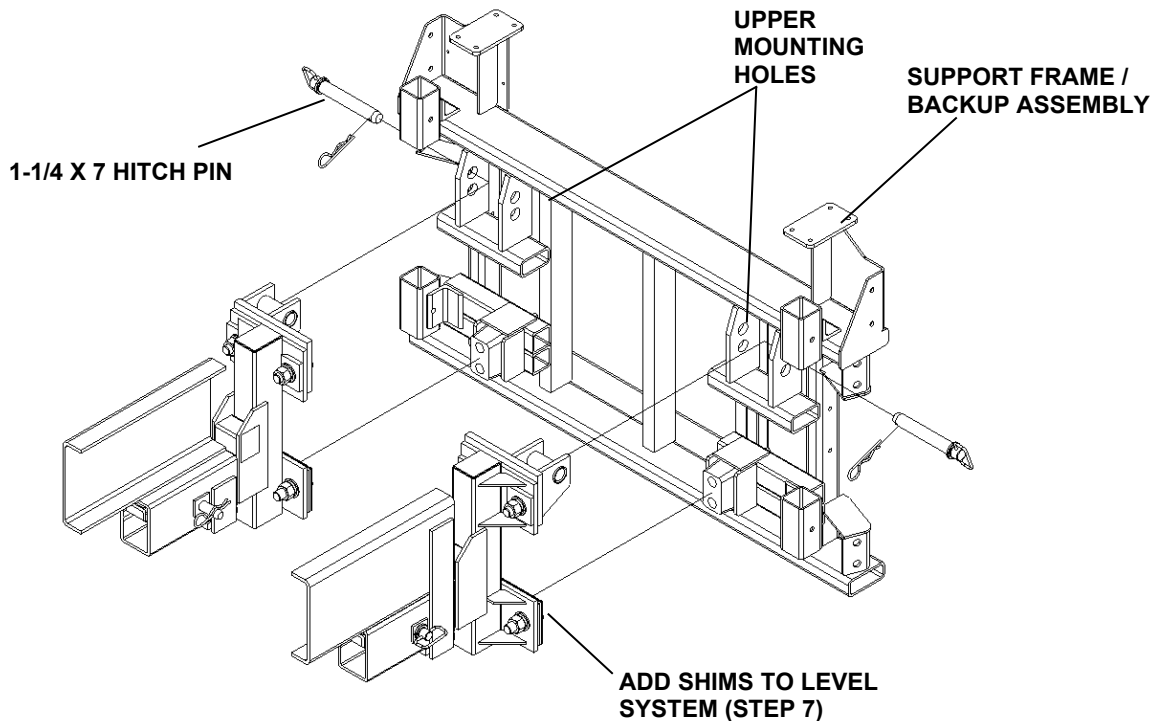


Figure 13



## 7) Adjust the Height of the System Frame

Verify that the system frame is  $12'' \pm 1''$  [ $305 \pm 25$  mm] from the ground at the rear of the system. It may be necessary to add shims to the Socket Hitch in order to level the Frame (Figures 3 & 14).

## 8) Connect the Lights and Controls

Locate the female TMA Socket Connector in a convenient location on the truck so that lifting or lowering the TMA will not damage the electrical cable. Make sure that the electrical cord on the TMA can reach this location.

For support vehicles with combined tail and clearance lights, connect a jumper between pins 2 and 6 on the backside of the male TMA plug connector (VIEW A-A and Figure 14). Connect the 7-pin plug to the socket on the truck.

The truck battery must be of the proper voltage. The SS180<sup>®</sup> M is available in 12 and 24 volt versions. Be sure the system and truck are compatible. Use standard safety practices when attaching the battery cables. Attach positive terminal first when connecting and remove the negative cable first when disconnecting the battery. Do not run the battery cables around sharp corners, metal work, or in other areas that could pinch or cut the cables. Connect the battery cable to the buzzer system.

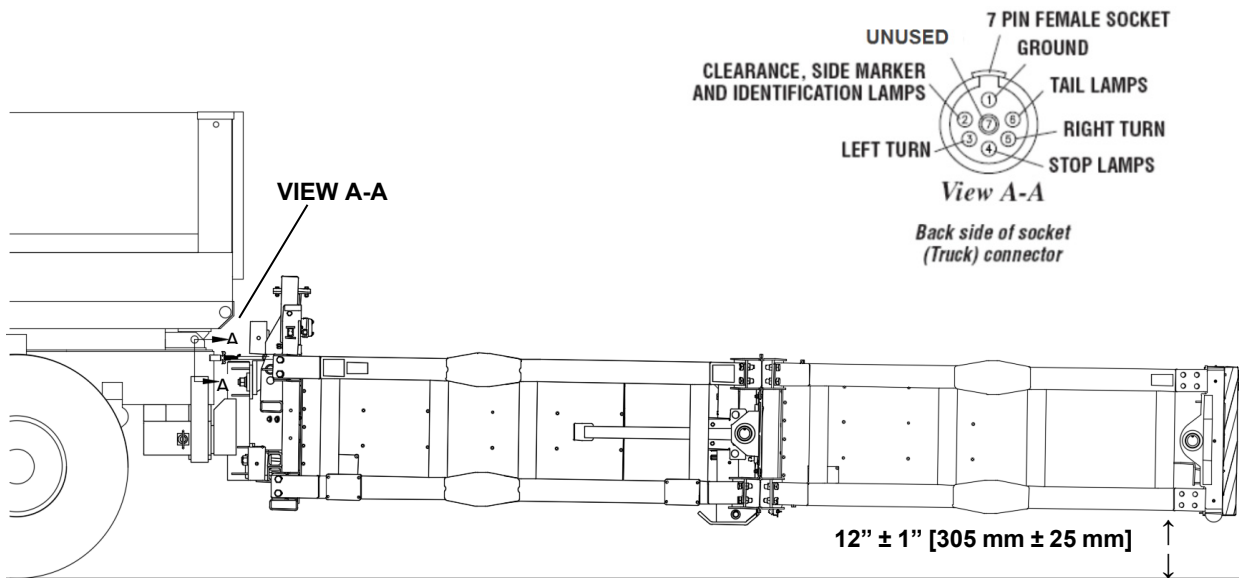


Figure 14

## 9) Check the Hydraulic System

The Hydraulic Assembly is pre-assembled and tested for operation and leaks before shipping.

Read the Folding and Unfolding the System section on the next page (p. 18). To ensure all electrical and hydraulic lines will not be damaged, have someone watch at the rear of the truck while folding and unfolding the system twice. Cycling the SS180® M will purge excess air from hydraulic lines and confirm its operational status. Adjust the flow control valves to fine-tune system speed.

## 10) Store the Jacks

The Jacks are provided to facilitate the attachment and removal of a folded SS180® M from the truck. Retrieve Jacks set aside earlier and place them in a storage location (Figure 15).

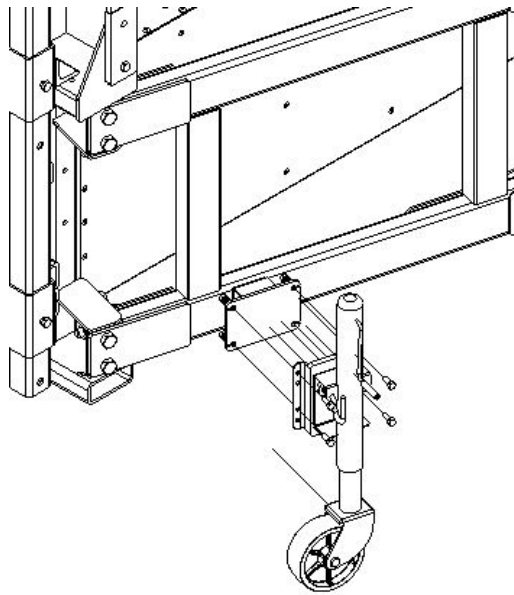


Figure 15



**Important:** Unbolt, remove, and store Jacks when the TMA is in service.

## 11) Verify the Position of the Hydraulic/Electrical Lines

Check the location of all the hydraulic and electrical lines to be sure they will not be damaged while folding and unfolding the system.

## 12) Final System Check

Double check the height and levelness of the system.

## 13) Ready to Use

The SS180® M system is now ready for use. To ensure proper and safe operation, all SS180® M users must be given operating and safety training from this manual and as specified by the owner and local regulations.

## Operation

Before operating the SS180<sup>®</sup> M, thoroughly read and understand all Operation Instructions and safety sections of this manual. Verify that the system is properly assembled and in working order. For proper impact performance, the TMA must be equipped with one SS180<sup>®</sup> M Type A Cartridge and one SS180<sup>®</sup> M Type B Cartridge, in their proper positions as shown below.

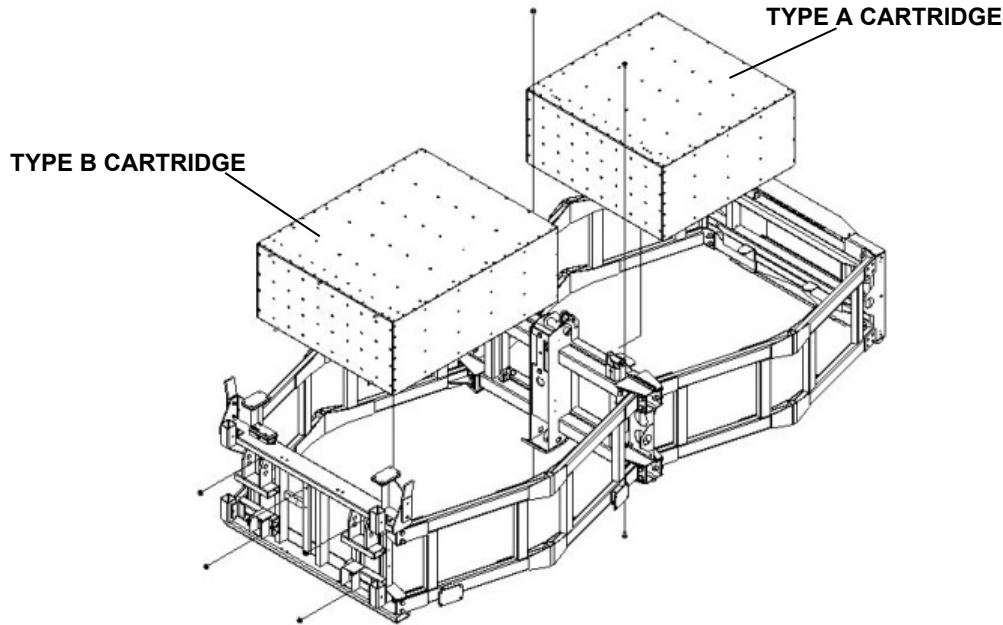


Figure 16

## Folding and Unfolding the System



**Caution:** Make sure the area above and behind the system is clear of all objects before proceeding. **Under no circumstances shall anyone be allowed behind the system when it is being folded or unfolded.** When operating from the cab, always be aware of objects behind and above the SS180<sup>®</sup> M.

Folding and unfolding the system: Truck hydraulics control the hydraulic system on the SS180<sup>®</sup> M. Use the truck hydraulic controls to fold or unfold the TMA. The SS180<sup>®</sup> M buzzer system will continue to sound until the TMA is fully folded or unfolded.

The system cannot serve its intended purpose when folded. The SS180<sup>®</sup> M must be unfolded during shadow or barrier vehicle operations. The truck with a folded SS180<sup>®</sup> M offers better driving performance. Driving with the system in the folded position is recommended during restricted city driving, driving to and from the work site, and when there is a period of extended high-speed travel between work sites. Be sure to unfold the system before entering a site. The support vehicle must be stopped each time the SS180<sup>®</sup> M is folded or unfolded.



**Important:** The SS180<sup>®</sup> M hydraulic system is only to be operated while the truck is stopped. Jarring or severe bumping of the system while folding or unfolding will cause damage to the system and possible injury to the operator.

# Maintenance


Before performing any maintenance on the SS180<sup>®</sup> M, thoroughly read and understand the Maintenance Section and the Safety Section of this manual.

## **Routine Maintenance**

### **Description**

1. Height - The height of the system is important to its impact performance. Check regularly and adjust as necessary (Figure 17).

**Interval**  
**As Required**

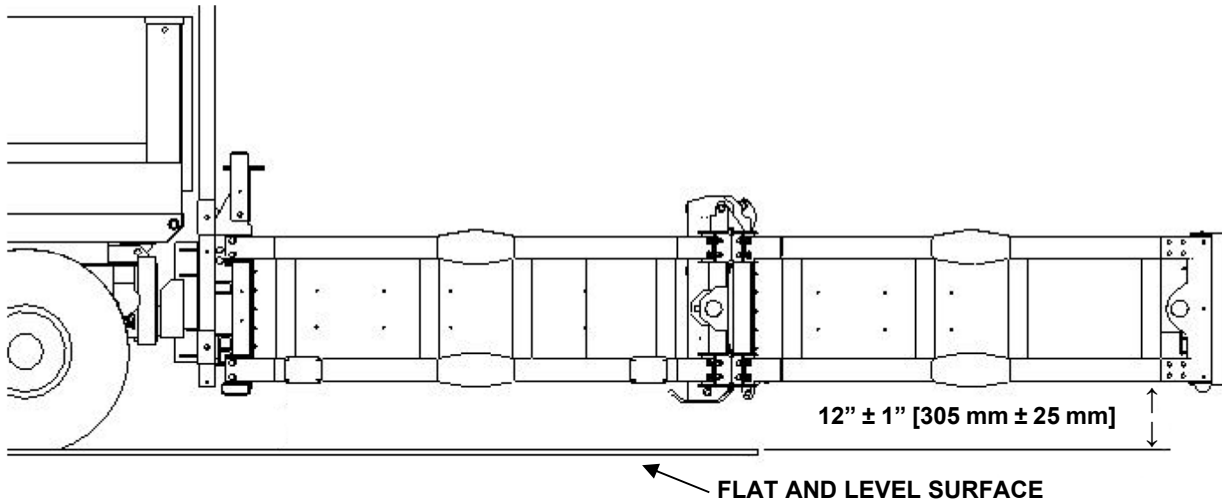

**Figure 17**

2. Fasteners - Check the tightness of the fasteners. Refer to the Drawing Package for all fastener locations. Check all bolts attaching the Cartridges to the support structure.

**Monthly**

3. Lights - Replace non-working lights.

**As Required**

4. Lubrication - Lubricate as described in the Lubrication Section (Maintenance Section - III).

**Varies – p. 22**

5. Hydraulic Ram – Clean the Hydraulic Ram. Remove all residue or debris on or around the ram.

**Monthly**

6. Hydraulic Hoses – Check all Hydraulic Hoses for damage, leaks or cracks. Replace damaged or leaky hoses.

**Each use**

7. Clean System - Clean the system frame, Cartridges and Impact Face from dirt and salt. Always check lubrication after cleaning.


**Monthly & each use when salt &/or snow are present**

## Detaching and Attaching the System

### 1) Detaching the System from the Truck


Ensure the TMA and the truck are on level ground

- A. System is in the folded position
- B. Attach Jacks as shown in Figure 19
- C. Crank the Jacks until the weight of the system is supported

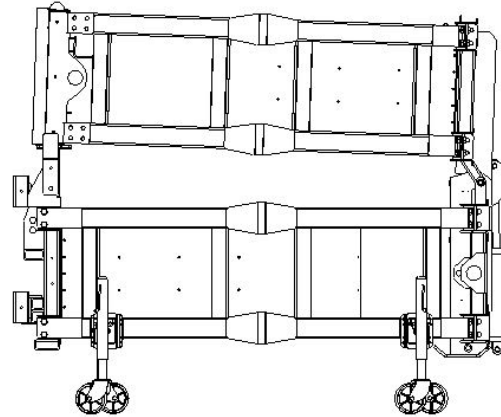


**Figure 18**


- D. Unplug the light harness and disconnect the buzzer system.
- E. Remove the Socket Hitches from the Underride Socket Receivers by removing both 1 x 6 3/4" hitch pins and retainer pins (Figure 21). (If the alignment is off, making removal difficult, it may be necessary to adjust Jacks or temporarily disengage the TMA from the Socket Hitches. This can be done by removing the two (2) 1 1/4 x 7" Hitch Pins and Retainer Pins as shown in Figure 21.) Loosen the hardware to ease interference and then retighten.
- F. Roll the TMA away from the truck.

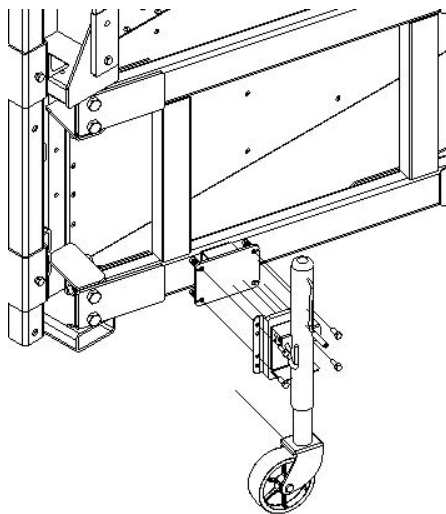

**Figure 19**

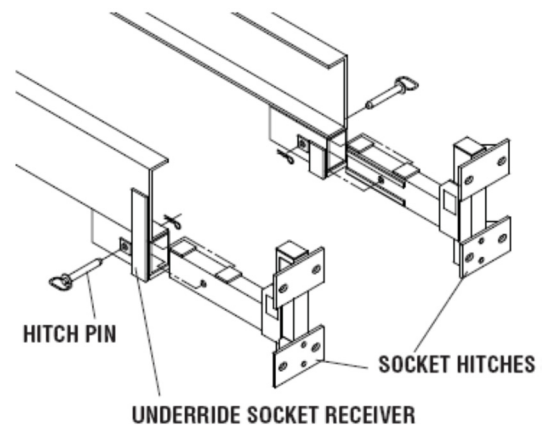

**Figure 20**

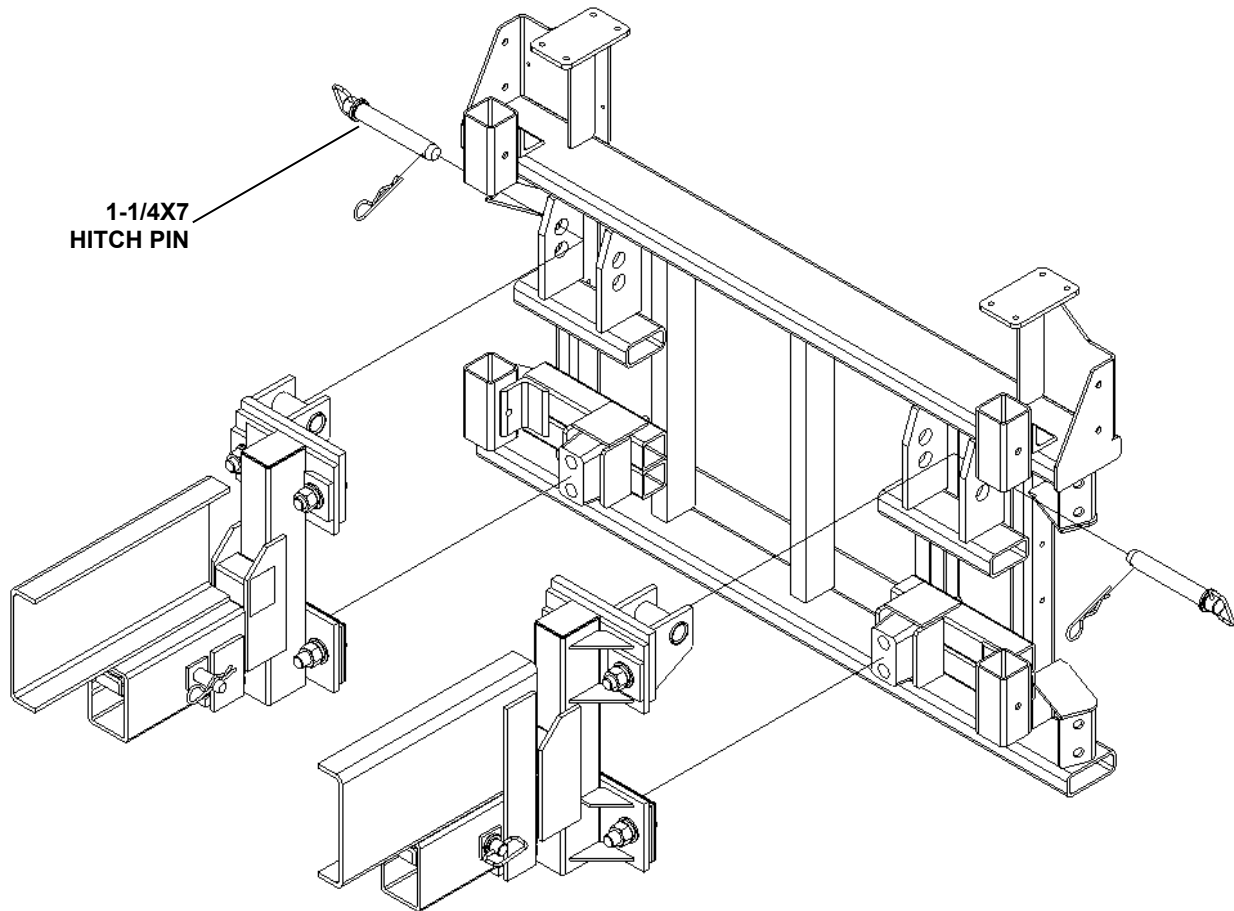

**Figure 21**

## **2) Attaching the System to the Truck**

- A. Roll the TMA to the truck.
- B. Insert the Socket Hitches into the Underride Socket Receivers and pin them into place using 1 x 6-3/4" pin and retainer pin (Figure 21). If alignment is off, making the assembly difficult, it may be necessary to adjust Jacks or temporarily uncouple the Socket Hitches from the TMA. Ensure the retainer pins are inserted correctly and cannot fall out.
- C. Plug in the light harness and connect the buzzer system.
- D. Retract the Jacks completely and remove them from the TMA.
- E. Store Jacks for future maintenance or repair.
- E. Check hydraulic/electrical system for proper operation.
- F. Verify system is 11"-13" [280-330 mm] above level ground at Rear Impact Face.



# Lubrication

When handling hydraulic fluid, use appropriate measures to prevent spillage. Clean any spillage immediately.

## Grease Pivot Points

Figure 22 shows three (3) pivot locations equipped with grease fittings that require periodic lubrication. To prevent excessive noise and/or wear grease the locations shown below as required.

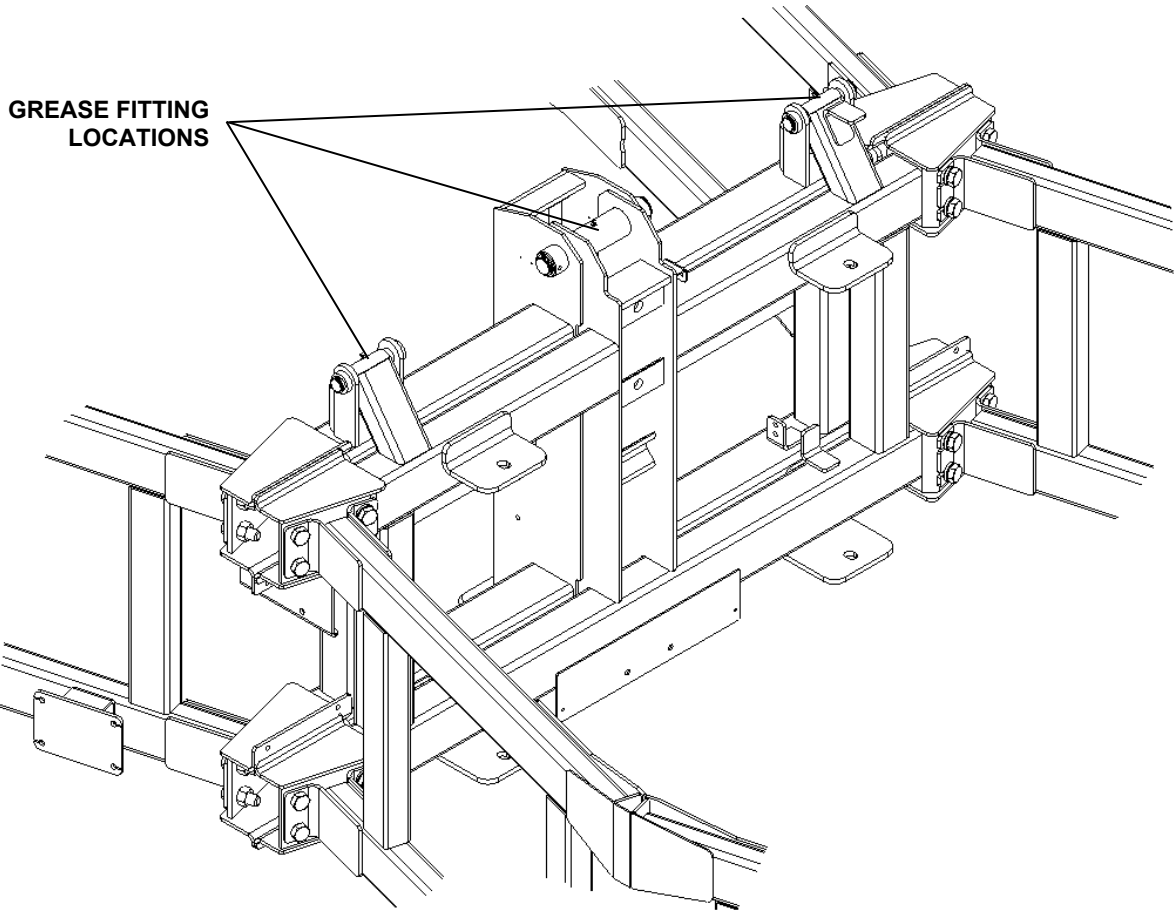


Figure 22

## Technical Specifications

1) Weight	lbs.	kg
Type A Cartridge	130	59
Type B Cartridge	196	89
Frame Components	1635	742
Jacks	72	32
Total	2033	922

## 2) Dimensions

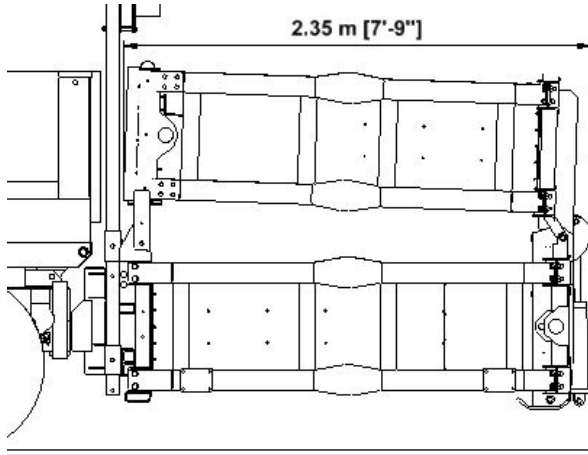


Figure 23

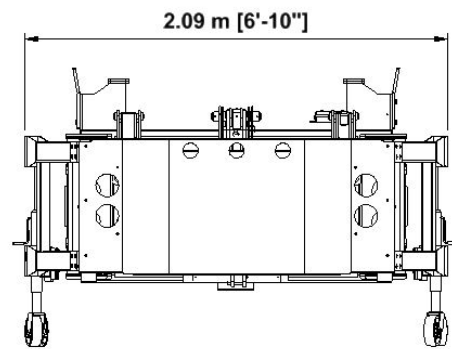


Figure 24

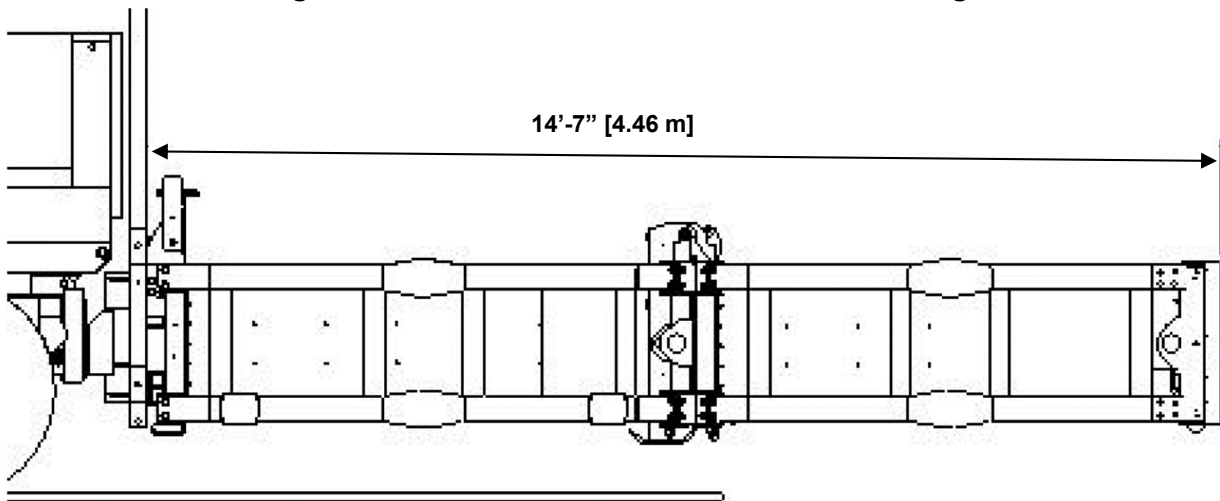


Figure 25

## 3) Replacement Parts

Refer to the drawing package for replacement part numbers and descriptions. Contact customer service for replacement parts (p. 3).

## 4) Operating Rates

The system **folds and unfolds** in approximately 35 to 40 seconds.

# Repair Instructions

## Post Impact



**Important:** Only the correct parts manufactured specifically for this product by Valtir may be used to repair a damaged system. Failure to comply may result in damage to the system and/or an untested effect on the impacting vehicle, to and including injury or death.

### 1) **Inspect the Frame for bent parts**

Replace all frame members that have been damaged. Do not attempt to weld or straighten parts. Replace the arms in pairs. Refer to the system drawings for the part numbers and descriptions of the parts.

### 2) **Replace Frame Arm Mounting Bolts**

Replace all Frame Arm Mounting bolts. Refer to the system drawings for the part numbers and descriptions of the parts. All frame attaching bolts are 3/4"-10 G5, Zinc plated cap screws with 3/4"-10 G5, Zinc plated nuts. Split lock washers are placed under the head of the cap screws on all fasteners interior to the arm attachment of the FWD section and attachment of the mid-frame in the REAR section. All outer fasteners are tightened to 120-130 ft-lbs. [163-176 Nm]. The interior fasteners are torqued to 55-60 ft-lbs. [75-81 Nm]. All fasteners must have thread locker (Red Loctite® 262 recommended) applied to the threads prior to assembly (pp. 35-37).

### 3) **Remove Cartridges**

Remove the crushed Cartridges.



**Warning:** Do not attempt to repair damaged Cartridges. To ensure full impact capacity, the cartridges must be replaced even if slightly crushed.

### 4) **Assemble Cartridges (p. 18, Figure 16)**

Using a forklift and sling, place the Type B Cartridge in position and secure it using the flat washers, lock washers and nuts provided. Torque the nuts to  $90 \pm 5$  ft-lb [ $120 \pm 7$  N-m]. Insert the Type A Cartridge between the mid-frame flanges and anchor it to the assembly with 1/2"-13 G5 hex cap screws and 1/2" flat washers. Use medium threadlocker on the bolt threads (Blue Loctite® 242 recommended). Torque bolts to  $65 \pm 5$  ft-lb [ $88 \pm 7$  N-m] (pp. 38-39).

## 5) Adjust the Height and Levelness of the System Frame

Verify that the System Frame is  $12'' \pm 1''$  [ $305 \pm 25$  mm] from the ground at the front and rear of the system. It may be necessary to add shims to the Socket Hitches in order to adjust the levelness of the Cartridge (Figure 26).

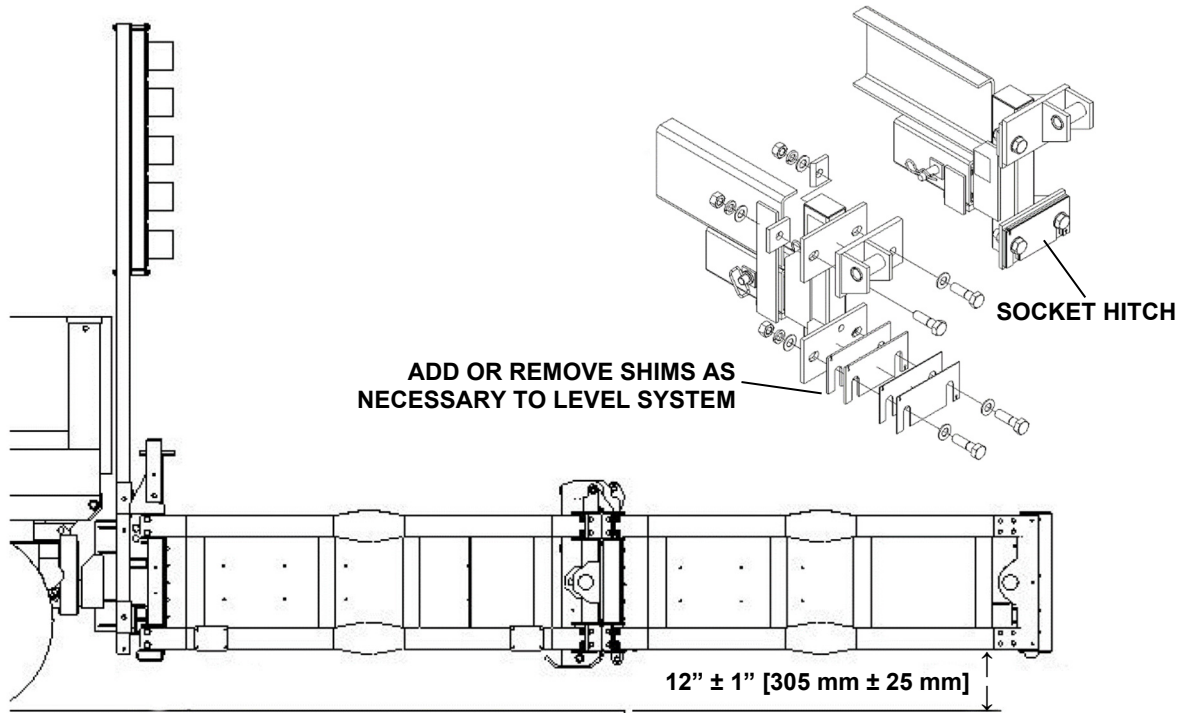


Figure 26

## 6) Verify Position of Hydraulic / Electrical Lines

Check the location of all the hydraulic and electrical lines to make sure they will not be damaged during the folding and unfolding of the system.

## 7) Check System Lights for Proper Operation

Verify that all the turn / stop / tail / lights are working properly and replace all non-working light assemblies.

There are two light circuits on the TMA. Verify both circuits are operational.

Raise the system to folded position and verify secondary lights are working.

With the system unfolded, lights on the Impact Face and Mid Frame will be on.

With the system folded, the lights on the Mid Frame will be on and the lights on the Impact Face will be off.

## 8) Final check

Each fastener is in place and properly tightened.

## 9) Ready to Use

The system is now ready for service.

# **Troubleshooting Guide**

## **Safety Notes – See Troubleshooting Decision Trees on page 33.**

- 1) Always wear eye protection when working on or around machinery or power tools, and while working with hydraulics.
- 2) Do not attempt to control a hydraulic leak with your hand. High-pressure hydraulic fluid can puncture the skin and cause severe injury or death. Use extreme caution when working on hydraulic systems.

In general, consult Valtir Customer Service if problems with operating or repairing the TMA arise (p. 3). This guide is meant to be an aid for performing minor repairs, not a detailed repair manual.

**Note:** For any problems not listed here, contact Valtir Customer Service.

## **Test Equipment**

The following is a recommended list of the test equipment required to troubleshoot DC powered hydraulic systems.

### **1. Gauge**

A 5000 psi [34.5 MPa] pressure gauge, preferably glycerin filled, is a valuable and relatively inexpensive tool for checking fluid pressure in the various sections of the circuit.

### **2. DC Test Light**

A test light is a light bulb with one lead wired to an alligator clip and the other lead connected to a metal probe. It is used to check for the presence of a voltage in the electrical circuit. With the alligator clip grounded, the light glows when the probe comes into contact with a hot electrical component.

### **3. Continuity Light**

A continuity light is like a test light but contains its own battery. It is used for testing electrical circuits when the components are not connected to a power source.

### **4. Volt Meter**

A DC voltmeter can be used to troubleshoot voltage problems. Two common uses are: 1) Ground one probe while using the other to probe hot leads in search of the available voltage at the point where the second probe is connected. 2) Measure a voltage drop in a wire or component by connecting one probe to one end and the remaining probe to the other end of the item in question.

### **5. Ohmmeter**

**Note:** All tests conducted with an ohmmeter must be done with the power source disconnected from the system.

An ohm meter is used to measure resistance and is useful when working with solenoid coils. On some coils the wire resistance is large enough that a DC test light might not illuminate, falsely indicating an open circuit (infinite resistance). A successful coil test, however, shall always show some non-infinite value of resistance.

### **6. Assorted Hoses, Pressure Fittings**

These can be used to connect and/or isolate certain parts of a hydraulic circuit for diagnosing hydraulic problems.

If you suspect problems, do not operate the system. Diagnose and repair, or contact Valtir Customer Service Department for input as to your specific application.

# Hydraulic Fluid

## 1. Purpose

The main purpose of hydraulic fluid is to transfer power from the truck hydraulic pump to the actuators. Secondary tasks include reducing metal on metal friction and preventing the formation of rust and sludge. These traits are achieved when the oil has a good lubricity (slipperiness), and with additives that inhibit oxidation and the entrainment of air and water in the oil, respectively. The viscosity (thickness) of the oil must be appropriate for the operating temperature to minimize unwanted leakage and to lubricate the close fitting parts in the system.

Additionally, the oil must be compatible with the seals used in the system. Finally, the oil must be able to pour or flow at the lowest expected operating temperature so that it can enter the reservoir and truck hydraulic pump for use. For all of these reasons, automatic transmission fluid (ATF, Dexron™ III) has been found to be the best readily available fluid for the job in most climate conditions.

## 2. Selecting Fluids for Applications Outside ATF'S Temperature Range

When looking for fluids that can be used in place of ATF or for applications where the operating temperature is outside the range of ATF, the following specs should be discussed with your local oil distributor:

- A. Fluid must be compatible with Buna-N sealing compounds.
- B. The pour point of fluid used must be below the lowest anticipated temperature.
- C. Fluid should contain Rust or Oxidation inhibitors as well as other detergent type inhibitors.
- D. Fluid viscosity (SUS) must have an operating range between 80 and 375, with the ideal viscosity near 200 SUS.
- E. The viscosity index should be as high as possible. As an example, ATF has the following specs listed for most oil manufacturers:

[1] Viscosity	(SUS)
99° F [37 ° C]	185 to 205
210° F [99 ° C]	45 to 55
Pour Point	-47 ° F [-44° C] to -35 ° F [-37° C]
Viscosity Index	145 to 165

# Hydraulic System Check

## Finding & Solving Problems



**Caution:** Contact Valtir Customer Service Department for advice on repair or replacement of TMA parts. All replacement components must be approved for use or provided by Valtir.

Hydraulic system failures can occur in several ways: A gradual or sudden loss of pressure or flow, a loss of power at the truck hydraulic pump, or other difficulties. Any of the system's components could be the cause. Start with the appropriate checklist below.



**Important:** Do not use Teflon™ tape on hydraulic fittings as it can easily jam valves and cause failures in the hydraulic system.

### 1. Rough or Erratic Performance

- Insufficient or no oil in system, truck hydraulic pump losing prime: Fill system, check for leaks.
- Wrong oil in system (should be ATF Dexron™ III): Change Oil.
- Clogged or dirty cylinder check valve: Remove load on the cylinder, disassemble cylinder check valve and clean (See section on Cylinder Check Valves).
- Oil line is restricted, dirty, or collapsed: Clean or replace oil line.
- Worn components (valves, cylinder, etc.): Check for cause of wear. Replace worn parts with correct components.
- Leakage: Check all components, verify tightness of fittings, and inspect hoses for wear while system is idle. Replace damaged hoses or fittings.
- Excessive loading (especially any features not originally installed by Valtir): Remove excessive load.

### 2. Operates Slowly or With Cavitation

- Oil viscosity too high or cold oil: Allow oil to warm up before operating or replace with lower viscosity oil as necessary.
- Air in system: Check for leaks and tighten as necessary. Cycle the system several times to relieve air from system.
- Oil leaks: Tighten fittings, replace seals or damaged lines.
- Worn components (valves, cylinder, etc.): Check for cause of wear. Replace worn parts with correct components.
- Restriction in lines or cylinder check valves: Remove load on the cylinder, clean lines or valves, and replace hoses if necessary.

### 3. Operates Too Fast

- Adjust flow controls



#### 4. Load Drops When Locked

- Leaking cylinder seals or fittings: Remove load on the cylinder, inspect for damaged hoses or fittings, tighten fittings or replace hoses if necessary.
- Faulty counterbalance valve: Remove load on the cylinder. Clean or replace the appropriate counterbalance valve components.

#### 5. Leaky Cylinder

- Seals worn or damaged: Replace the cylinder.
- Rod damaged: Replace the cylinder.

### Pressure Relief Valve

#### 1. Purpose

Limit the maximum pressure in the hydraulic system to a safe level.

#### 2. Adjusting Relief Valve

**Note:** In general, do not adjust the relief valve. It is set to the correct operating pressure at the factory.

A. Symptoms of incorrect pressure relief adjustment.

- 1) Relief pressure too low.
  - a. System will not fold and cylinder will not extend.



**Important:** Contact the Valtir Customer Service Department for all replacement parts or components.



**Warning:** Do not exceed pressure rating for hydraulic system components. The system pressure of the SS180<sup>®</sup> M is factory set to 2000 psi.

# Counterbalance Valve

## 1. Purpose

The counterbalance valve allows free flow of hydraulic oil into and out of the cylinder but blocks the flow when there is no truck hydraulic pump pressure. The counterbalance valve locks the system when the truck pump is not running.



**Caution:** When the system is stopped at an intermediate angle, there will be pressure on the oil in the hoses between the counterbalance valve and cylinder. This pressure is supporting the load of the folding bay. **ALWAYS** make sure the TMA is completely folded or unfolded before loosening a hose fitting or servicing any check valve. This will minimize the chance of injury from an uncontrolled falling load or spray of high-pressure oil. Never stand underneath the TMA when performing any service or component check.

## 2. Repairing Counterbalance Valve

### A. Symptoms

If the TMA exhibits a slow drifting of the folding bay when the truck hydraulic pump is not running, one of the following may be true:

- 1) The counterbalance valve has become blocked by foreign debris in the oil (hydraulic) line.
- 2) The piston ring seal inside the cylinder has been compromised.

### B. Repair procedure

#### 1) Blocked Cartridge

- a. Ensure the system is completely folded or unfolded.
- b. Remove the Cartridge from the valve body, being cautious of oil spray from residual pressure in the system.
- c. Clean the Cartridge using compressed air, making sure to direct the air away from anyone's face. Avoid breathing the oil mist that this process may create.
- d. Reinsert the Cartridge as they were before disassembly.

#### 2) Piston ring seal

- a. Refer to the following section on the Hydraulic Cylinder.



**Important:** If the counterbalance valve has failed in some other way, do not attempt to repair it. Replace it with a new valve by contacting Valtir Customer Service Department (p. 3).

# Hydraulic Cylinder



**Warning:** Never allow anyone underneath the moving portion of the SS180® M. Block out all loads and disconnect electrical contact prior to performing any service on hydraulic equipment.

## 1. Troubleshooting

If you suspect problems with the hydraulic cylinder on the TMA, you may need to remove the cylinder from the TMA for repair or replacement. The cylinder can only be removed when the TMA is completely folded. Double check all electrical contacts between the TMA and support vehicle have been disconnected prior to performing any work on the hydraulic system.

A cracked, bent, or leaky cylinder may need repair but will almost always be replaced to ensure reliable performance.

## 2. Cylinder Replacement

- A. Completely fold the TMA.
- B. Unplug all electrical connections between the TMA and the support vehicle.
- C. See Hydraulic Cylinder Assembly drawing on page 47. Loosen (but do not disconnect) the “Follower Link Pivot” and the “Push Link Pivot” where they are bolted to the “Weldment, Front Intermediate Frame” and the “Weldment, Rear Intermediate Frame”, respectively.
- D. At the top end of the cylinder rod, loosen the set screw and push out the short 1” diameter pin, making note of the alignment and location of all linkage components for later reassembly.
- E. Disconnect the hoses leading into the cylinder at two convenient locations and place temporary caps on hoses and cylinder ports to prevent spillage or contamination.
- F. At the bottom end of the Cylinder body, remove the Cotter Pin from the Clevis Pin and push out the long 1” diameter pin, making note of the alignment and location of all components for later reassembly.
- G. The cylinder should now be free. Reinstall a new cylinder in the reverse order of these removal steps, making sure to properly align and (where necessary) tighten all components. Use blue thread locker (medium strength) on all fasteners.

**Note:** See the section on Hydraulic System Priming (p. 32). You will likely need to prime the system if you are installing a new or “dry” cylinder.

## 3. Repairing Cylinder

Replace any faulty or damaged cylinder with a new cylinder.

## Hydraulic System Priming

SS180® M hydraulic system priming will only be necessary after changing the oil or if you have recently repaired a leak.

### Priming Process

Systems that have been disassembled for repair require priming for proper performance. The hydraulic system is said to be primed when all hoses and the cylinder are full of oil and the air has been expelled. Prime the system as follows:

- A. Detach the long hoses where they connect to the TMA cylinder. Note which hoses connect to the top and bottom of the cylinder.
- B. Jog the truck hydraulic system until clean oil flows from two of the hoses.
- C. Repeat this process for the other two hoses.
- D. Replace and retighten all four hoses.



**Caution:** Do not fold or unfold the TMA completely until it has been jogged a few times to work out any air in the system.

- E. Jog the system a few times by operating the truck hydraulic pump in one direction and then the other direction depending on the current position of the TMA.






**Warning:** Remove all rings, watches, jewelry, etc. prior to doing any electrical work!

### Electrical Shorts or Open Circuits

- A. Shorts occur when wires with power come in contact with a ground. A short will cause a fuse to blow or a wire to burn. Look for pinched or cut wires.
- B. An open circuit is simply a break which prohibits current flow. Look for pinched or cut wires.

# Troubleshooting Decision Trees and System Drawings

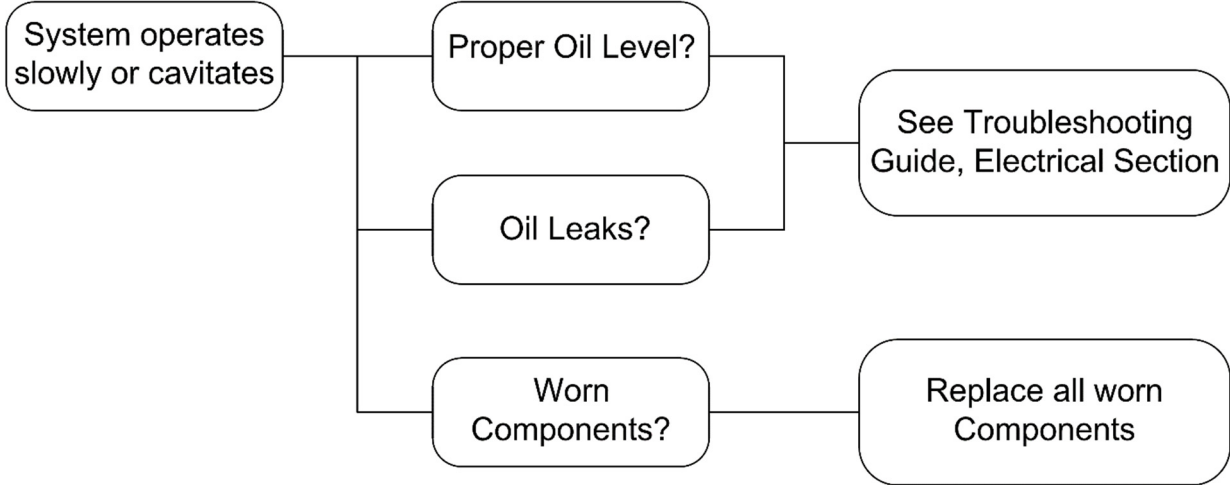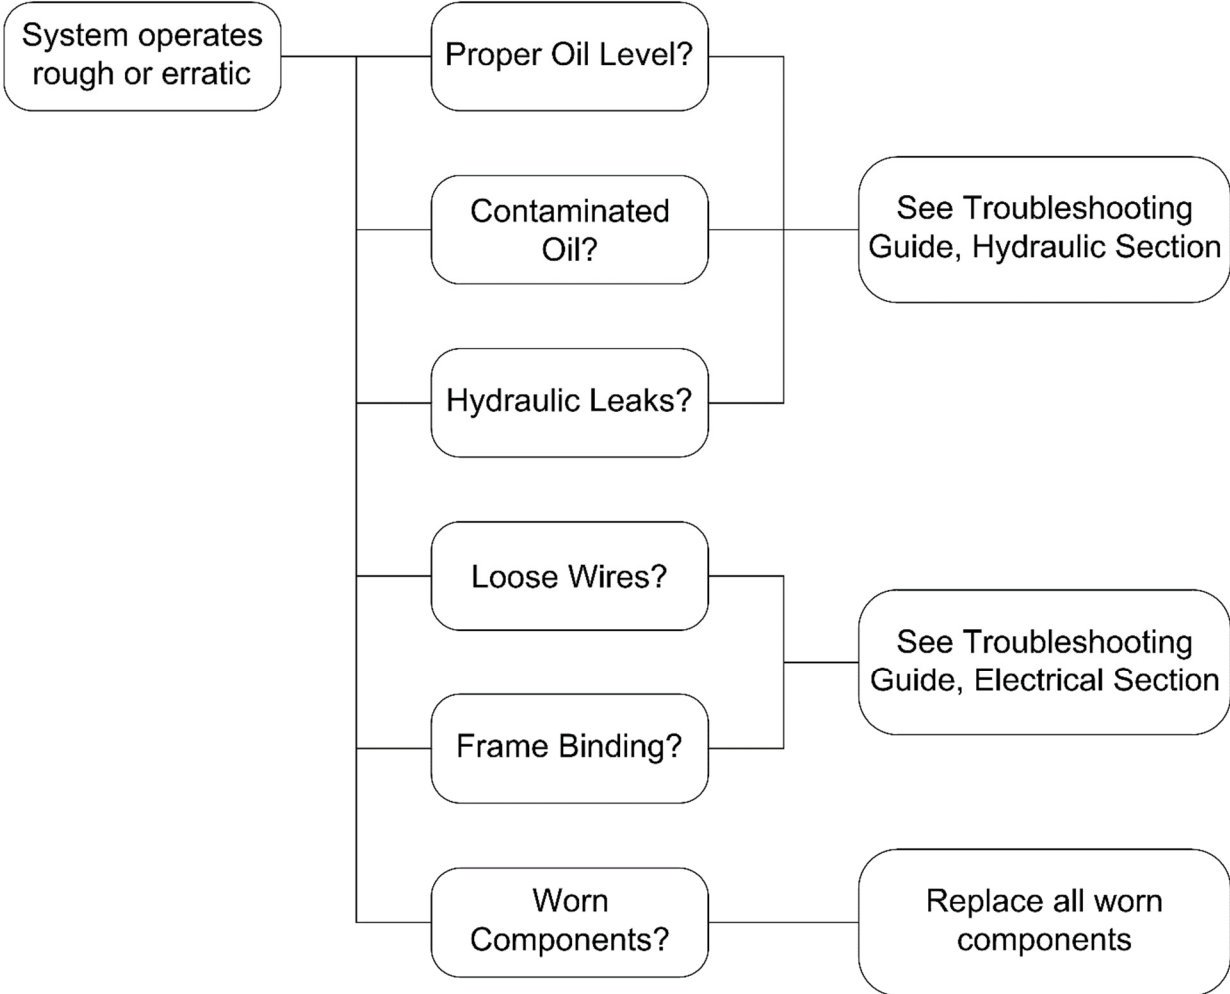

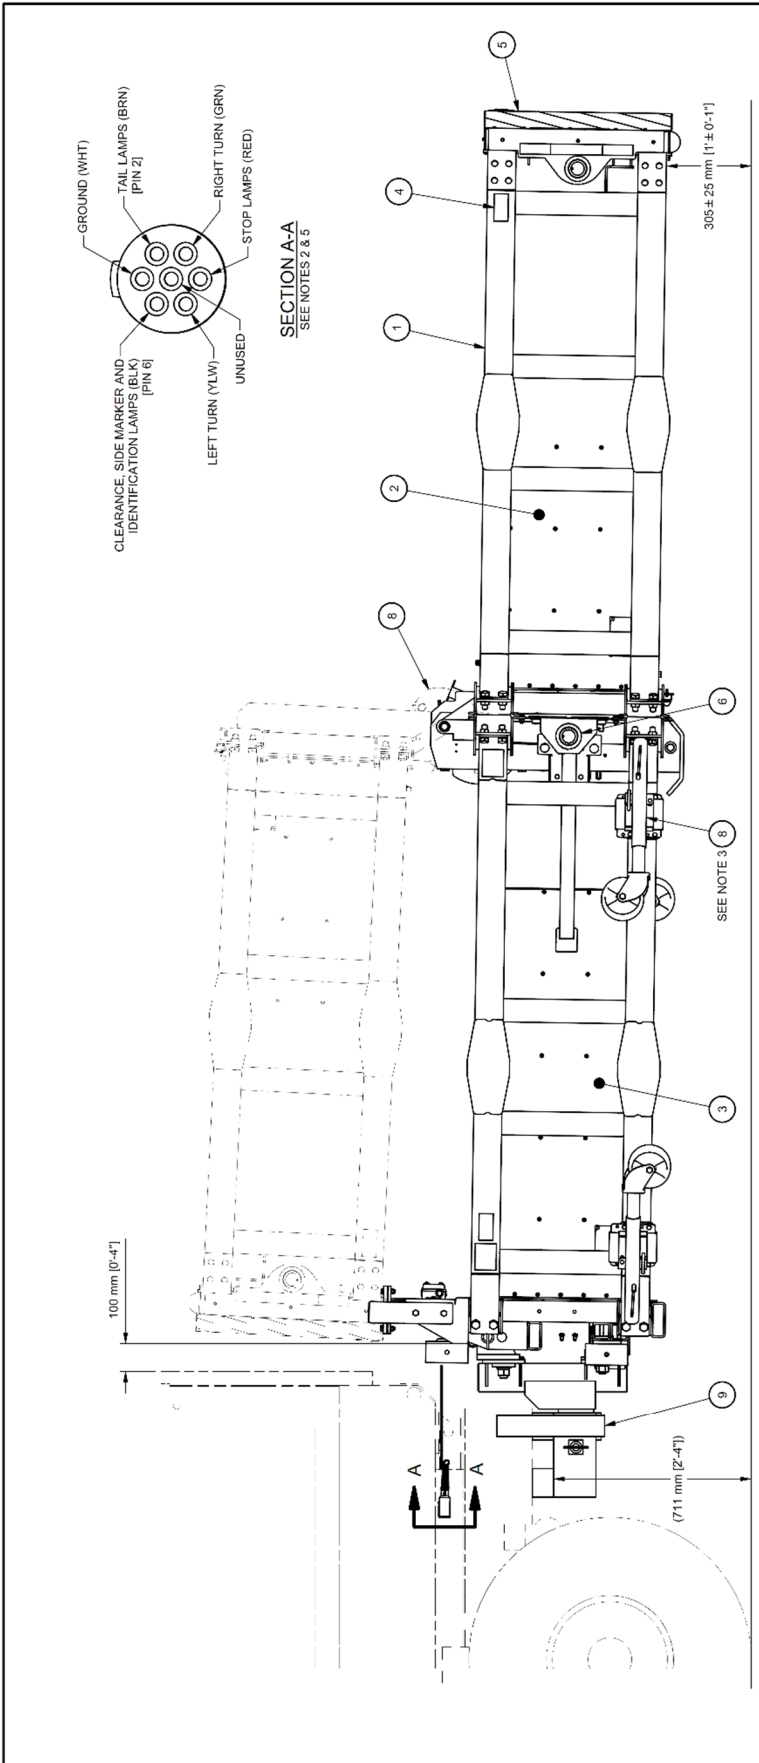

NOTES:  
 1. RECOMMENDED THAT THE SS180M TMA BE MOUNTED TO TRUCKS RATED BETWEEN 6100 kg (13,500 LBS) AND 11,300 kg (25,000 LBS).  
 2. LOCATE FEMALE CONNECTOR IN A CONVENIENT LOCATION ON THE TRUCK SO THAT LIFTING OR LOWERING THE TMA WILL NOT DAMAGE THE ELECTRICAL CABLE.  
 3. JACKS MUST BE REMOVED WHENEVER THE TMA IS OPERATIONAL.  
 4. SEE THE SAFE-STOP TMA MANUAL FOR DESIGN LIMITATIONS & INSTALLATION INSTRUCTIONS BEFORE ASSEMBLING AND INSTALLING A SYSTEM.  
 5. FOR SUPPORT VEHICLES WITH COMBINED TAIL AND CLEARANCE LIGHTS, CONNECT A JUMPER BETWEEN PINS 2 AND 6 ON THE BACK SIDE OF THE TMA PLUG CONNECTOR.

KEY			
①	FRAME	⑦	HYDRAULICS
②	CARTRIDGE A	⑧	MISC PARTS
③	CARTRIDGE B	⑨	UNDERRIDE ASSY
④	DECALS	⑩	DESIGN SPEED
⑤	IMPACT COVER	⑪	NOSE TYPE
⑥	LIGHTING	⑫	NO. OF UNITS

REFERENCES		
SERIAL NO.	N/A	FRAME ASSY
SALES ORDER		CARTRIDGE A ASSY
EH PROJECT		CARTRIDGE B ASSY
DESIGN SPEED		LIGHTING ASSY
NOSE TYPE	N/A	MISC PART ASSY
NO. OF UNITS		HYDRAULICS ASSY
		DECAL ASSY
		IMPACT COVER ASSY
		ARROWBOARD ASSY
		UNDERRIDE ASSY
		UNDERRIDE ASSY

DATE	2/12/2020	REVISED BY	D. Hayes, Jr	REVISED NO.	SS180M
	2/13/2020		R. Broughton		SS180M-MO (dw)
ISSUED FOR		DATE	BY	REVISED NO.	DESCRIPTION
DO NOT SCALE DRAWING					SAFE-STOP TMA <sup>®</sup> SS180 <sup>®</sup> M (MODOT W/O PUMP)

# SS180<sup>®</sup>M MO

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	625185	FRAME SUPPORT	1
2	625187	FRAME ARM SUPPORT L	1
3	625188	FRAME ARM SUPPORT R	1
4	625184	FRAME MID SUPPORT	1
5	625183	FRAME MID IMPACT	1
6	625186	FRAME ARM IMPACT	2
7	625182	FRAME IMPACT	2
8	625180	FLT 1/2X3X11.15/16 HOL.BNT	2
9	113554	BOLT.HX.3/4X2.65.P	56
10	115856	NUT.HX.3/4.P	56
11	118090	WASHER.LOCK.3/4.P	24
12	113460	BOLT.HX.1/2X1.1/2.G5.P	2
13	115942	NUT.HX.1/2.P.G6	2
14	626588	PIN.RETAINING.1X6.HD	2
15	626589	PIN.RETAINING.1/4X9.1/2.HD	1
16	119337	RING.RETAINING.1.HD	4
17	119324	RING.RETAINING.1/4.HD	2
18	115067	GREASE FITTING.1/4-28.STR	3
19	116504	PRIMER.SEALANT.THREAD	AIR
20	119369	ADHESIVE.LOCTITE.BLUE	AIR

\* TO BE APPLIED TO ALL BOLTS

DATE: 7/26/2019  
 DRAWN BY: M. Hughes  
 CHECKED BY: M. Hughes  
 TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED.  
 DIMENSIONS ACCORDING TO ASME Y14.5M AND Y14.5MCS UNLESS OTHERWISE SPECIFIED.  
 DO NOT SCALE DRAWING


EST UNFINISHED WT.: 1640 lbs

FRAME ASSY.TMA.SS180M


1 of 3

# Support Frame Assembly



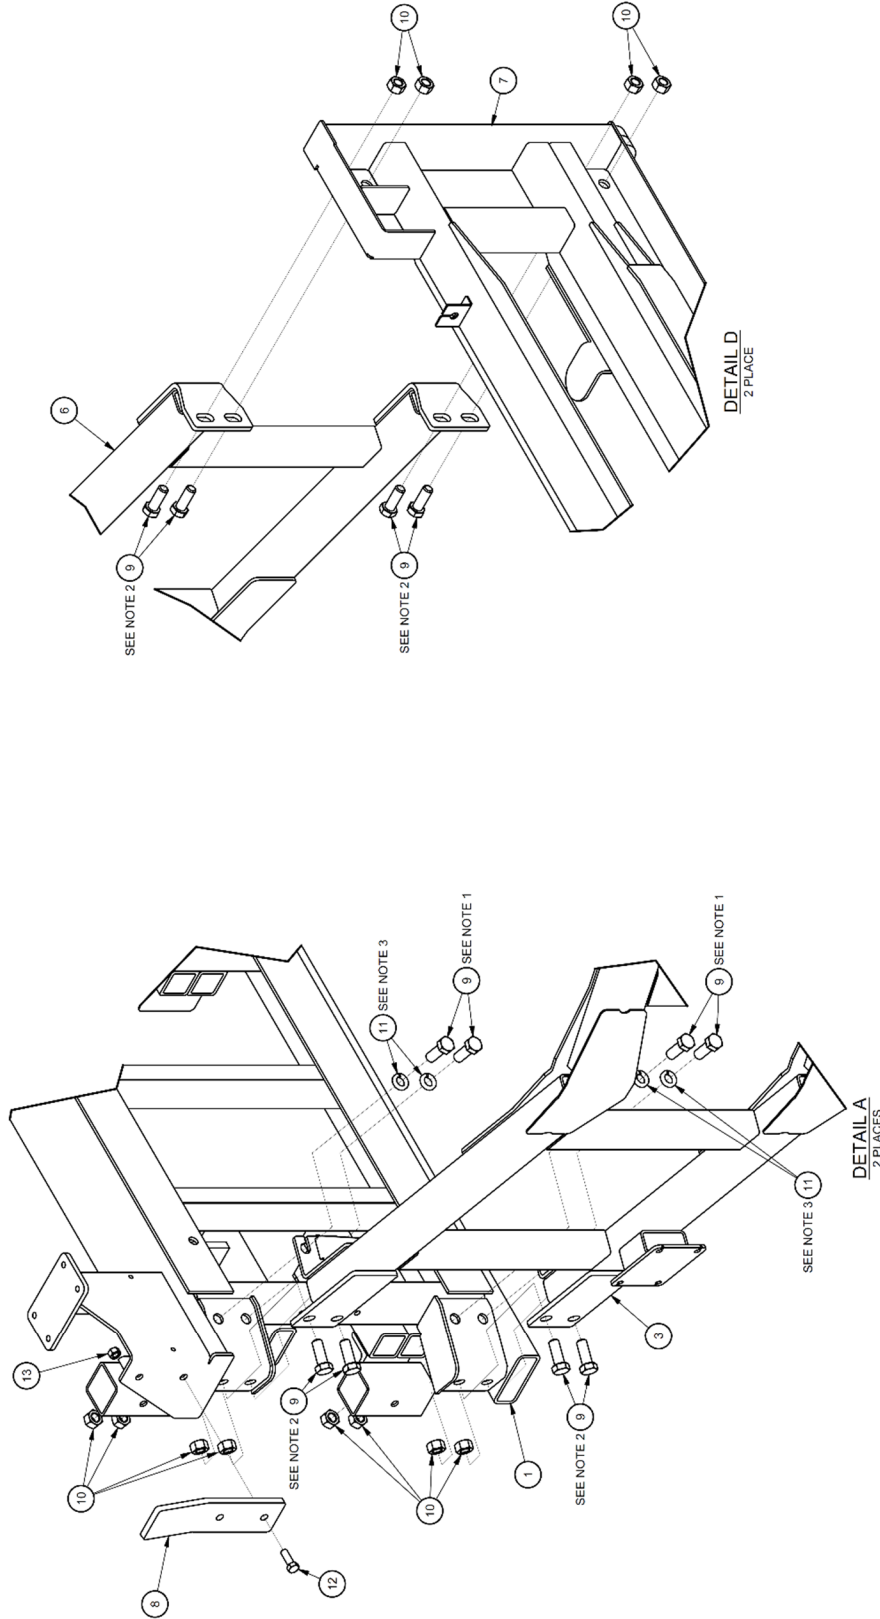

DRAWN BY: SEE PARTS LIST CHECKED BY: N/A EST UNFINISHED WT.: 1640 lbs		DATE: 7/26/2019 BY: M. Bluetner DIMENSIONS ACCORDING TO ASSEY 1118 AND TMR 52-202 UNLESS OTHERWISE SPECIFIED		TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING		PART NAME: FRAME ASSY, TMA, SS180M PART NUMBER: 626592 REV: - SHEET: 2 of 3	
NOTES: 1. INTERIOR BOLTS WITH LOCK WASHERS (24X) ARE TO BE TORQUED BETWEEN 55-60 FT.-LBS. 2. BOLTS WITHOUT LOCK WASHERS (32X) ARE TO BE TORQUED BETWEEN 120-130 FT.-LBS. 3. LOCK WASHERS ARE TO BE INSTALLED ON BOLT SIDE.							

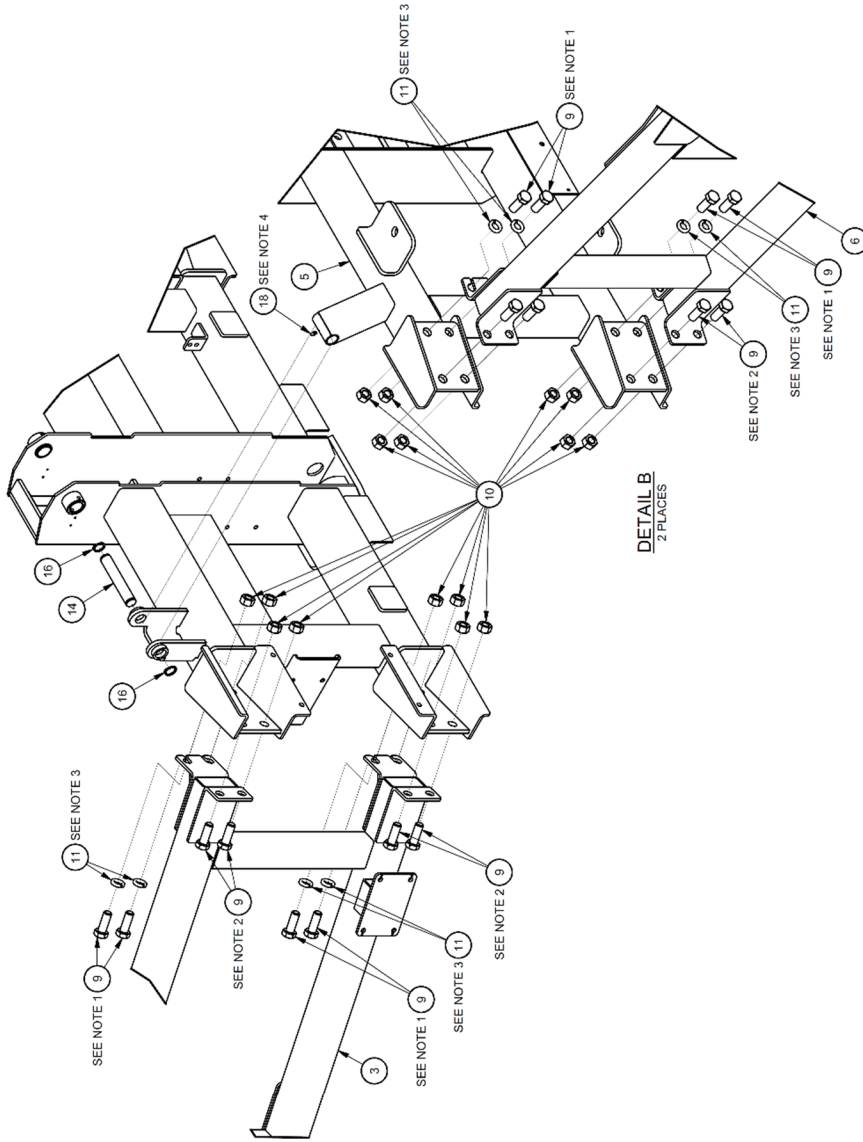


DETAIL B  
2 PLACES

- NOTES:
1. INTERIOR BOLTS WITH LOCK WASHERS (24X) ARE TO BE TORQUED BETWEEN 55-60 FT-LBS.
  2. BOLTS WITHOUT LOCK WASHERS (32X) ARE TO BE TORQUED BETWEEN 120-130 FT-LBS.
  3. LOCK WASHERS ARE TO BE INSTALLED ON BOLT SIDE.
  4. AFTER ASSEMBLY FILL AXLE SLEEVES WITH STANDARD BEARING GREASE UNTIL GREASE IS VISIBLE AT ENDS OF SLEEVE.

PREPARED BY: SEE PARTS LIST	DESIGNED BY: D. Hayes Jr. M. Buehler	DATE: 7/26/2019 8/1/2019	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING	PART NO. 626592	SHEET NO. 3 of 3
NAME: N/A	DIMENSIONS ACCORDING TO ASME Y14.5M AND Y14.5-001 UNLESS OTHERWISE SPECIFIED	EST UNFINISHED WT.: 1640 lbs	FRAME ASSY, TMA, SS180M	DRAWING NO. 626592	SHEET NO. 3 of 3

626605

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	626604	CARTRIDGE, 050X4 BAY	1
2	119353	DECAL, TRINITY LOGO	1
3	119354	DECAL, CARTRIDGE, A MASH	1
4	119357	DECAL, TRINITY REPLACEMENT PARTS	2
5	116364	PLATE, ID, PN, SN, DATE	1
6	114459	DECAL, CAUTION, STAY CLEAR	1
7	116752	RIVET, ALUM, 3/16X1/4, LF	4
8	119356	DECAL, TORQUE BOLTS, 65 FT-LBS	1
9	113463	BOLT, THX, 1/2X1 1/4, GS, P	4
10	118008	WASHER, FLAT, 1/2 ID X 1 3/8 OD, P	4
11	118840	PRIMER, LOCTITE, QKSTYX 7088	AIR
12	119369	ADHESIVE, LOCTITE, BLUE	AIR

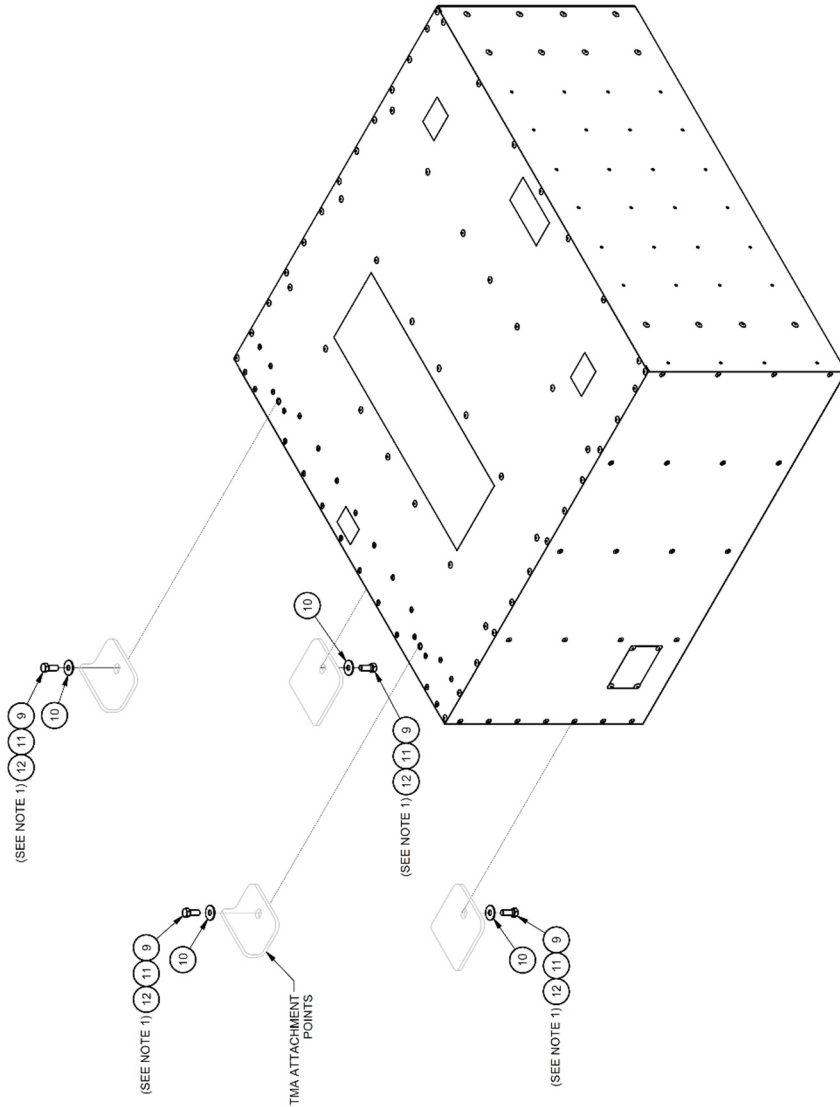


DESIGNED BY D. Hayes Jr	DATE 7/26/2019	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING.
DRAWN BY M. Buehler	DATE 8/1/2019	
UNLESS OTHERWISE NOTED, ALL DIMENSIONS ARE IN INCHES. DIMENSIONS ACCORDING TO ASME Y14.5M AND Y14.5M-2009 UNLESS OTHERWISE SPECIFIED.		
PART NO. N/A		
EST UNFINISHED WT. 128 lbs		
PARTIAL NO. 626605		PAGE 1 of 2

Cartridge A

NOTES:  
1. TORQUE BOLTS TO 65 FT-LBS ± 5 FT-LBS.

626611

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	626610	CARTRIDGE,B.MASH PRE	1
2	119353	DECAL TRINITY LOGO	1
3	119357	DECAL TRINITY REPLACEMENT PARTS	2
4	119355	DECAL CARTRIDGE B.MASH	1
5	116364	PLATE,ID.PN,SN,DATE	1
6	116752	RIVET,ALUM,3/16X1/4,LF	4
7	114642	DECAL TORQUE 90 FT.LBS	1
8	654802	STRIPING ASSY,CART,B,TMA 9180	1
9	118008	WASHER,FLAT,1/2ID X 1 3/8OD,IP	5
10	118003	WASHER,LOCK,1/2,P	5
11	115942	NUT,HX,1/2,P,G8	5

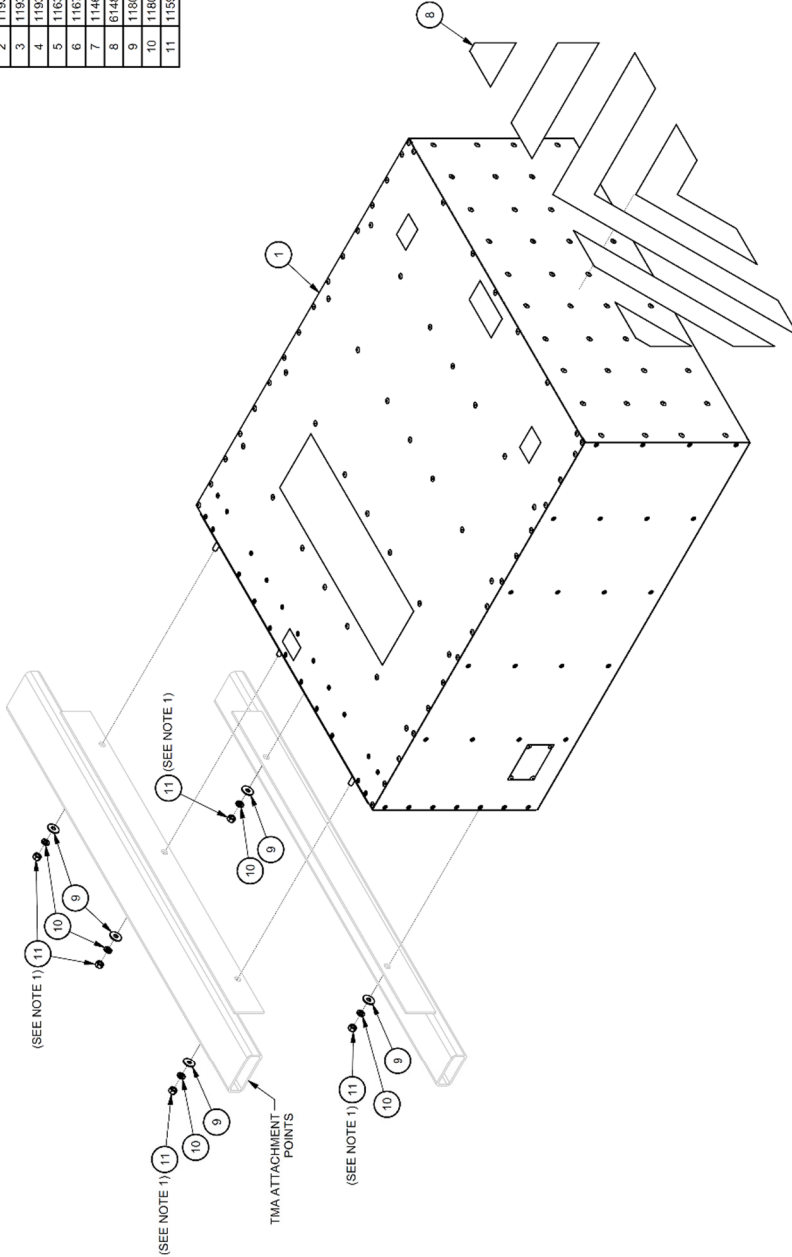




SEE PARTS LIST		DATE	7/26/2019	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING.
DRAWN BY D. Hayes Jr		DATE	8/1/2019	
CHECKED BY M. Swisher		DIMENSIONS ACCORDING TO ASME Y14.5M AND Y14.5-03 UNLESS OTHERWISE SPECIFIED.		
PART NAME N/A				
EST UNFINISHED WT:		190 lbs		
		PART NO.		626611
		REV.		1 of 2

NOTES:  
1. TORQUE NUTS TO 90 FT-LBS ± 5 FT-LBS.


# Cartridge B

625143 – 1 of 3

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	119316	HARNES LIGHT, 12V LED, SS180M	1
2	626616	BRACKET LIGHT, MIDFRAME	2
3	113698	BOLT, HX, 3/8X1.65, P	8
4	118093	WASHER LOCK, 3/8, P	8
5	115961	NUT, HX, 3/8, 05, P	8
6	114106	CLAMP LOOP, 7/16 S	4
7	116884	SCREW, HWH, #12X1, SELF TAPPING, P	4
9	119362	LEVER LIMIT SWITCH ADJUSTABLE	1
10	118018	WASHER FLAT, 1/4X5/8, P	4
11	626636	BRACKET LIMIT SWITCH	1
12	113509	BOLT, HX, 1/4X1.65, P	2
13	115947	NUT, HX, 1/4, 05, P	2
14	118086	WASHER LOCK, 1/4, P	2
15	116899	SCREW SOCKET, HD, #10-32X3/4, S	6
16	115911	NUT, HX, #10-32, S	4
17	119365	TI, NYLON, 3/16X1.18	24
18	626636	SWITCH ASSY, ROTARY, LIMIT	1

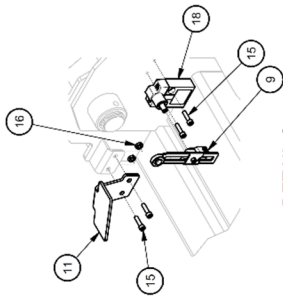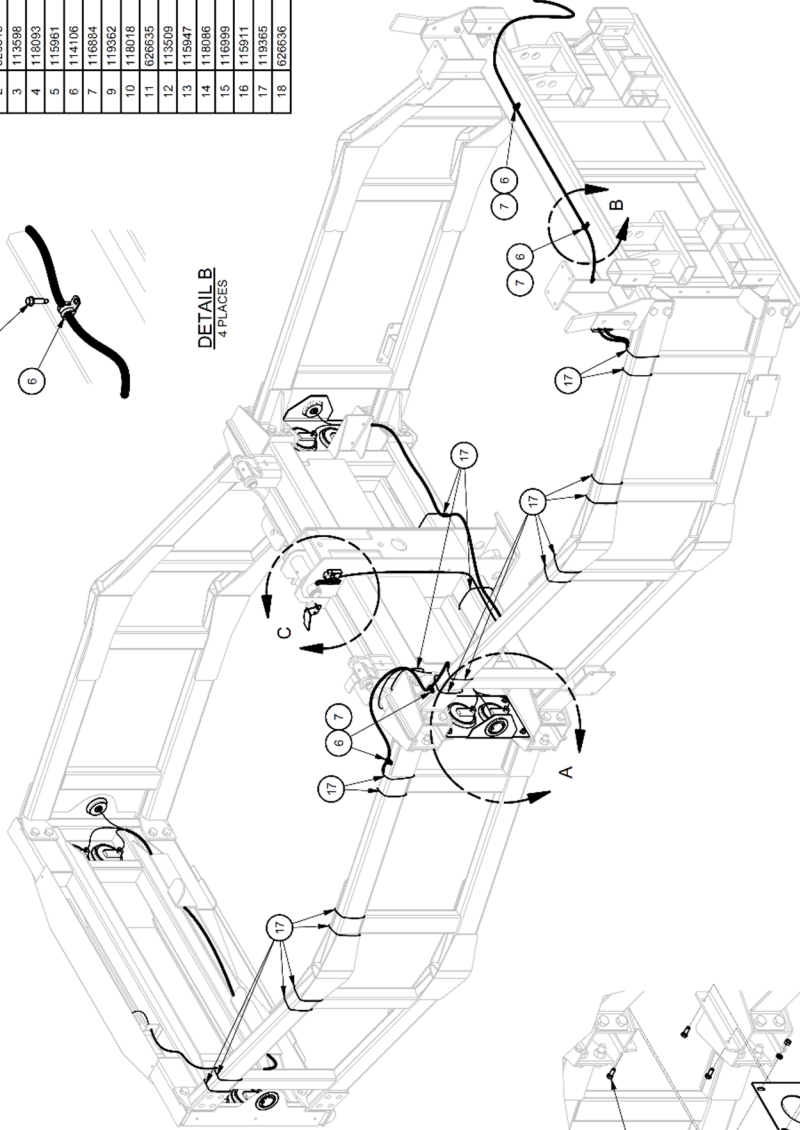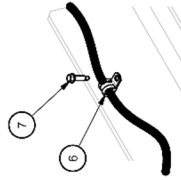


DETAIL C

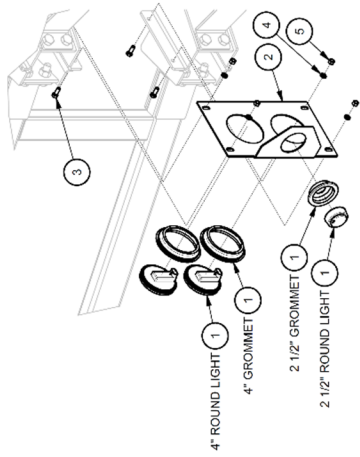

DETAIL A  
2 PLACES


EST. UNFINISHED WT.: 41.2 lbs EST. FINISHED WT.: 625143	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING	DATE: 7/26/2019 DRAWN BY: M. Bligher CHECKED BY: M. Bligher 3. MEASURE ACCORDING TO ASSEY, V.A. AND TYP. REF. 200. UNLESS OTHERWISE SPECIFIED.	LIGHTING ASSY, 12VDC, LED, TRUCK-LITE
--	--	--	---------------------------------------

LED Lighting Assembly

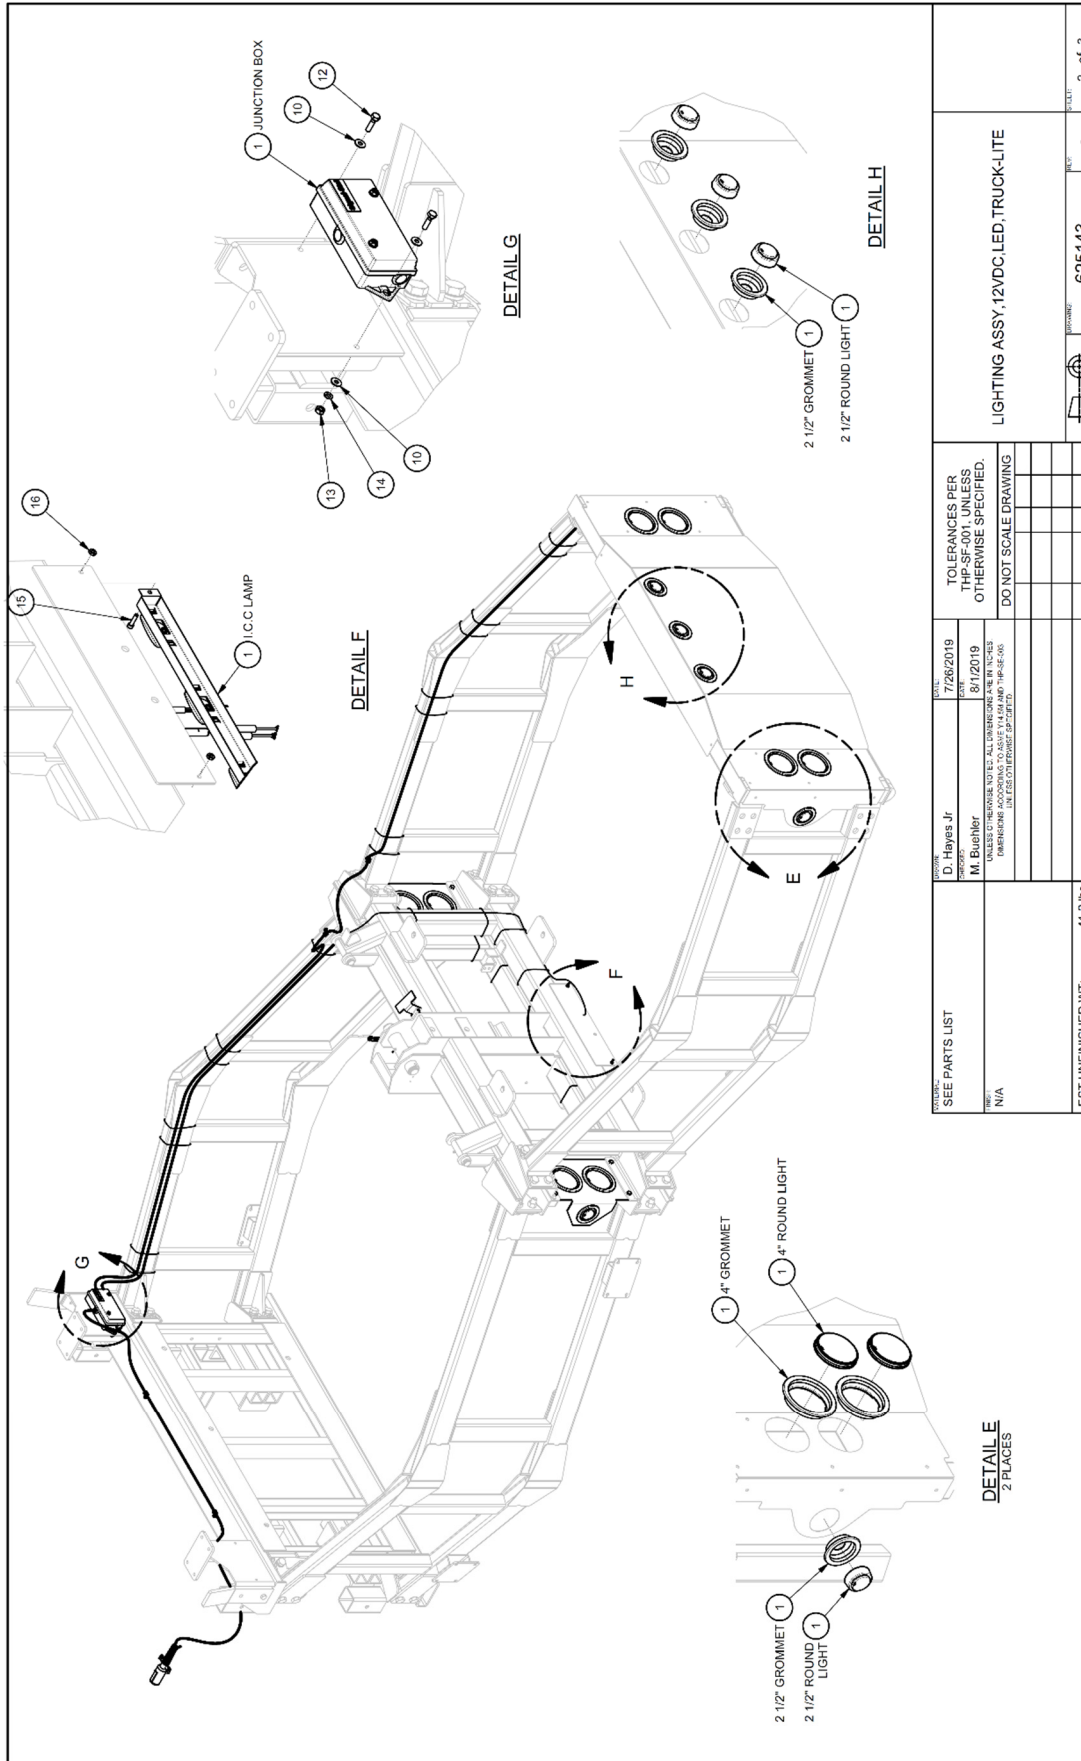

SEE PARTS LIST N/A	DESIGNER: D. Hayes Jr.	DATE: 7/26/2019	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING	PART NO: 625143	SHEET: 2 of 3
	DRAWN BY: M. Eubank	DATE: 8/1/2019			
NOTES: 1. SELECT DIMENSIONS FOR ALL DIMENSIONS AND TOLERANCES DIMENSIONS ACCORDING TO ASSEY V.14.504 AND THP-SF-001 UNLESS OTHERWISE SPECIFIED					
EST UNFINISHED WT.: 41.2 lbs					

625143 - 3 of 3

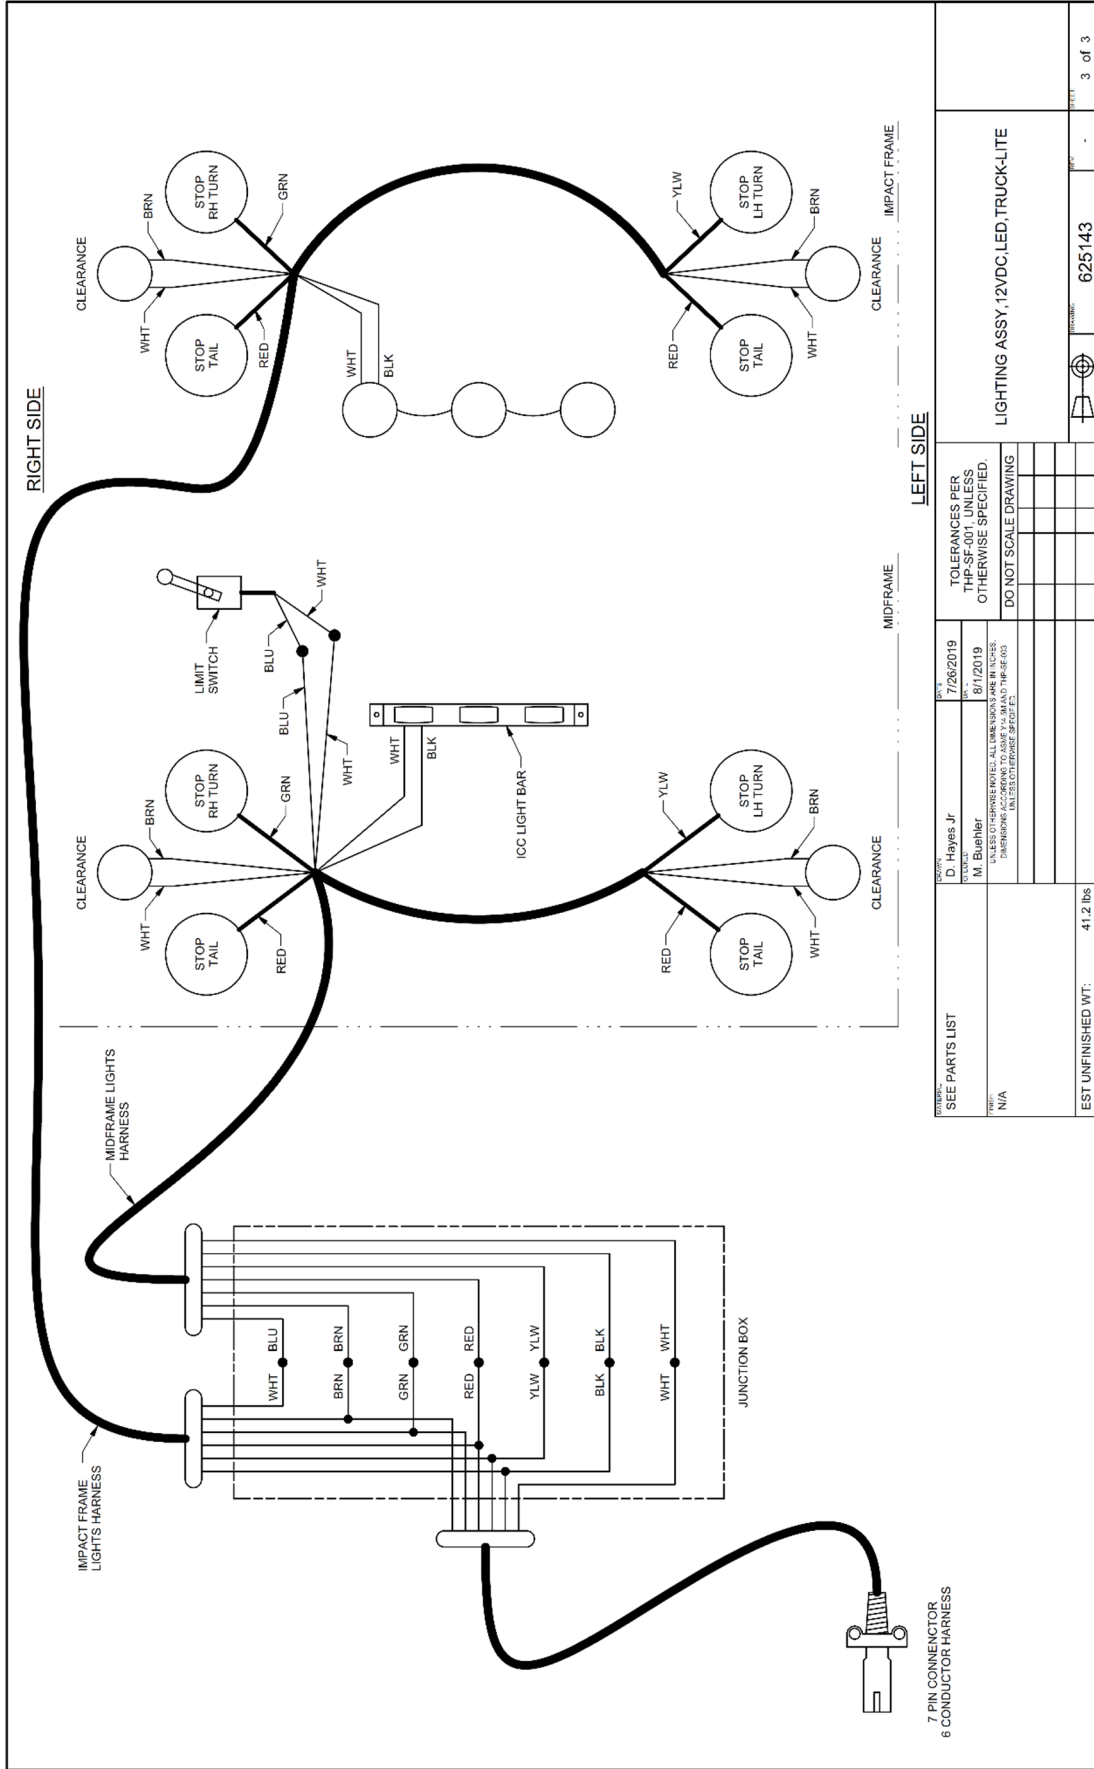


<p>DESIGNER: D. Hayes Jr          DATE: 7/26/2019</p>	<p>REVISION: 1          DATE: 8/1/2019</p>	<p>TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED.</p>	<p>625143</p>
<p>DESIGNER: M. Bluefluer          DATE: 8/1/2019</p>	<p>REVISION: 2          DATE: 8/1/2019</p>	<p>DO NOT SCALE DRAWING</p>	<p>3 of 3</p>
<p>DESCRIPTION: SEE PARTS LIST</p>	<p>PROJECT: LIGHTING ASSY, 12VDC, LED, TRUCK-LITE</p>	<p>EST UNFINISHED WT.: 41.2 lbs</p>	<p>3 of 3</p>
<p>DATE: N/A</p>	<p>DESCRIPTION: LIGHTING ASSY, 12VDC, LED, TRUCK-LITE</p>	<p>EST UNFINISHED WT.: 41.2 lbs</p>	<p>3 of 3</p>



626628

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	626623	CARTRIDGE GUIDE	2
2	113598	BOLT, HX, 3/8X1.65, P	24
3	118093	WASHER, LOCK, 3/8, P	16
4	115861	NUT, HX, 3/8, G5, P	32
5	626627	RUBBER PAD, 1/2X4X6 3/4, HOL	2
6	113594	BOLT, HX, 3/8X1.34, G5, P	8
7	118030	WASHER, FLAT, 3/8, ID X 1.31, 16	16
8	113492	BOLT, HX, 1/2X6, G5, P	4
9	118083	WASHER, LOCK, 1/2, P	4
10	115841	NUT, HX, 1/2, P	4
11	118458	BUMPER, PU, 3.18X5X3 1/2H, 2, HOL	2
12	614493	SPACER, 1/2X3X4 1/2, W/HOLES	2
13	118744	JACK, SWIVEL, 12, SIDE WIND, 1500LB	4
14	625142	WASHER, 1/8X4X3/4X4	4
15	626638	SHIM, 1/8X4X4X6 3/4, HOL	2

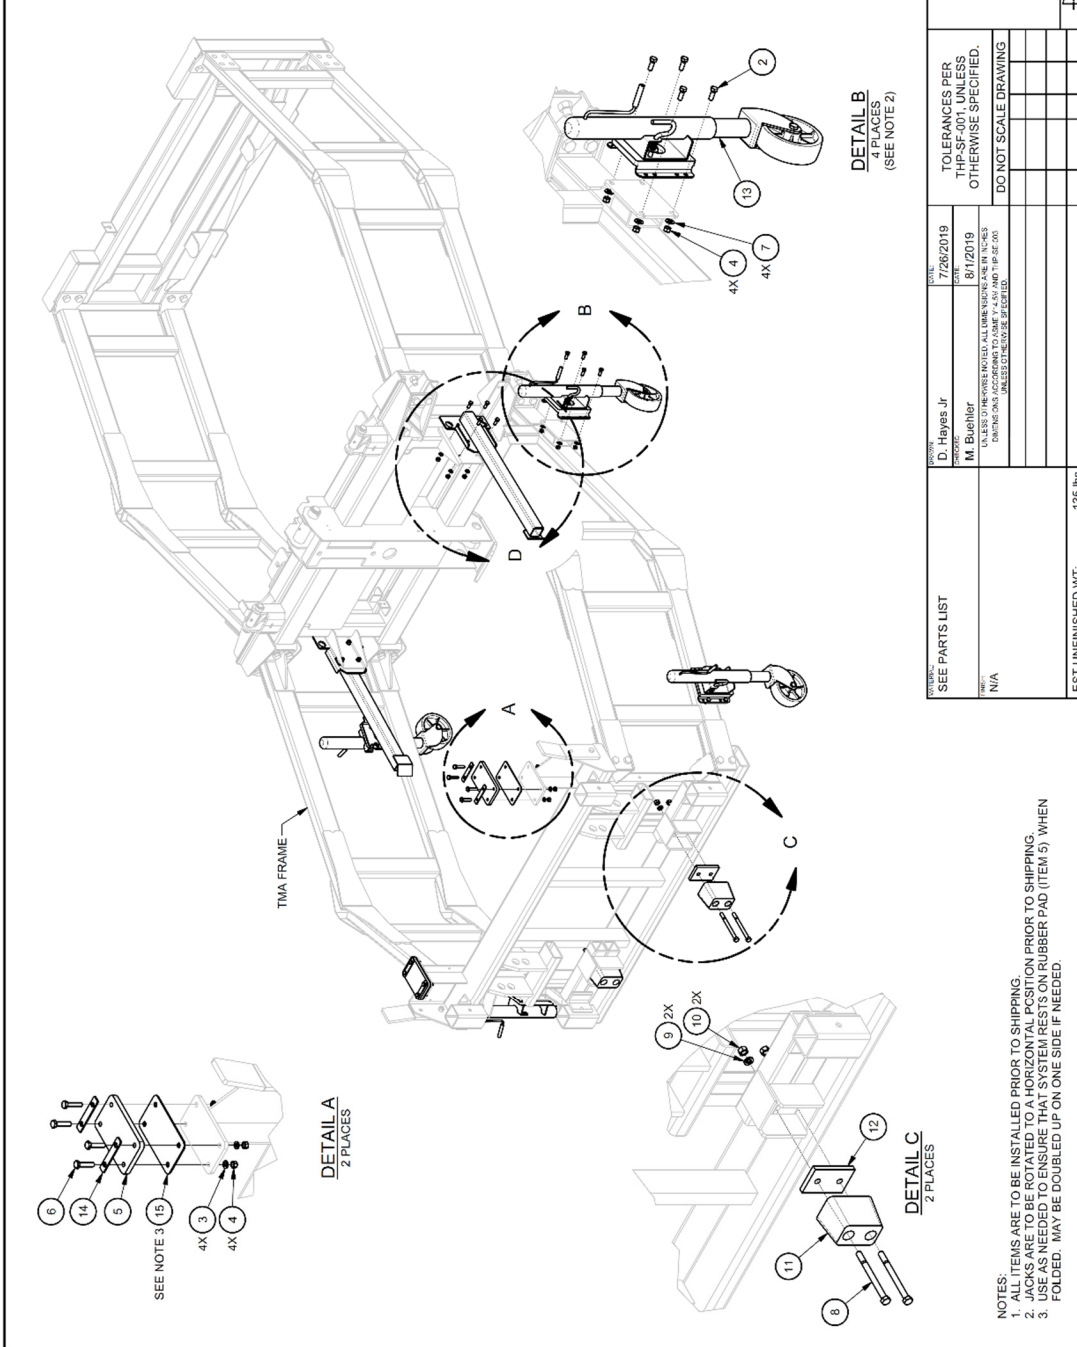

- NOTES:
1. ALL ITEMS ARE TO BE INSTALLED PRIOR TO SHIPPING.
  2. JACKS ARE TO BE ROTATED TO A HORIZONTAL POSITION PRIOR TO SHIPPING.
  3. USE AS NEEDED TO ENSURE THAT SYSTEM RESTS ON RUBBER PAD (ITEM 5) WHEN FOLDED. MAY BE DOUBLED UP ON ONE SIDE IF NEEDED.

DATE:	7/26/2019
BY:	M. Eubler
DESIGNED BY:	D. Hayes Jr.
DATE:	8/1/2019
SCALE:	1:1
UNLESS OTHERWISE NOTED, ALL DIMENSIONS ARE IN INCHES.	
DIMENSIONS ACCORDING TO ASME Y14.5M AND Y14.5-2003.	
UNLESS OTHERWISE SPECIFIED:	
TOLERANCES PER	THP-SF-001, UNLESS
OTHERWISE SPECIFIED.	
DO NOT SCALE DRAWING.	
EST UNFINISHED WT.	135 lbs

MISC PART ASSY, SS180M	REV:	1 of 1
626628		


### Miscellaneous Part Assembly

626742 - 1 of 3


PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	625152	HYDRAULIC CYLINDER ASSY, SS180M	1
2	117927	VALVE, HYDRAULIC, COUNTER BALANCE	1
3	114018	CAP, HYDRAULIC, COUNTER BALANCE VALVE	2
4	114780	ELBOW, #4 M, JIC, X66 M, ORB, P	2
5	114346	COUPLING, #4 MORB X #4 M, JIC, P	2
6	119329	COUPLING, #6 MORB X #4 M, JIC	2
7	119331	HOSE ASSY, HYDRAULIC, #4 F ENDS, 20	2
8	119330	HOSE ASSY, HYDRAULIC, #4 F ENDS, 130	2
9	119322	BOLT, HX, 5/16X2, G5	2
10	119323	BOLT, HX, 3/4X1, G5	4
11	113622	BOLT, HX, 3/8X3, G5, P	2
12	118045	WASHER, FLAT, 5/16 X 11/16, P	2
13	118037	WASHER, FLAT, 3/8X1, P	2
14	115968	NUT, HX, 5/16, P	2
15	115961	NUT, HX, 3/8, G5, P	2
16	626738	HYDRAULIC PREASSY, TRUCK SUPPLIED	1
17	626741	HARNESS SWITCH, LIMIT, TRUCK PWR	1
18	113460	BOLT, HX, 1/2X1 1/2, G5, P	2
19	115942	NUT, HX, 1/2, P, G8	2
20	119365	TIE, NYLON, 3/16X18	2
21	119369	ADHESIVE, LOCTITE, BLUE	AK

Hydraulic Control Assembly

626742 - 2 of 3

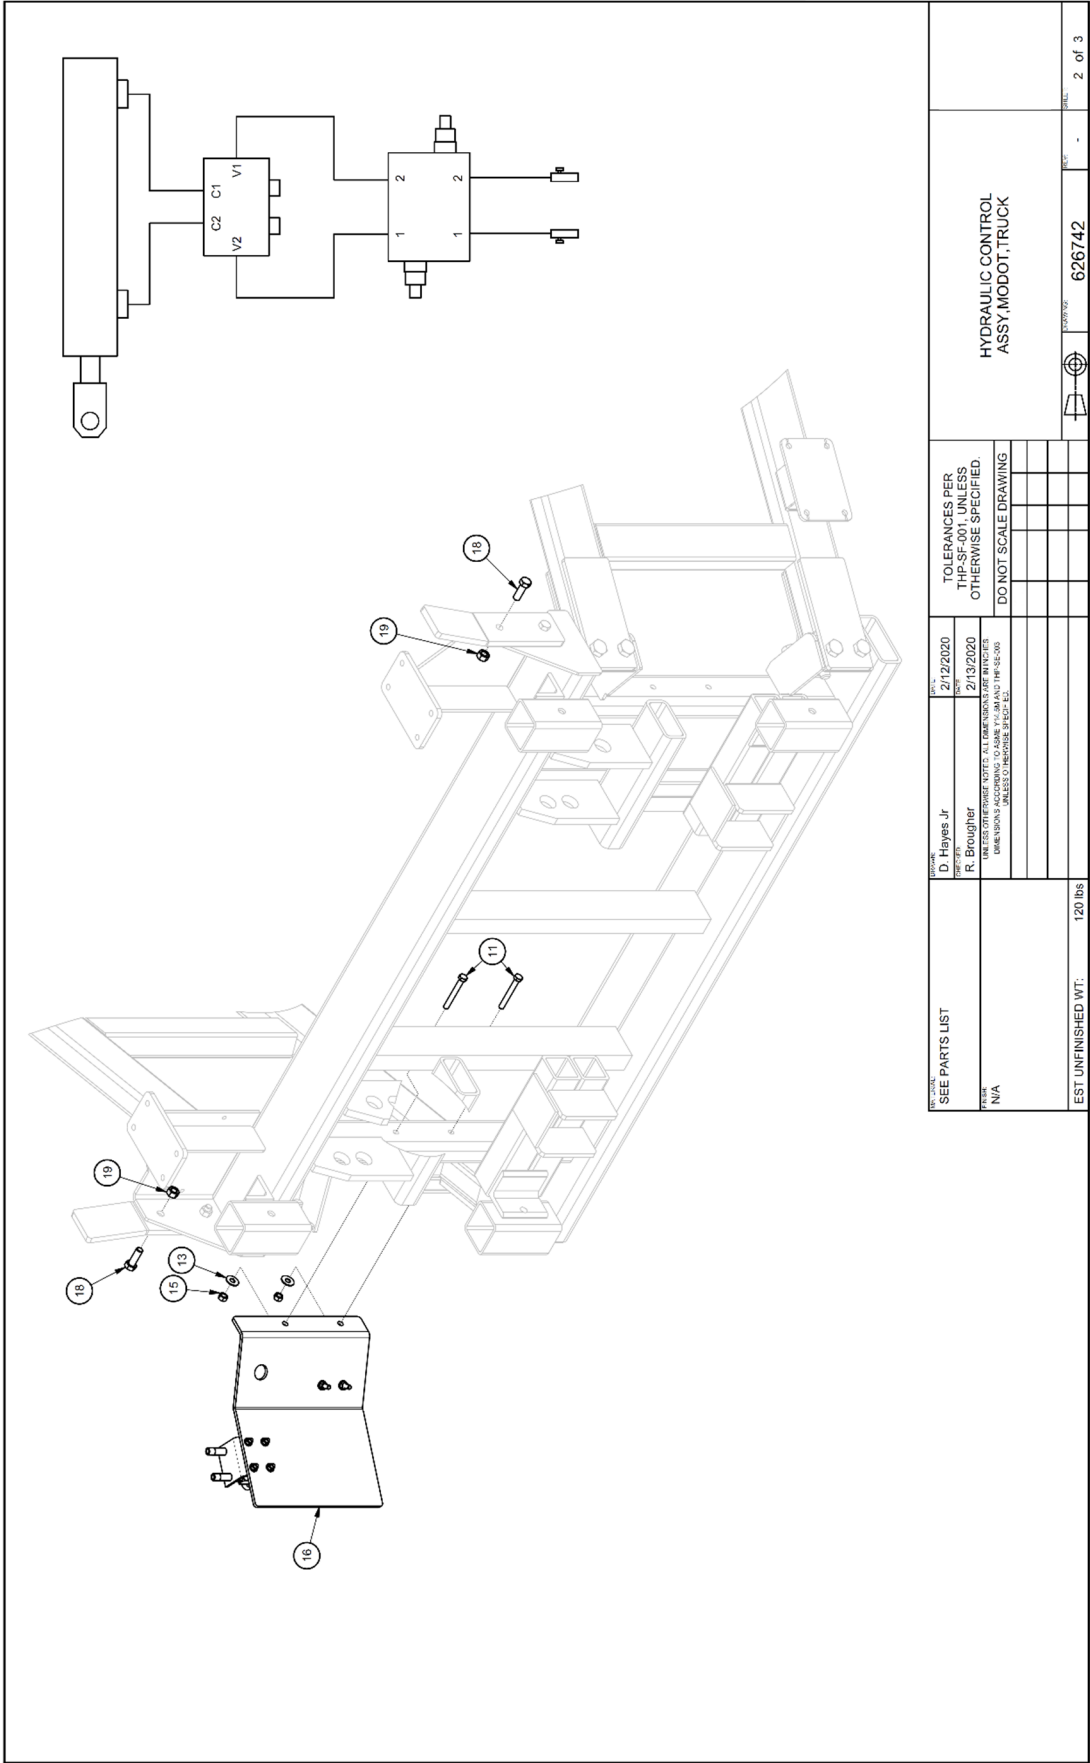

626742 - 3 of 3

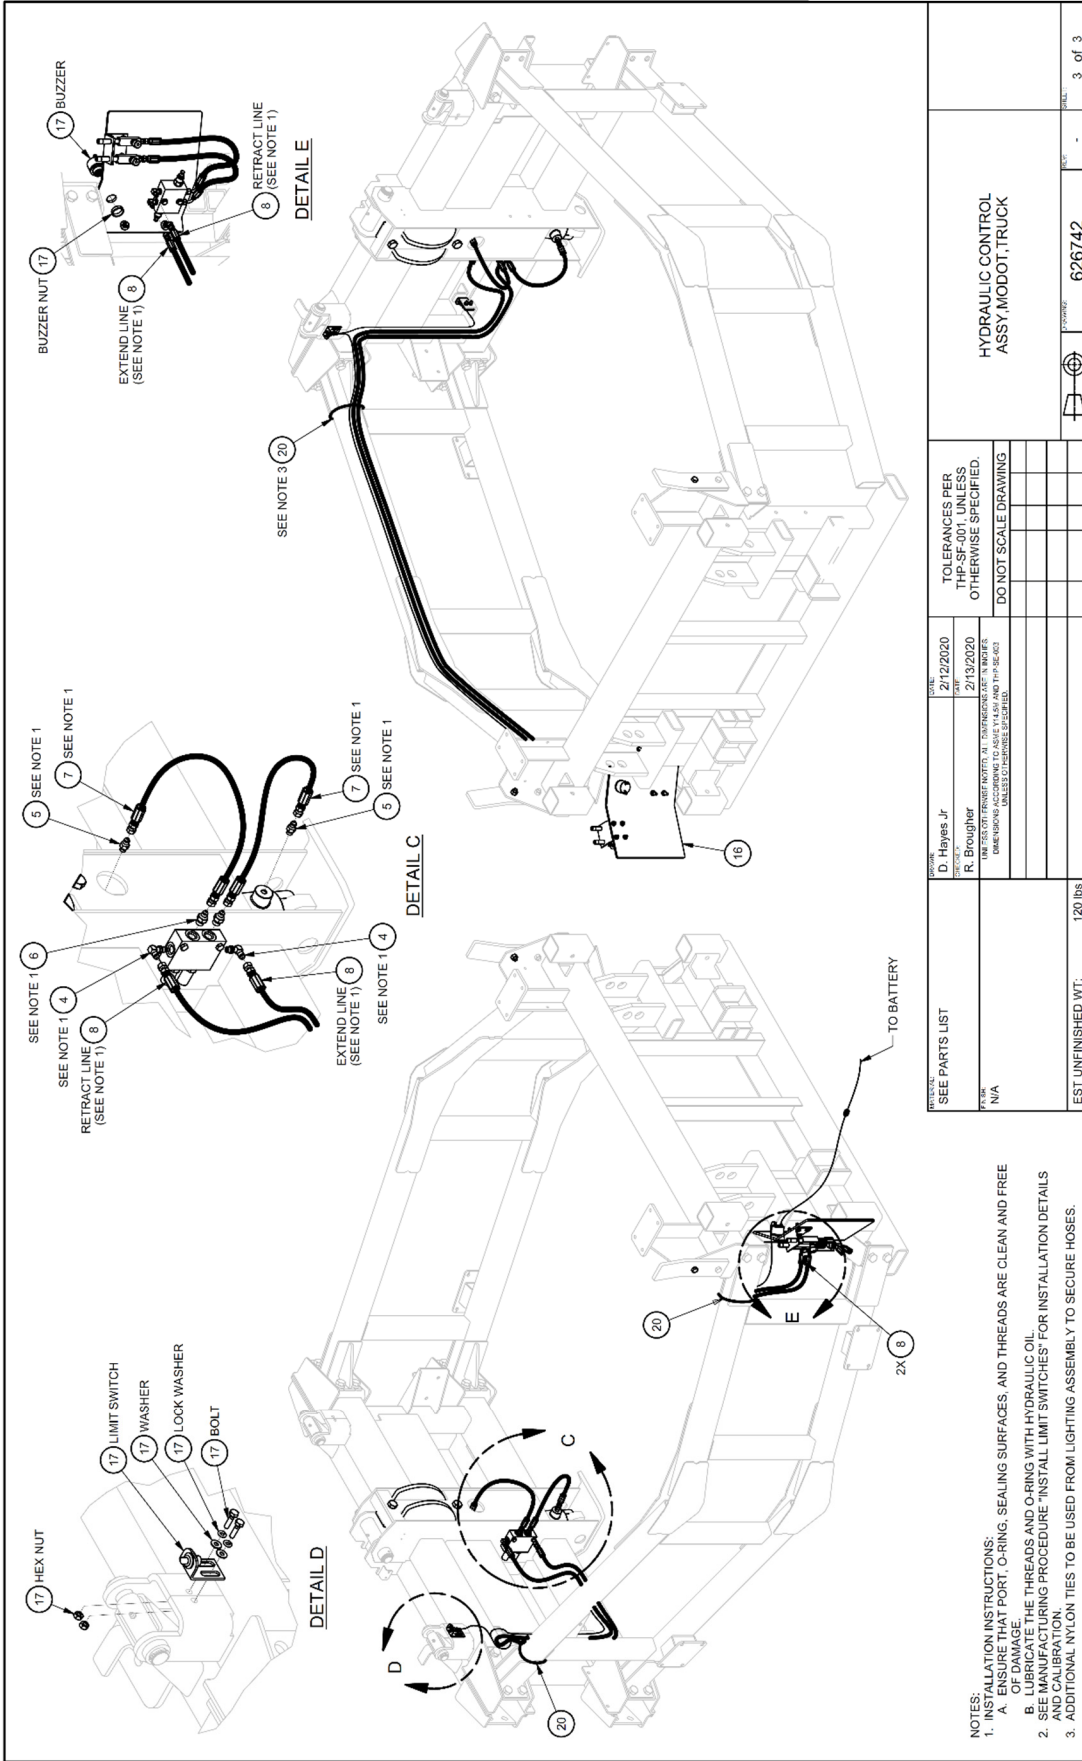

- NOTES:  
 1. INSTALLATION INSTRUCTIONS:  
 A. ENSURE THAT PORT, O-RING, SEALING SURFACES, AND THREADS ARE CLEAN AND FREE OF DAMAGE.  
 B. LUBRICATE THE THREADS AND O-RING WITH HYDRAULIC OIL.  
 2. SEE MANUFACTURING PROCEDURE "INSTALL LIMIT SWITCHES" FOR INSTALLATION DETAILS AND CALIBRATION.  
 3. ADDITIONAL NYLON TIES TO BE USED FROM LIGHTING ASSEMBLY TO SECURE HOSES.

625152


PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	119942	CYLINDER, 3 1/4 B. 12 1/4 STRK	1
2	625145	HYDRAULIC ARM FOLLOWER LINK	2
3	625150	FLT 1 1/2 X 3/8 W/HOLES	1
4	625151	BAR 2 5/2 X 1/2 5 W/HOLES	1
5	625149	PUSH LINK, SS 180M	2
6	119940	SHIM 0.090 X 1 X 1.5	2
7	625146	RETAINING PIN, 1 X 4 1/4 HD	3
8	119937	RING, RETAINING, 1 HD	6
9	115067	GREASE FITTING, 1/4-28, STR	3

SEE PARTS LIST	DATE: 7/26/2019	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED.
DESIGNED BY: D. Hayes Jr	DATE: 8/12/2019	DO NOT SCALE DRAWING
DRAWN BY: S. Thompson	DATE: 8/12/2019	
CHECKED BY: S. Thompson	DATE: 8/12/2019	
APPROVED BY: S. Thompson	DATE: 8/12/2019	
DATE: 8/12/2019		
EST UNFINISHED WT.: 89.9 lbs		

# Hydraulic Cylinder Assembly

626738

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	626737	BRACKET, HYDRAULICS, TMA	1
2	626739	BRACKET, HYD, HOSE CONNECTION	1
3	117924	VALVE FLOW CONTROL 1/4NPT	2
4	119394	VALVE HYDRAULIC, RELIEF	1
5	119396	COUPLING #8 MORBX#4 MJIC	2
6	119395	HOSE ASSY, HYDRAULIC, 16", FLOW SUP	2
7	118045	WASHER, FLAT, 5/16 X 1 1/16, P	4
8	115968	NUT, HX, 5/16 P	2
9	113509	BOLT, HX, 1/4X1, GS, P	4
10	118078	WASHER, FLAT, 1/4X5/16, P	8
11	115947	NUT, HX, 1/4, GS, P	4
12	113645	BOLT, HX, 5/16X2 3/4, GS, P	2
13	119397	ELBOW #4 M-JICX#8 M-ORBS, SAE, P	2

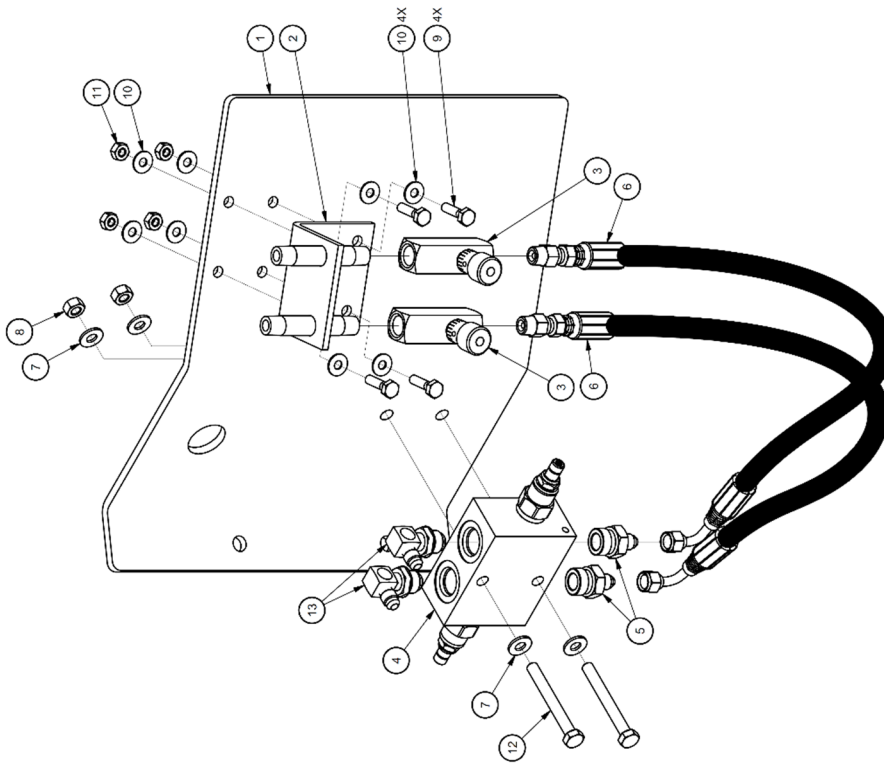

- NOTES:  
 1. - SHOWN AND GENERAL WORKMANSHIP PER THP-SF-004, UNLESS OTHERWISE SPECIFIED.  
 2. - PRESET RELIEF VALVES:  
 - LOOSEN JAM NUT  
 - TURN CLOCK WISE ALL THE WAY  
 - TIGHTEN JAM NUT

SEE PARTS LIST	DESIGNED BY D. Hayes Jr.	DATE 2/11/2020	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING
N/A	DESIGNED BY R. Brougher	DATE 2/18/2020	
	UNLESS OTHERWISE NOTED, ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.		
EST UNFINISHED WT. 16.7 lbs			

HYDRAULIC PREASSY, TRUCK SUPPLIED


1 of 1

Truck Hydraulic Hookup



626741

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	620241	SWITCH/BRACKET ASSY, 8292	2
2	618281	CABLE, 16 AWG, 2 COND X 28	1
3	114254	CONNECTOR, CRIMP, BUTT, 16-14&22-18	4
4	618279	CABLE, 16 AWG, 2 COND X 40	1
5	114230	CONNECTOR, CRIMP, 16-14GA #6 MIL	2
6	114255	CONNECTOR, CRIMP, BUTT, 16-14GA	2
7	113846	BUZZER, 6-28V, 80-95DB	1
8	605814	CABLE, 16 AWG, 2 COND, X 154	1
9	626736	CABLE, 16 AWG, 2 COND X 360	1
10	114232	CONNECTOR, CRIMP, 16-14GA, 5/16 MIL	2
11	114176	CONNECTOR, 2-WAY	1
12	211150	WRAP, SHRINK, ADHESIVE LINE, .12	.75
13	211141	WRAP, SHRINK, 1/4	.42

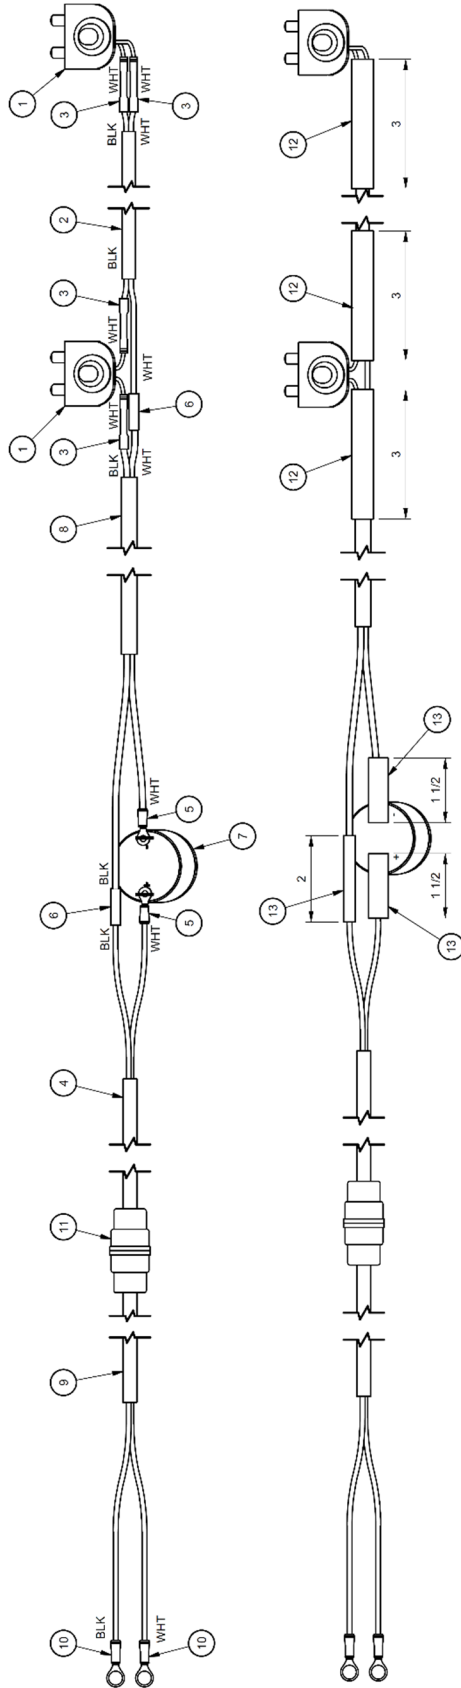

SEE PARTS LIST D. Hayes Jr R. Brougher UNLESS OTHERWISE NOTED, ALL DIMENSIONS ARE IN INCHES DIMENSIONS ACCORDANT TO ASME Y14.5M AND Y14.5-005 UNLESS OTHERWISE SPECIFIED.	DATE: 2/11/2020 REV: 2/13/2020	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING.	PART NO: 626741 REV: 1 of 1
	EST UNFINISHED WT.: 11.5 lbs		

## Truck Power Harness Limit Switch



626614

STRIPING ASSEMBLY TABLE		PARTS LIST			
ASSY NO.	ASSY DESCRIPTION	ITEM	STOCK NO.	DESCRIPTION	QTY.
626614	IMPACT FACE ASSY 4 YLW MASH	1	SEE TABLE	IMPACT FACE (SEE TABLE)	1
626617	IMPACT FACE ASSY 4 BLK MASH	2	210885	TAPE REFLECTIVE 1 1/2 RED/WHITE	2,67
626704	IMPACT FACE ASSY 8 RED/9 WHT MASH	3	116884	SCREW PHW #12X1 SELF TAPPING P	20
626705	IMPACT FACE ASSY 6 ORG MASH				
626698	IMPACT FACE ASSY 12 RED/WHT SQR MASH				
626706	IMPACT FACE ASSY 6 YLW GRN/RED MASH				
626707	IMPACT FACE ASSY 4 BLU MASH				
626708	IMPACT FACE ASSY 6 BLK MASH				
626709	IMPACT FACE ASSY 4 RED MASH				
626710	IMPACT FACE ASSY 6 BLK MASH				
626711	IMPACT FACE ASSY 4 RED MASH				

STRIPING ASSEMBLY TABLE		PARTS LIST			
ASSY NO.	ASSY DESCRIPTION	ITEM	STOCK NO.	DESCRIPTION	QTY.
626614	IMPACT FACE ASSY 4 YLW MASH	1	SEE TABLE	IMPACT FACE (SEE TABLE)	1
626617	IMPACT FACE ASSY 4 BLK MASH	2	210885	TAPE REFLECTIVE 1 1/2 RED/WHITE	2,67
626704	IMPACT FACE ASSY 8 RED/9 WHT MASH	3	116884	SCREW PHW #12X1 SELF TAPPING P	20


DATE: 7/26/2019		TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED.	
DRAWN BY: S. Thompson		DO NOT SCALE DRAWING	
CHECKED BY: S. Thompson			
UNLESS OTHERWISE NOTED, ALL DIMENSIONS ARE IN INCHES.			
DIMENSIONS ACCORDING TO ASME Y 14.5M AND Y 14.5-03			
UNLESS OTHERWISE SPECIFIED.			
EST UNFINISHED WT: 8.95 lbs		PART NO: 626614	
		REV: 1 of 1	

NOTES:  
 1- STRIPING PATTERN SHOWN IS GENERIC. SEE STRIPING ASSEMBLY TABLE ITEM 1 DRAWING FOR SPECIFIC STRIPING PATTERN DETAILS.

## Impact Face Assembly

604382

PARTS LIST			
ITEM	STOCK NO.	DESCRIPTION	QTY.
1	605584	BRACKET,SUPPORT,RIGHT,TMA	1
2	605581	BRACKET,SUPPORT,LEFT,TMA	1
3	116293	PIN,HITCH,1.14X27 P.WHAIRPIN COTTER	2
5	608321	FLT ST.1/2X3 1/4X3 1/4.WHOLE	2
6	608311	FLT ST.1/2X2 1/2X3 1/4.WHOLE	2
7	115832	BOLT,HK.1X3 1/2.G8.P	8
8	115832	NUT,HK.1.G8.P	8
9	118080	WASHER,LOCK,1.G	8
10	118004	WASHER,FLAT,1X2 1/2.G	16
11	614059	SHIM,1/4X5X10	8
12	614063	SHIM,1/2 GA.X5X10	8

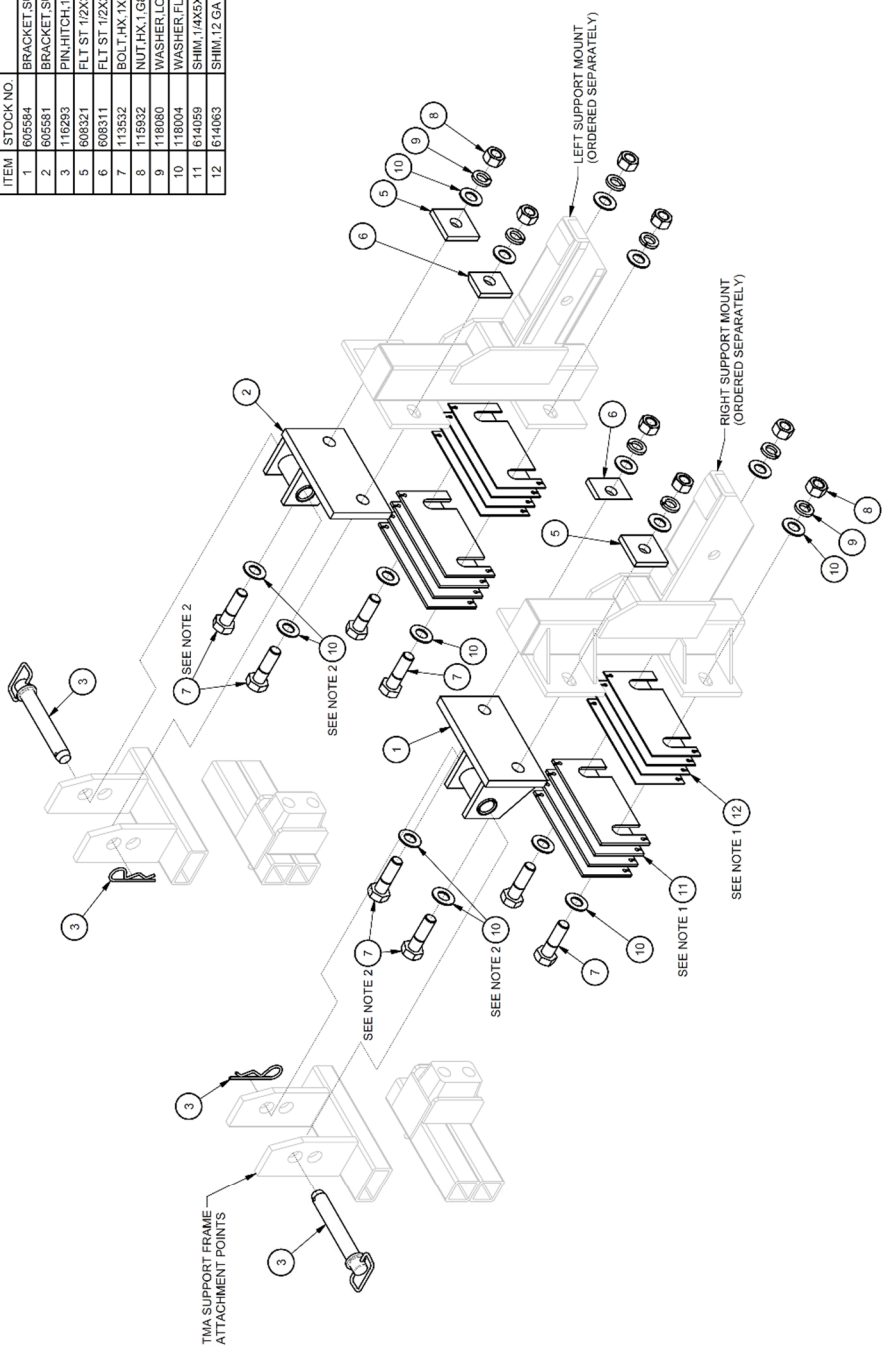

REVISED	DATE	BY	CHKD	DESCRIPTION
SEE PARTS LIST	8/22/2002	D. Kothfeld		
DESIGNED	8/22/2002	A. Porterfield		
DATE	UNLESS OTHERWISE NOTED, ALL DIMENSIONS ARE IN INCHES.			
SCALE	DIMENSIONS ACCORDING TO ASME Y14.5M AND Y14.5-2009			
	(DIMENSIONS IN PARENTHESES TAKE PRECEDENCE)			
	TOLERANCES PER THP-SF-001, UNLESS OTHERWISE SPECIFIED.			
	DO NOT SCALE DRAWING			
EST UNFINISHED WT:		96.7 lbs		
ATTACHMENT ASSEMBLY, TMA		REV	F	1 of 1

NOTES:  
 1. USE ITEMS 11 & 12 AS REQUIRED TO ACHIEVE PROPER SYSTEM  
 2. IF INTERFERENCE OCCURS WHILE INSTALLING BOLT, ITEM 7,  
 OMIT WASHER, ITEM 10.

# Attachment Assembly

616797

**PARTS LIST**

ITEM	STOCK NO.	DESCRIPTION	QTY
1	614467	SCKET RECEIVER, UNDERRIDE, L	1.00
2	614472	SCKET RECEIVER, UNDERRIDE, R	1.00
3	611413	MOUNT SUPPORT, TMA, L	1.00
4	611415	MOUNT SUPPORT, TMA, R	1.00
5	116295	PIN, HITCH, IXS 3/4, W/SNAP PIN	2.00
6	616780	TUBE, SPACER	4.00
7	614590	SPLICE, SPACER	2.00
8	605506	BRACKET, LOWER TRUCK, W/HOLES	2.00
9	116104	PAINT BLACK, ENAMEL, GLDSS, SPRAY	1.00
10	115252	INSTALL INST RECEIVER UNDERRIDE	1.00
11	116505	PRIMER, SPRAY CAN	1.00

USE AS REOD  
USE AS REOD

ATTENTION: SEE NOTE 2

NOTE:

- ITEMS 1 & 2 MUST BE PARALLEL WITH EACH OTHER AND LEVEL.
- LOWER TRUCK BRACKETS (ITEM 8) ARE NOT NEEDED FOR MODELS TMA6090, TMA6190, TMA 8290 OR TMA9180. FOR THOSE MODELS USE ATTACHMENT BRACKETS PROVIDED WITH ATTACHMENT ASSEMBLY.

DRAWN: SEE PARTS LIST	DATE: 08/25/83	TOLERANCES PER QMS-SP-001, UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING	UNDERRIDE ASSY, RECEIVER, TMA
CHECKED: D. June	DATE: 08/18/84	RELEASED FOR WORK: MOUNTING AND DIMENSIONS MAY VARY SLIGHTLY EXCLUSIONS ACCORD TO TO ASSY, TL, SH-189, IN, 1253, 07-187-001-001	EST. NO.: 616797
TITLE: N/A	ESTIMATED WEIGHT: 225.55 lbs	QTY: 1 of 1	

## Underriage Assembly

**Notes:**

**Notes:**



For more complete information on Valtir products and services, visit us on the web at [www.valtir.com](http://www.valtir.com). Materials and specifications are subject to change without notice. Please contact Valtir to confirm that you are referring to the most current instructions.

**[WWW.VALTIR.COM](http://WWW.VALTIR.COM)**  
**1.888.323.6374**