

SAFE-HIT®

RubberTough® 360 Soil Anchor PLACEMENT INSTRUCTIONS

This procedure describes the process to mount the RubberTough® 360 Soil Anchor.

IT IS THE RESPONSIBILITY OF THE INSTALLER TO MAINTAIN A SAFE WORK AREA INCLUDING THE USE OF STANDARD WORK ZONE SAFETY EQUIPMENT & PPE: GLOVES, SAFETY-TOE SHOES, EYE & EAR PROTECTION

Recommended Tools

- Motorized Hammer with Safe-Hit® Shank SHTOL-XX-HT or Safe-Hit® Hand Driver (PN SHTOL-30-6-X)
- 3/4" Socket Wrench or Box End Wrench

Procedure

Step 1 – Position the Anchor so that the top plate long edge is parallel to the direction of traffic. Make sure the 1/2" bolts are securely in place on the anchor plate. Push the Anchor in by hand about 1" to 2".

Stand on the side of the Anchor with the point of the "V" and set the driver tool in place, then tilt the Anchor toward yourself at about a 10 degree angle.


Drive the Anchor into the ground until it contacts the surface. As you drive the Anchor it will begin to rotate to a vertical orientation.

Step 2 – Remove the 1/2" bolts from the Anchor plate.

Step 3 – Place the RubberTough® 360 post on the Anchor top plate and insert the two 1/2" bolts with flat and lock washers. Tighten snugly.



Step 1: Begin with the Anchor set at 10° angle.

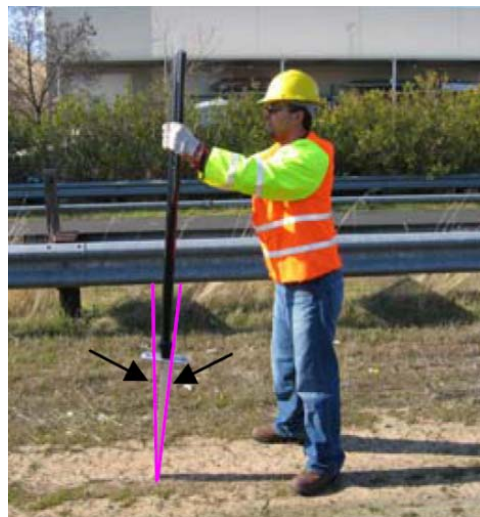

Driving Anchor with SHTOL-30-6-X hand driver tool.



Step 2: Remove 1/2" bolts.



Step 3: Mount the post.