

SAFE-HIT®

DURA-POST® VERTICAL PANELS, SURFACE MOUNT BASE


SINGLE OR DOUBLE VERTICAL PANELS

ASSEMBLY INSTRUCTIONS

1. PLACE THE PANEL INTO POSITION OVER THE THREADED INSERTS ON THE POST.
2. INSERT SCREWS, ITEM 3, METAL WASHERS, ITEM 4 AND PLASTIC WASHERS, ITEM 5.
- * 3. LEAVE SCREWS ON SLOTTED HOLES SLIGHTLY LOOSE SO THAT THE WASHERS SPIN FREELY. TIGHTEN FIRMLY THE SCREW IN THE NON-SLOTTED HOLE.
- ** 4. MOUNT BASE TO THE GROUND PER INSTRUCTION 618360 BEFORE PLACING POST IN BASE.

IT IS THE RESPONSIBILITY OF THE INSTALLER TO MAINTAIN A SAFE WORK AREA INCLUDING THE USE OF STANDARD WORK ZONE SAFETY EQUIPMENT & PPE: GLOVES, SAFETY-TOE SHOES, EYE & EAR PROTECTION

ITEM	PART NO.	DESCRIPTION	QTY.
1	VARIES	DURA-POST® W/VERTICAL MOUNTING HARDWARE	1
2	VARIES	PANEL, VERT, BLANK, WHITE, 8X38, SLOTS	1 OR 2
3	117028	SCREW, TRUSS, 1/4-20X1, PHIL, NYLOCK, S	4 OR 8
4	118015	WASHER, FLAT, 1/4X1 1/4, S	4 OR 8
5	617422	WASHER, HDPE, 1 1/2 O.D. X .28 IDX .09 THICK	4 OR 8
**6	604959	SURFACE MOUNT BASE W/PIN, SLSMA-1---BL	1

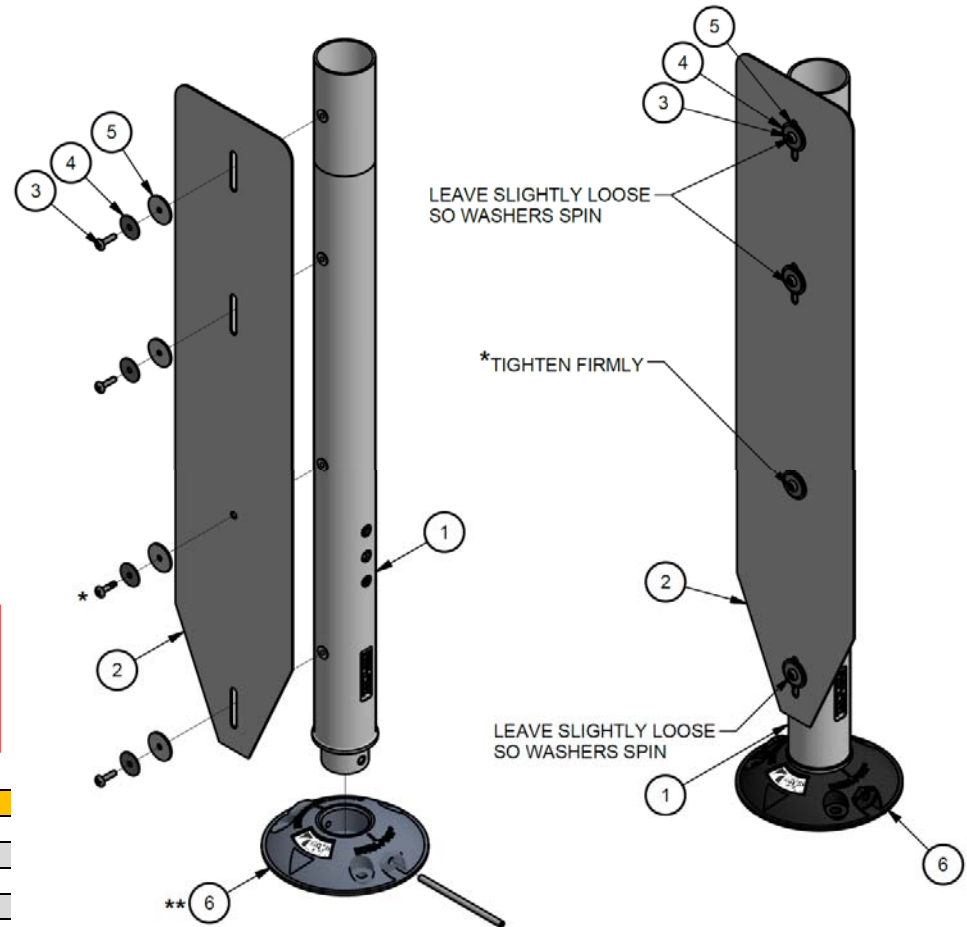

SINGLE VERTICAL PANEL SHOWN

Note: Some quantities adjusted when using Double Panels.