

Concrete Foundations

PRODUCT SPECIFICATIONS

Concrete Foundations

Product Specifications



15601 Dallas Parkway
Suite 525
Addison, Texas 75001



Warning: The local highway authority, distributors, owners, contractors, lessors, and lessees are **RESPONSIBLE** for the assembly, maintenance, and repair of a concrete foundation. Failure to fulfill these **RESPONSIBILITIES** with respect to the assembly, maintenance, and repair of any concrete foundation could result in serious injury or death.



Important: These instructions are for construction of specific concrete backups and foundations. In the event the specified concrete product would require a deviation from standard assembly parameters, contact a Valtir representative. These foundations are part of attenuation systems that have been authorized for reimbursement by the Federal Highway Administration (“FHWA”) for use on the National Highway System under strict criteria utilized by that agency. Valtir representatives are available for consultation if required

The instructions contained in this manual supersede all previous information and manuals. All information, illustrations, and specifications in this manual are based on the latest foundation information available to Valtir at the time of printing. We reserve the right to make changes at any time. Please contact Valtir or visit Valtir.com to confirm that you are referring to the most current instructions.

Table of Contents

Customer Service Contacts	3
Important Introductory Notes	3
ADIEM Base 050511	4
BarrierGate® 1.5 27-79-00	6
HEART 28'-2 1/4" SS 1503	7
QuadGuard® Tension Strut Backup 618686	8
QuadGuard® 8" With Rebar for TS Backup	9
QuadGuard® 8" Without Rebar for TS Backup	10
QuadGuard® CZ	11
QuadGuard® Concrete Pad & Backup 35-40-09	12
QuadGuard® Concrete Pad & Backup, Wide 3540411	13
QuadGuard® (69") Concrete Pad & Backup, Wide on Grade	14
QuadGuard® (90") Concrete Pad & Backup, Wide on Grade	15
QuadGuard® Tension Strut Wide 60-12-21	16
QuadTrend® 350 Concrete Pad & Cable Anchor 85-02-04	17
QUEST® 100/110 8" Pad 114138	18
QUEST® 70/80 8" Pad 114139	19
QUEST® Classic Temporary Pad 62-01-47	20
QUEST® TL-3 (24") Pad 611686	21
REACT 350® Steel Backup and Rigid Barrier 114054	23
REACT 350® Concrete Backup and Below Grade Anchor Block	24
REACT 350® Steel Backup and Below Grade Anchor Block	25
TRACC 22' SS 1010	26
FASTRACC 26'- 8" SS 1011	27
WIDETRACC 22' SS 1012	28
SHORTRACC 15' SS 1013	29
SHORTRACC 16' SS 1094	30
TRACC 23' SS 1095	31
FASTRACC 27'- 8" SS 1096	32
WIDETRACC Double Flare 22' SS 1034	33
WIDE FASTRACC 26'-8" SS 1075	34

Customer Service Contacts

Valtir is committed to the highest level of customer service. Feedback regarding concrete foundations, their assembly procedure, supporting documentation, and performance is always welcome. Additional information can be obtained from the contact information below:

Valtir

Telephone	(888) 323-6374 (USA) +1 214 589-8140 (International)
Contact Link	Valtir.com/Contact
Internet	Valtir.com

Important Introductory Notes

Proper deployment of the concrete foundations is critical to achieve performance under accepted criteria. Take the time to review specified drawings thoroughly before performing all necessary work. Do not attempt to assemble any concrete foundation without the proper plans and specifications from the highway authority and instructional manual from the manufacturer. If you need additional information, or have questions about any foundation being installed, please contact the highway authority that has planned and specified this assembly and, if needed, contact Valtir Customer Service Department.



Important: It is the responsibility of the installer to read safety instructions thoroughly and follow the assembly directions and suggested safe practices before assembling, maintaining, or repairing a concrete foundation. Failure to follow this warning can result in serious injury or death to workers and/or bystanders.




Warning: Do not assemble any concrete foundation until you have read and understood the specified drawing. Please call Valtir if you do not understand a drawing.




Warning: It is the responsibility of the installer to ensure safety measures incorporating appropriate traffic control devices specified by the highway authority are used to protect all personnel while at the assembly or repair site.






Warning: Do NOT modify the concrete foundation(s) in any way.

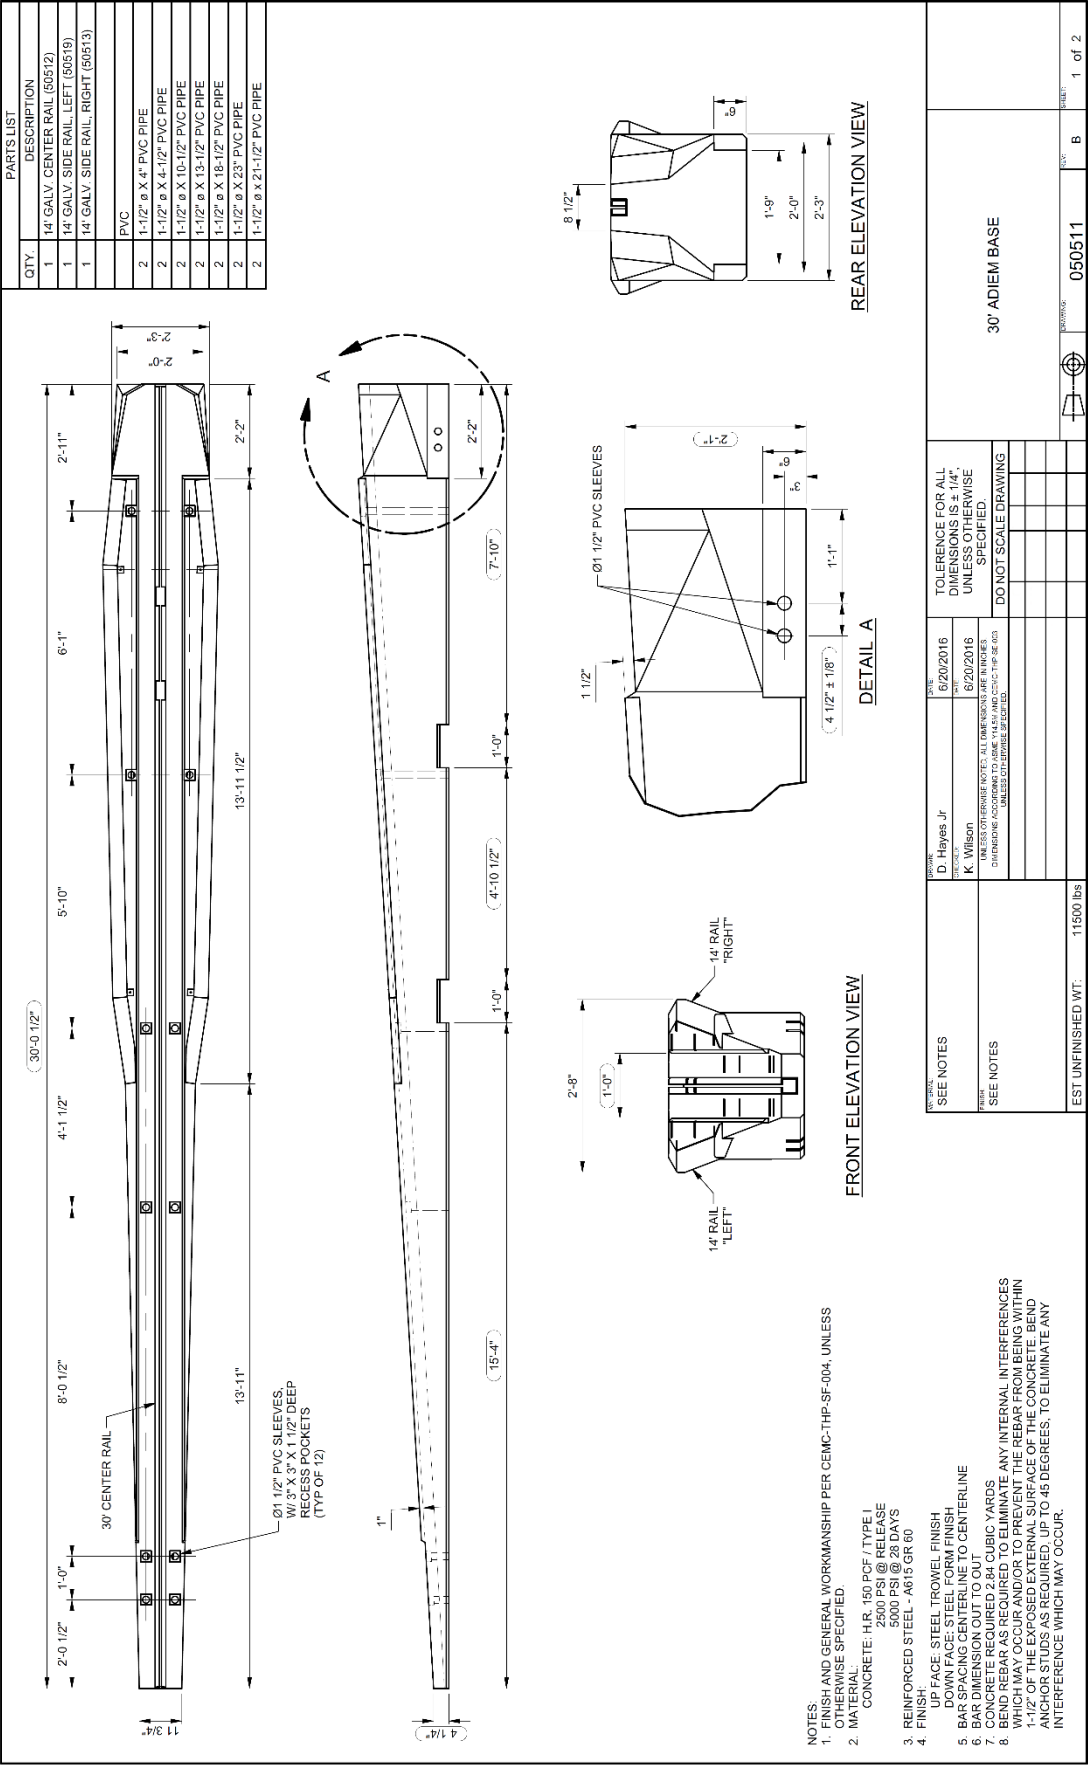



ADIEM Base 050511

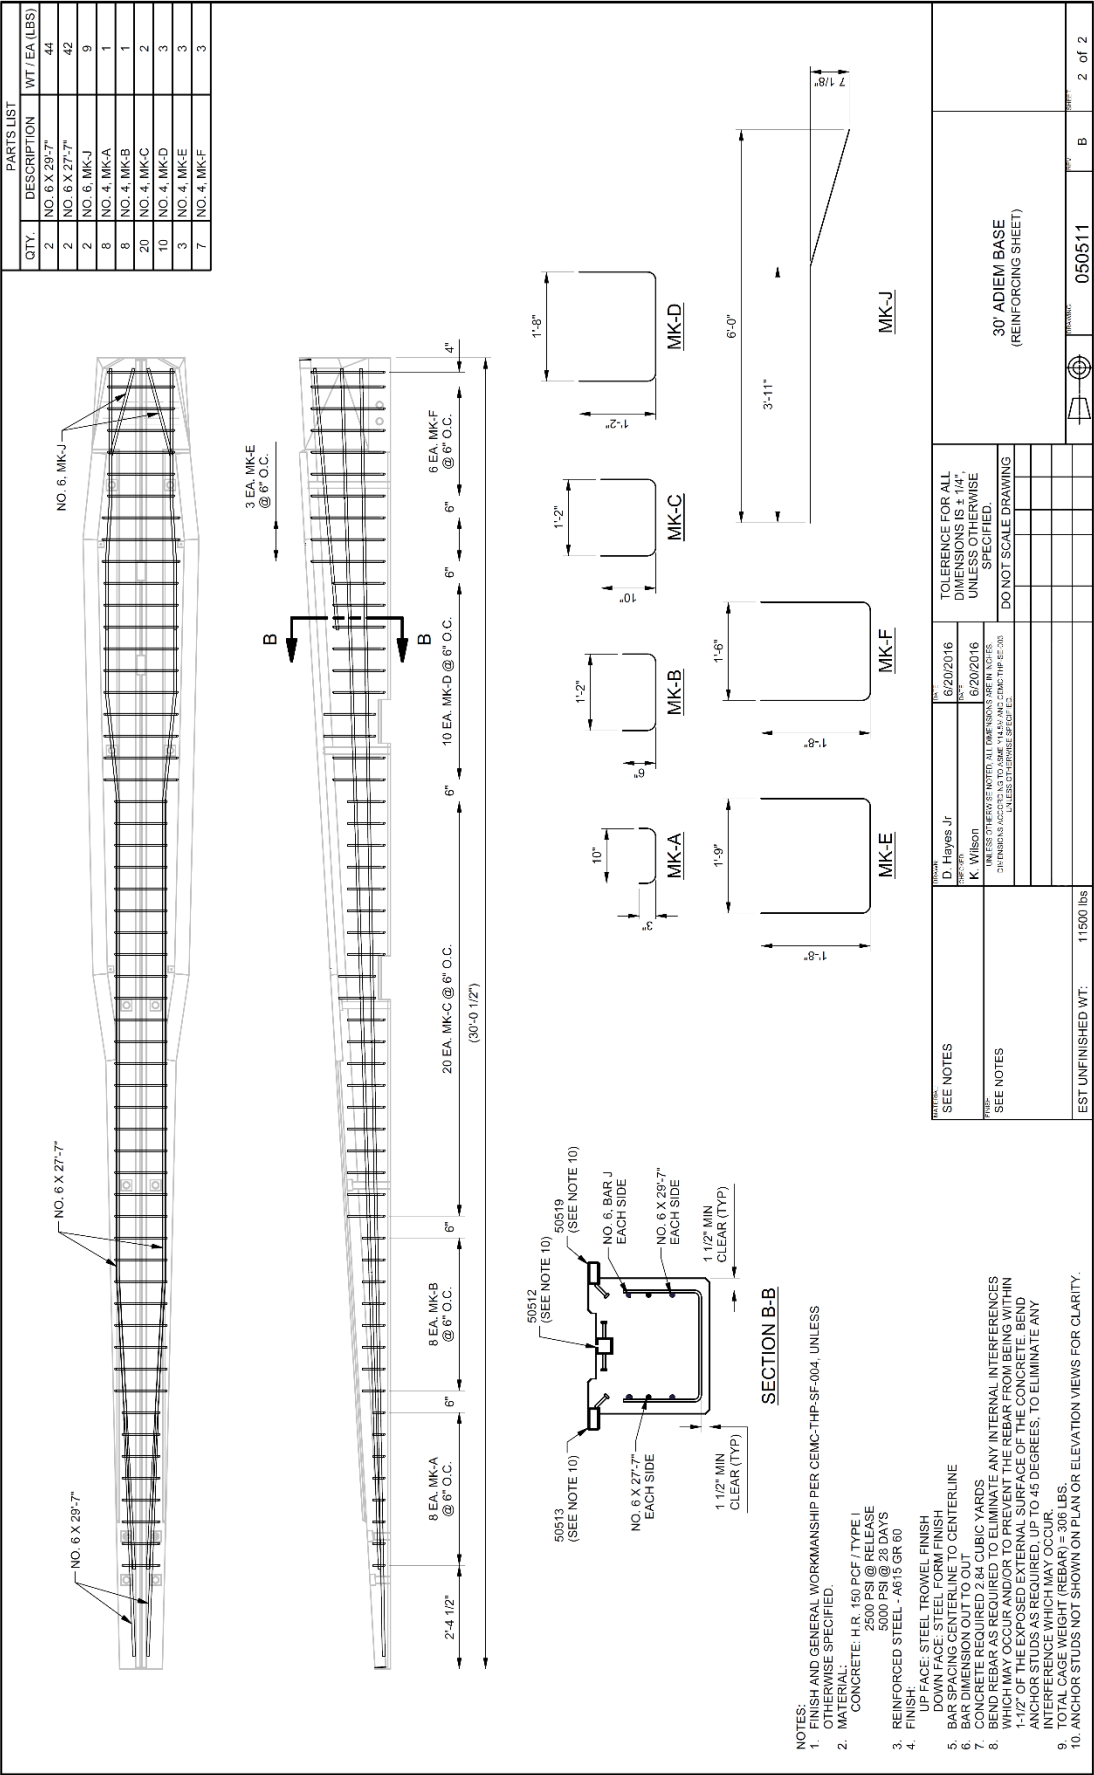


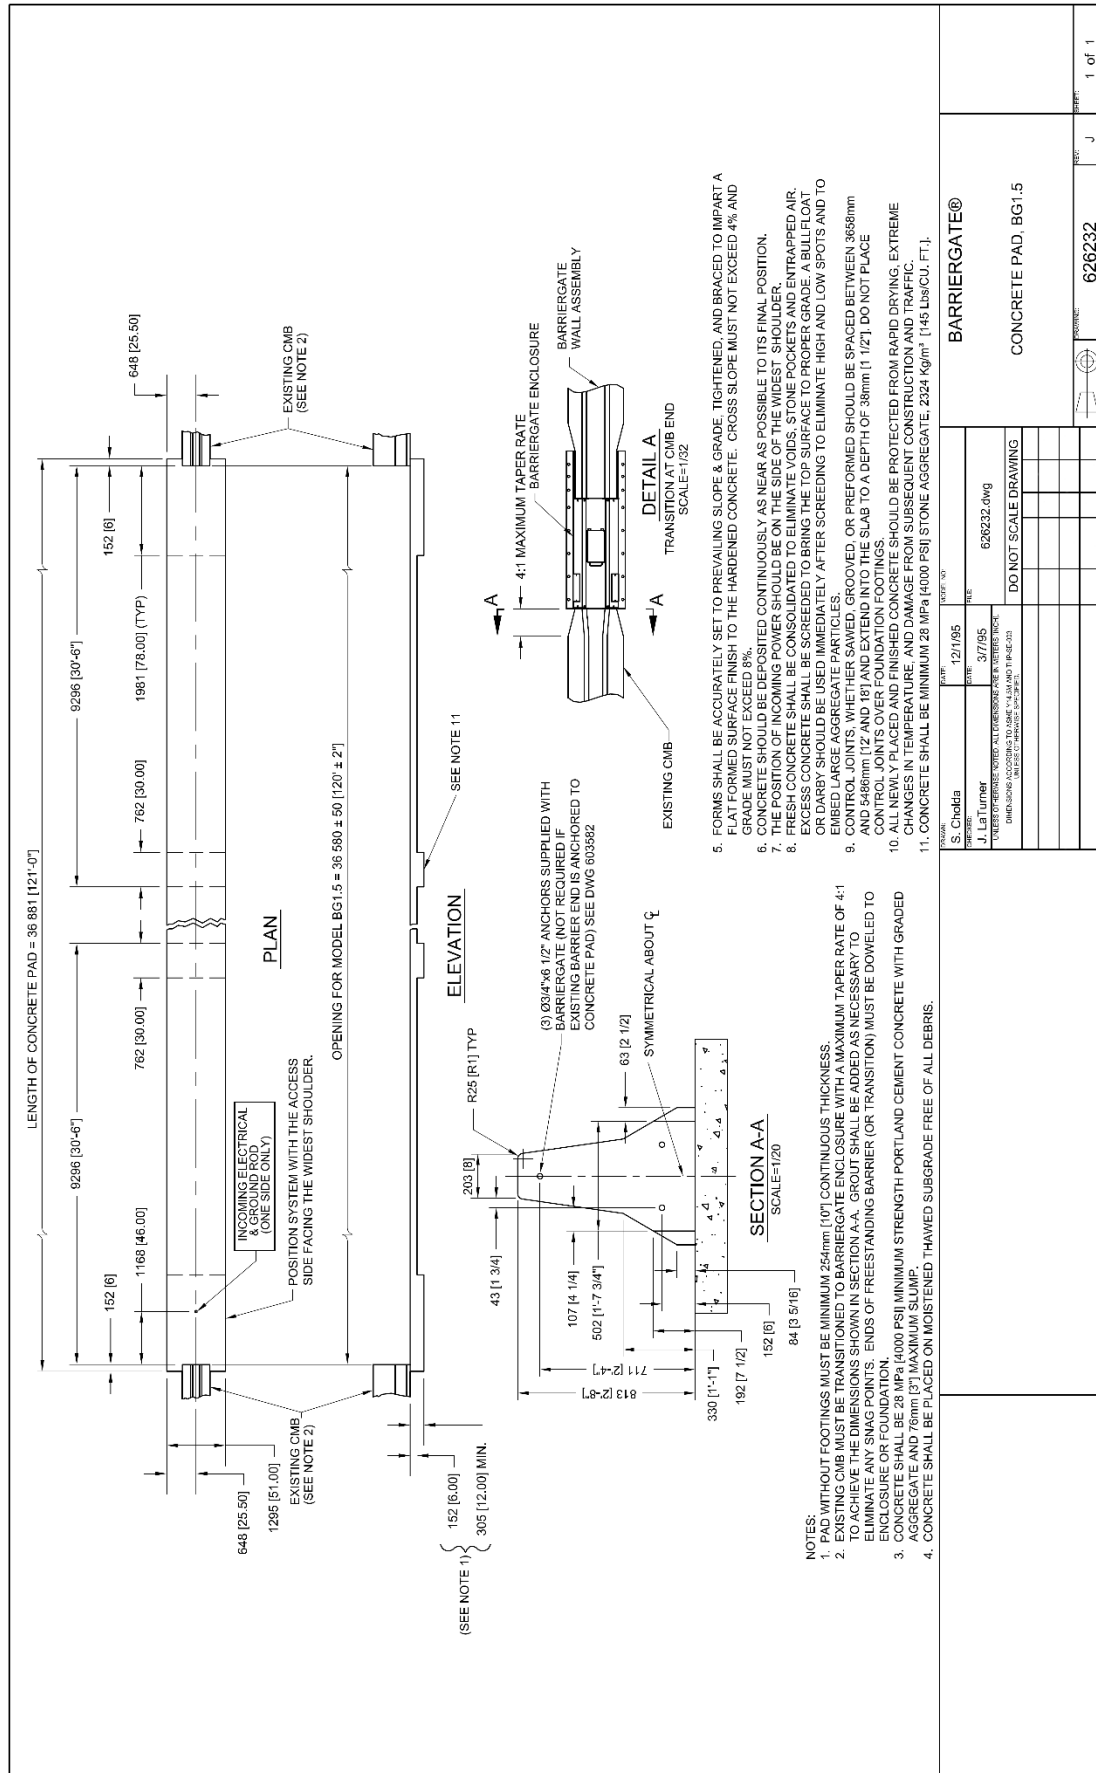

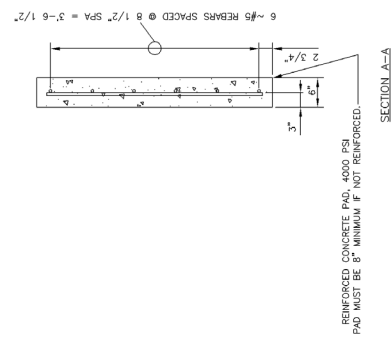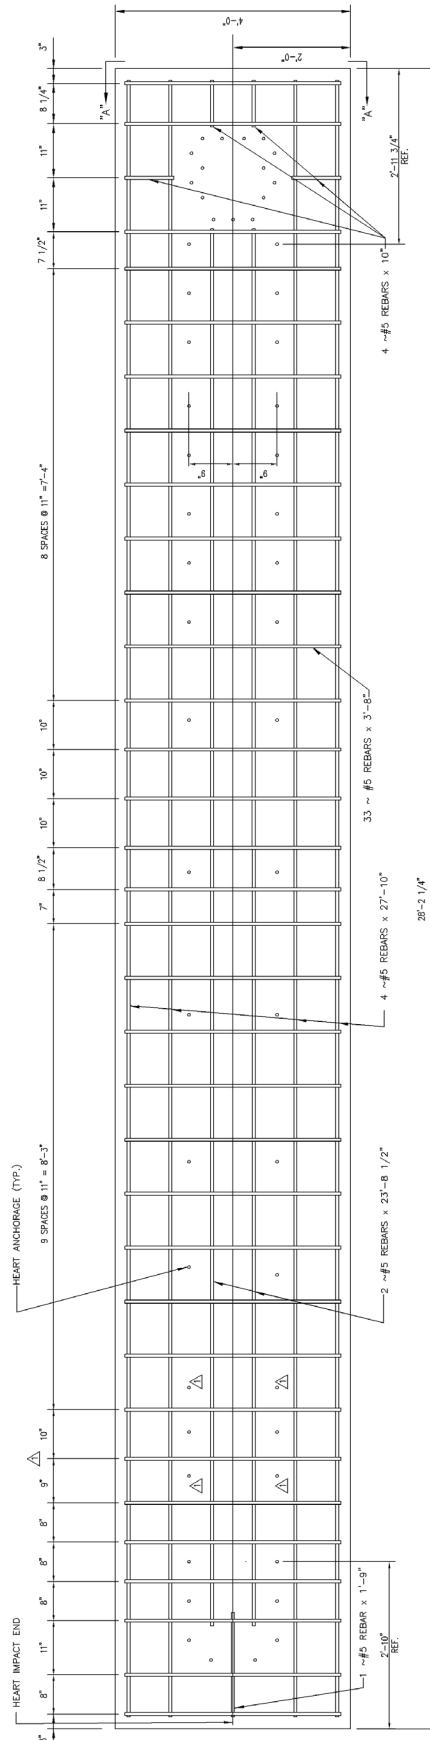


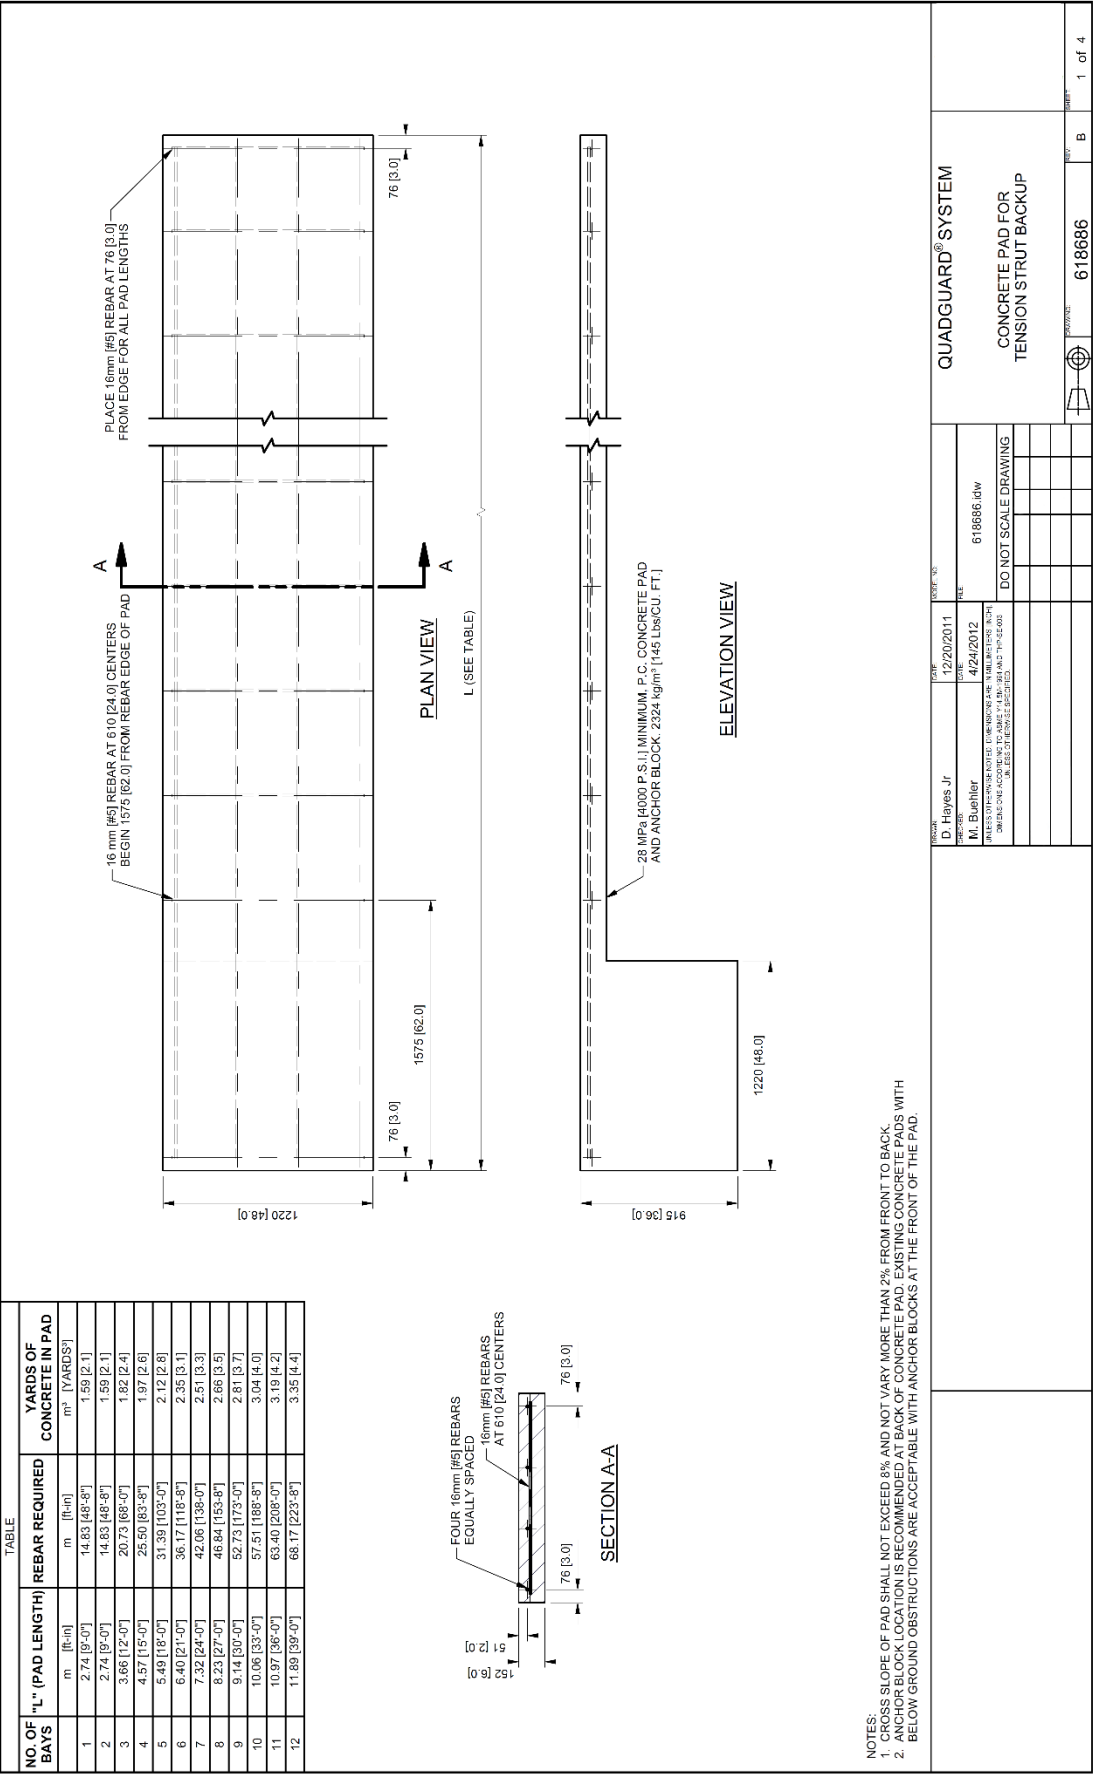


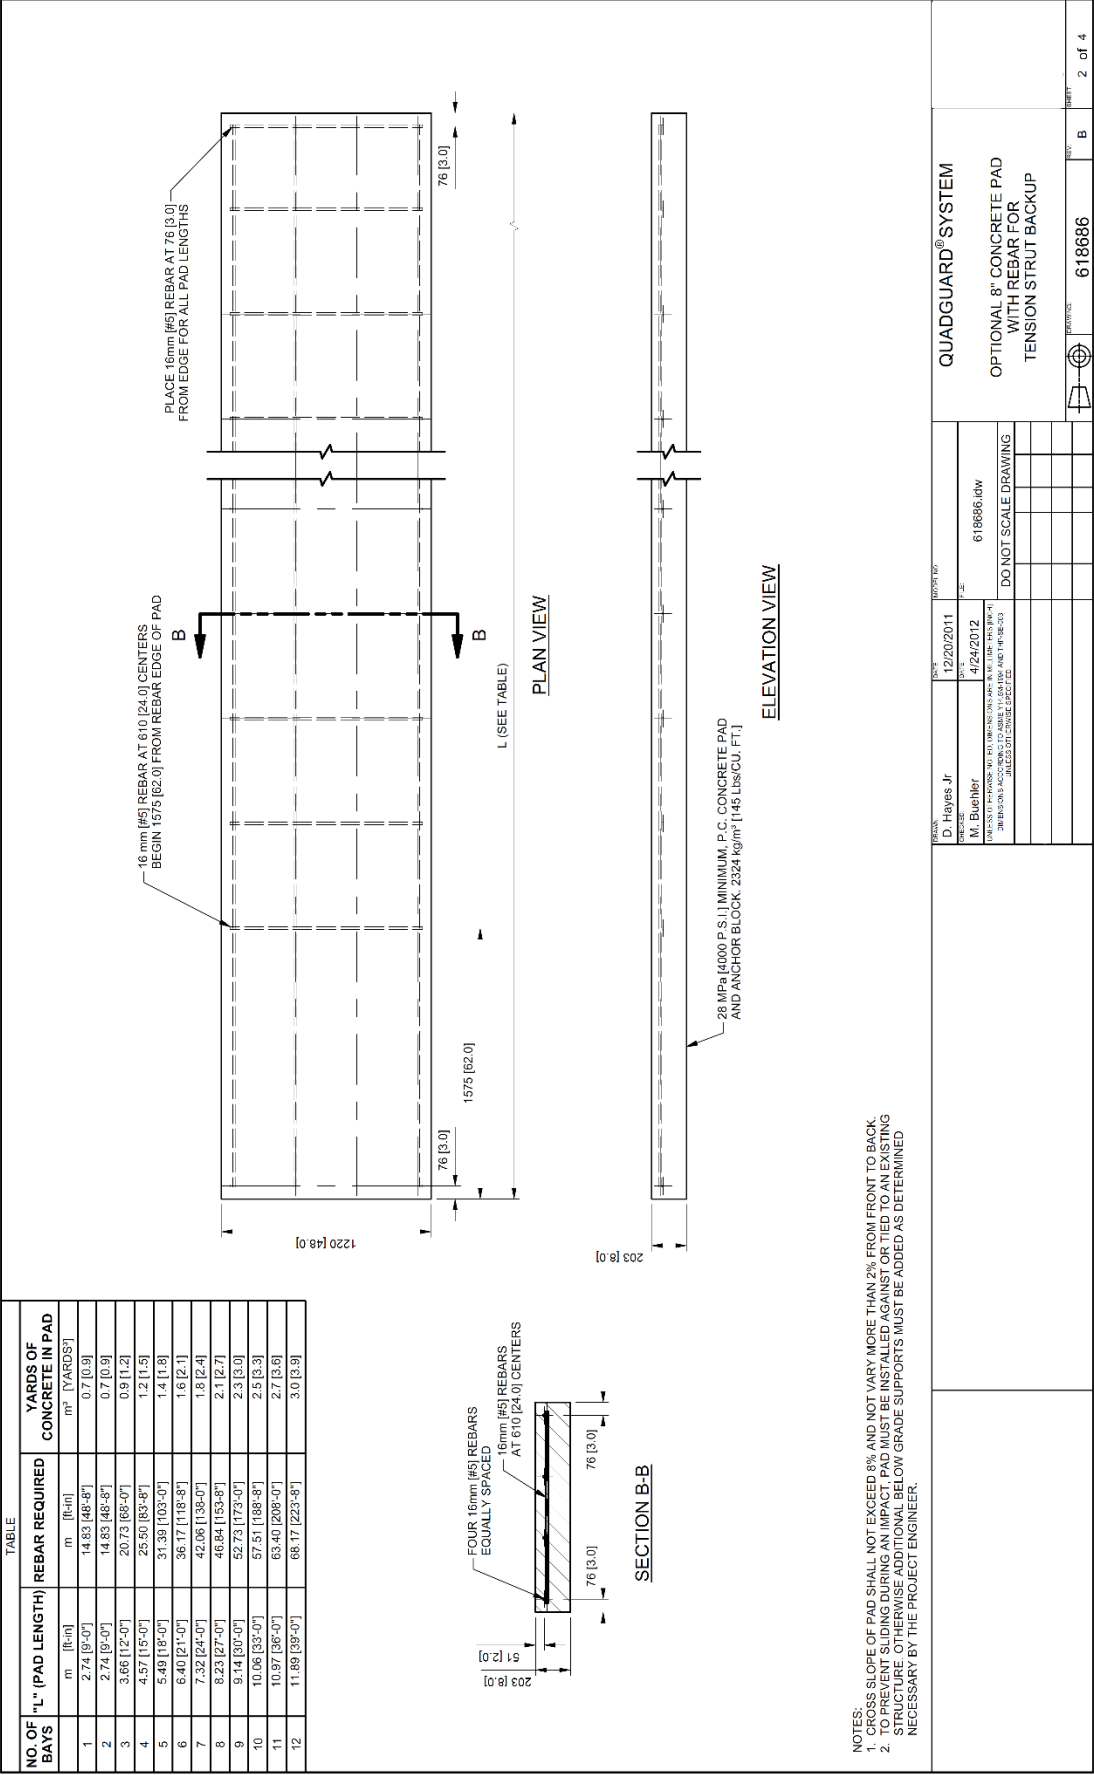

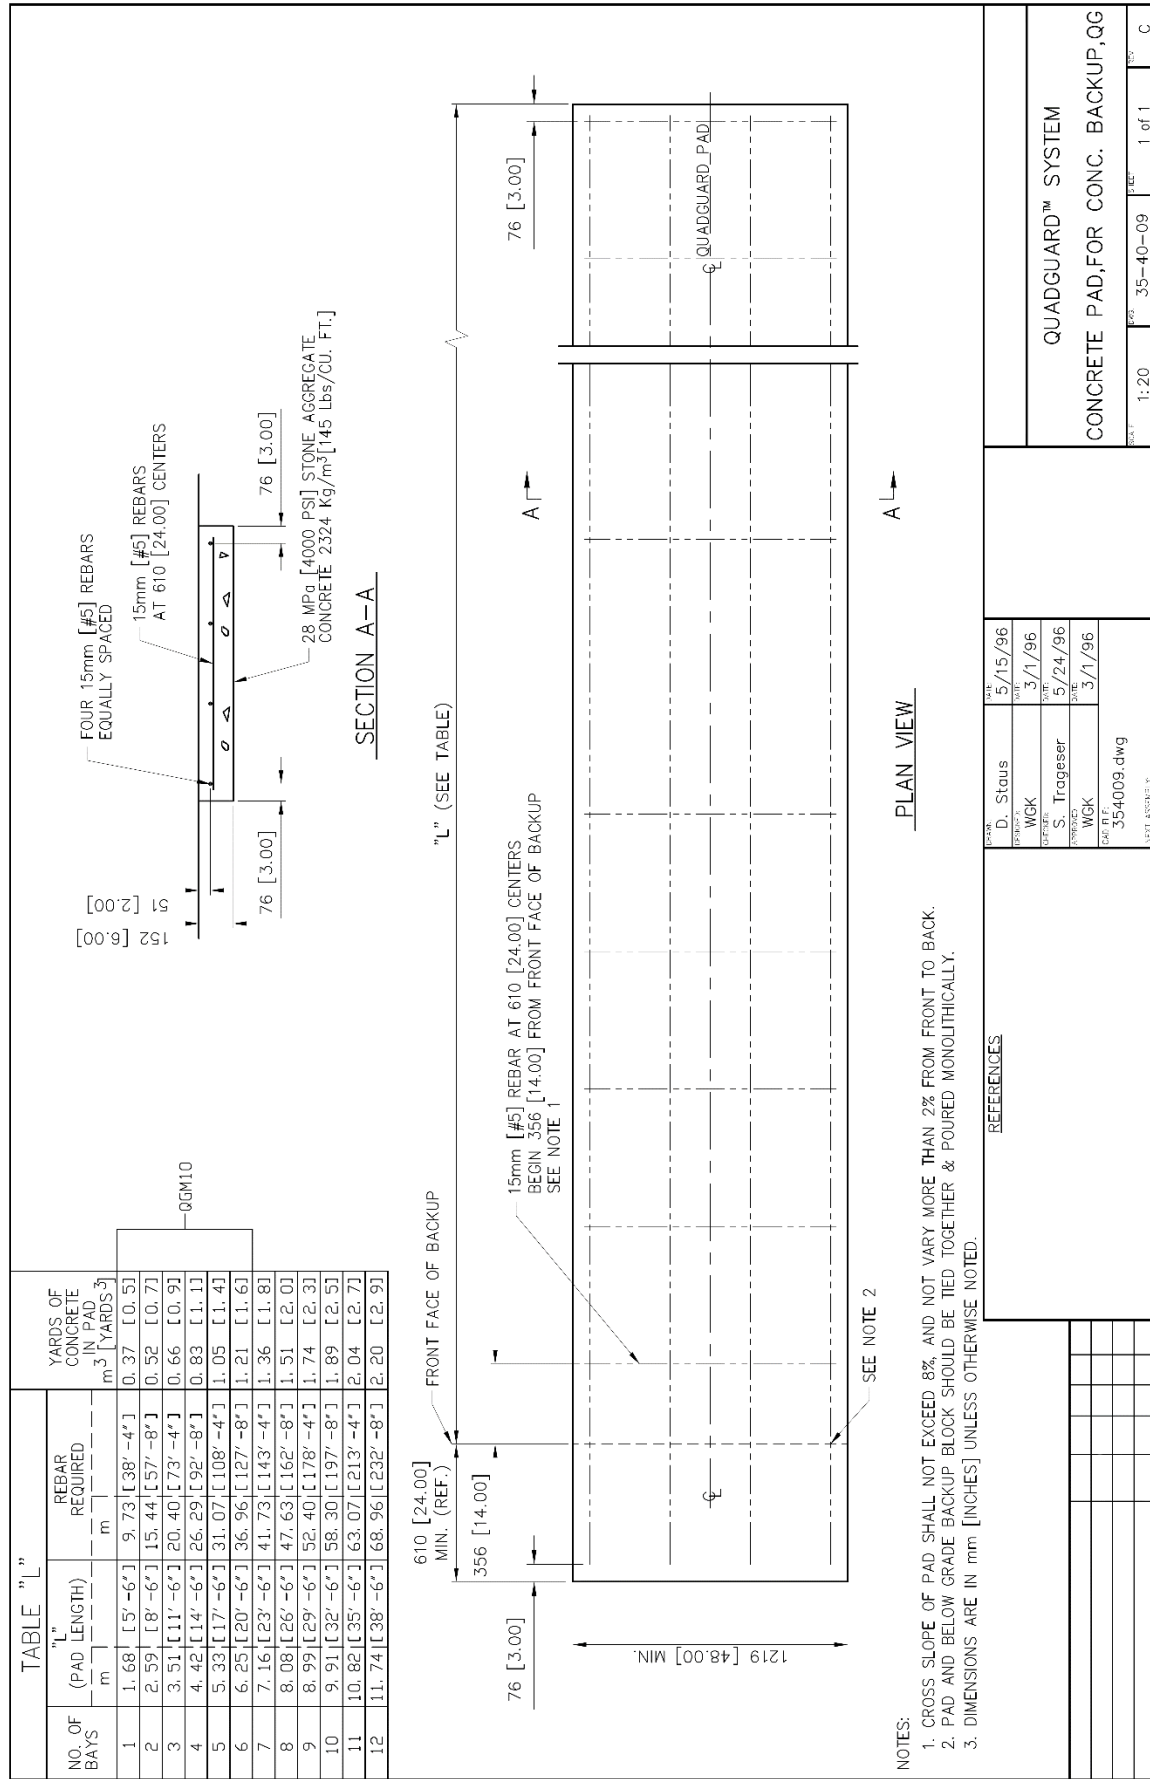



QuadGuard® Concrete Pad & Backup 35-40-09

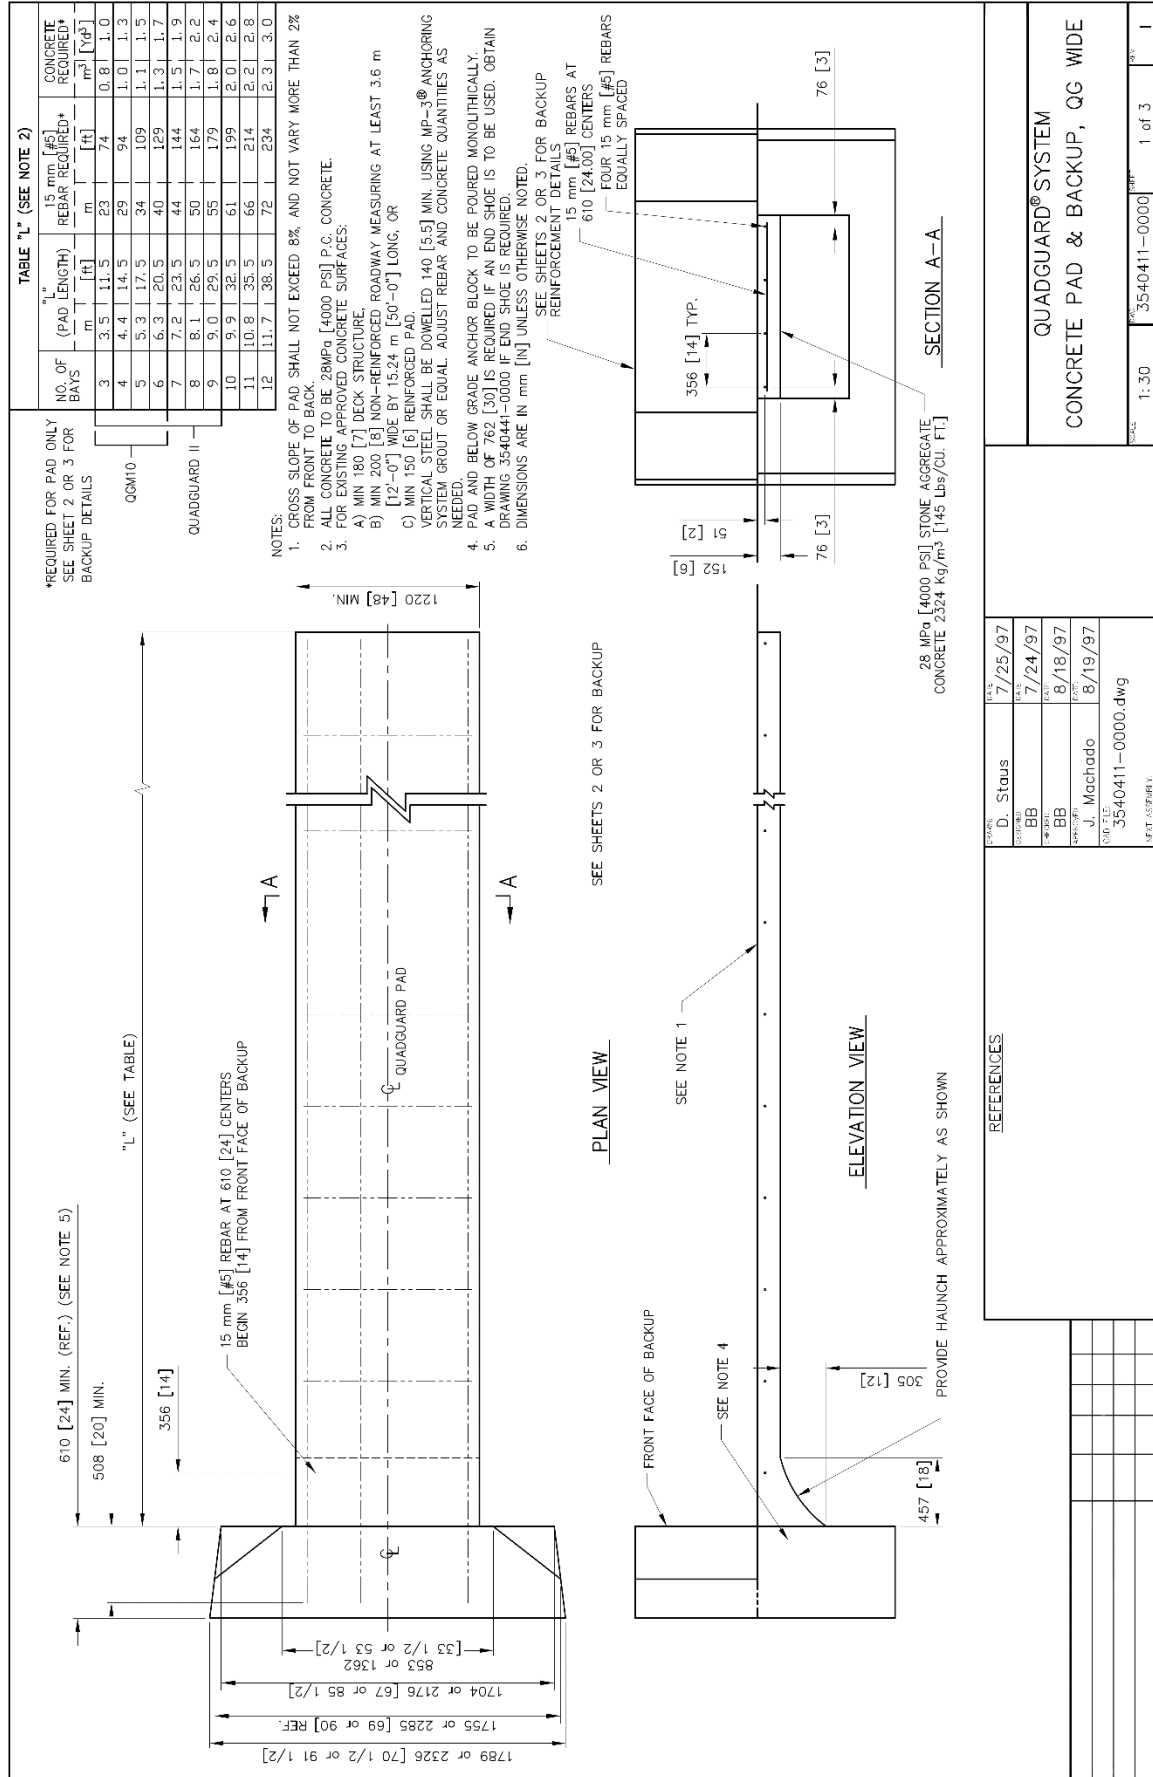


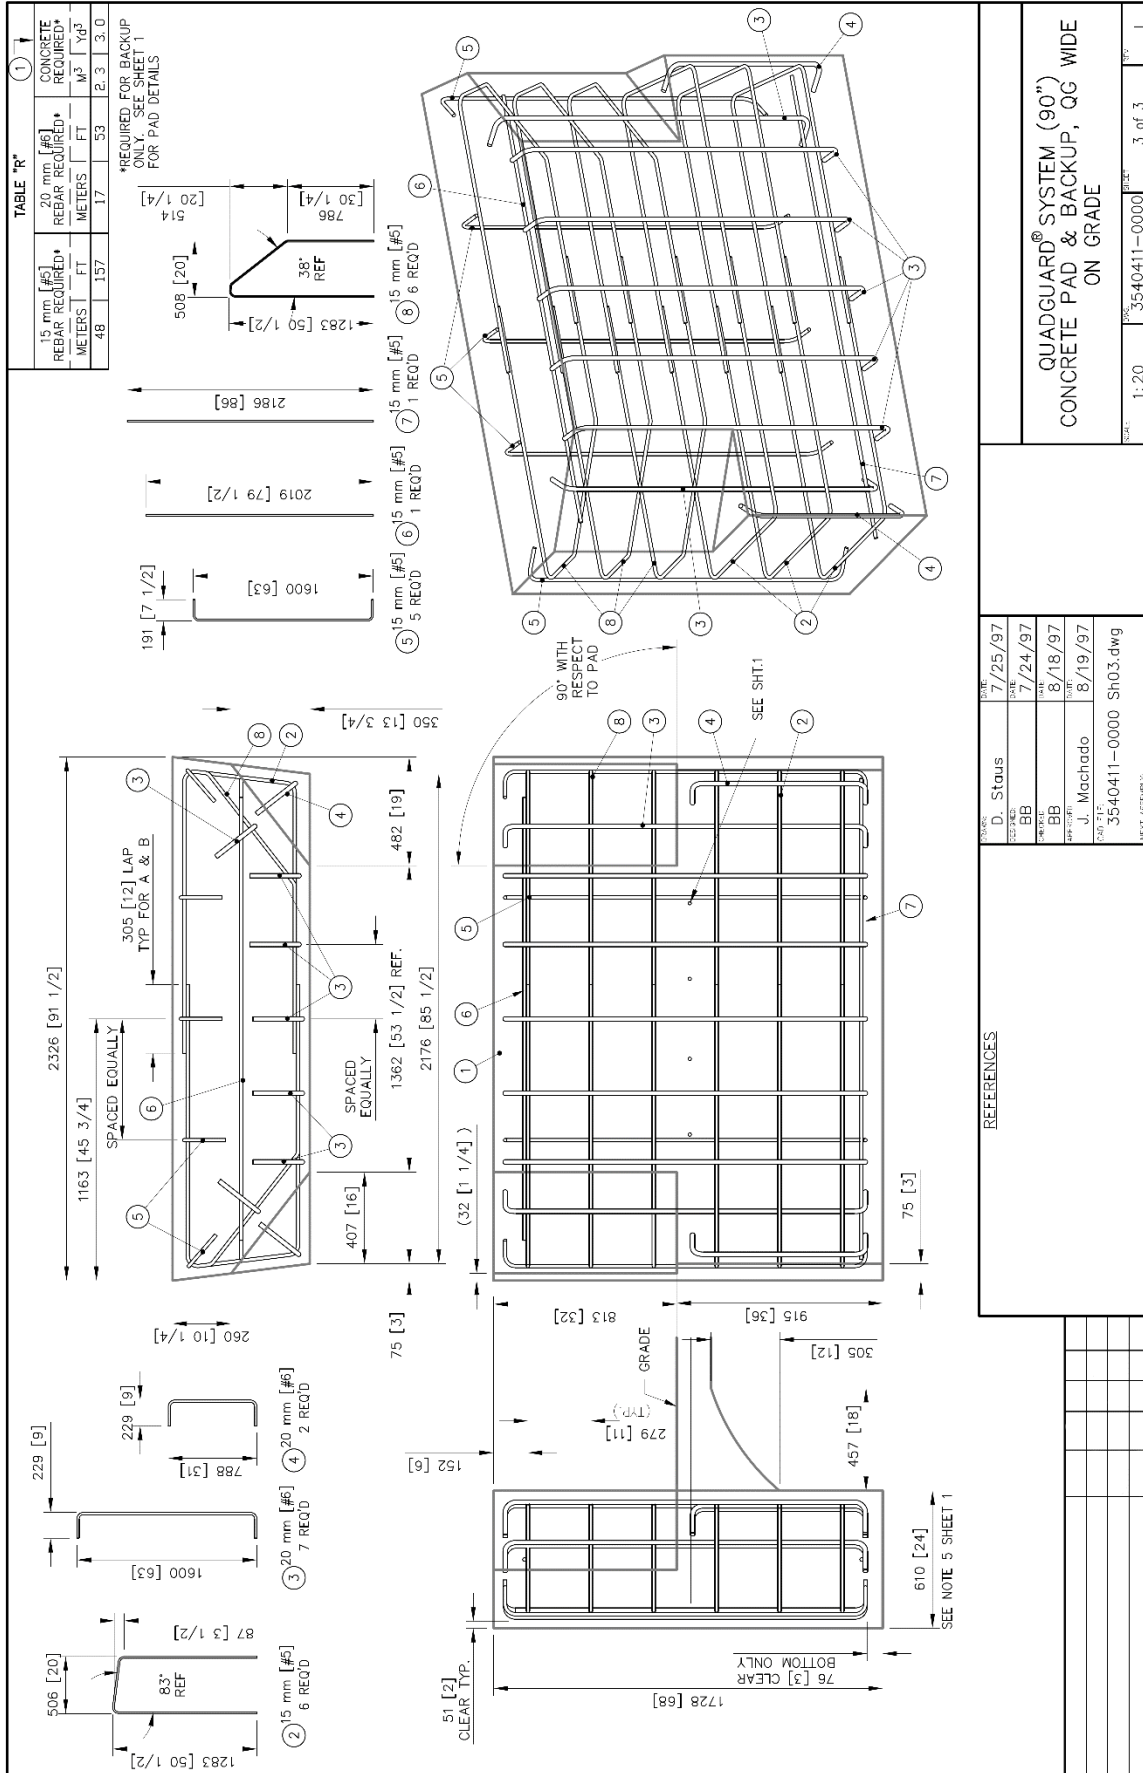



QuadGuard® (90'') Concrete Pad & Backup, Wide on Grade

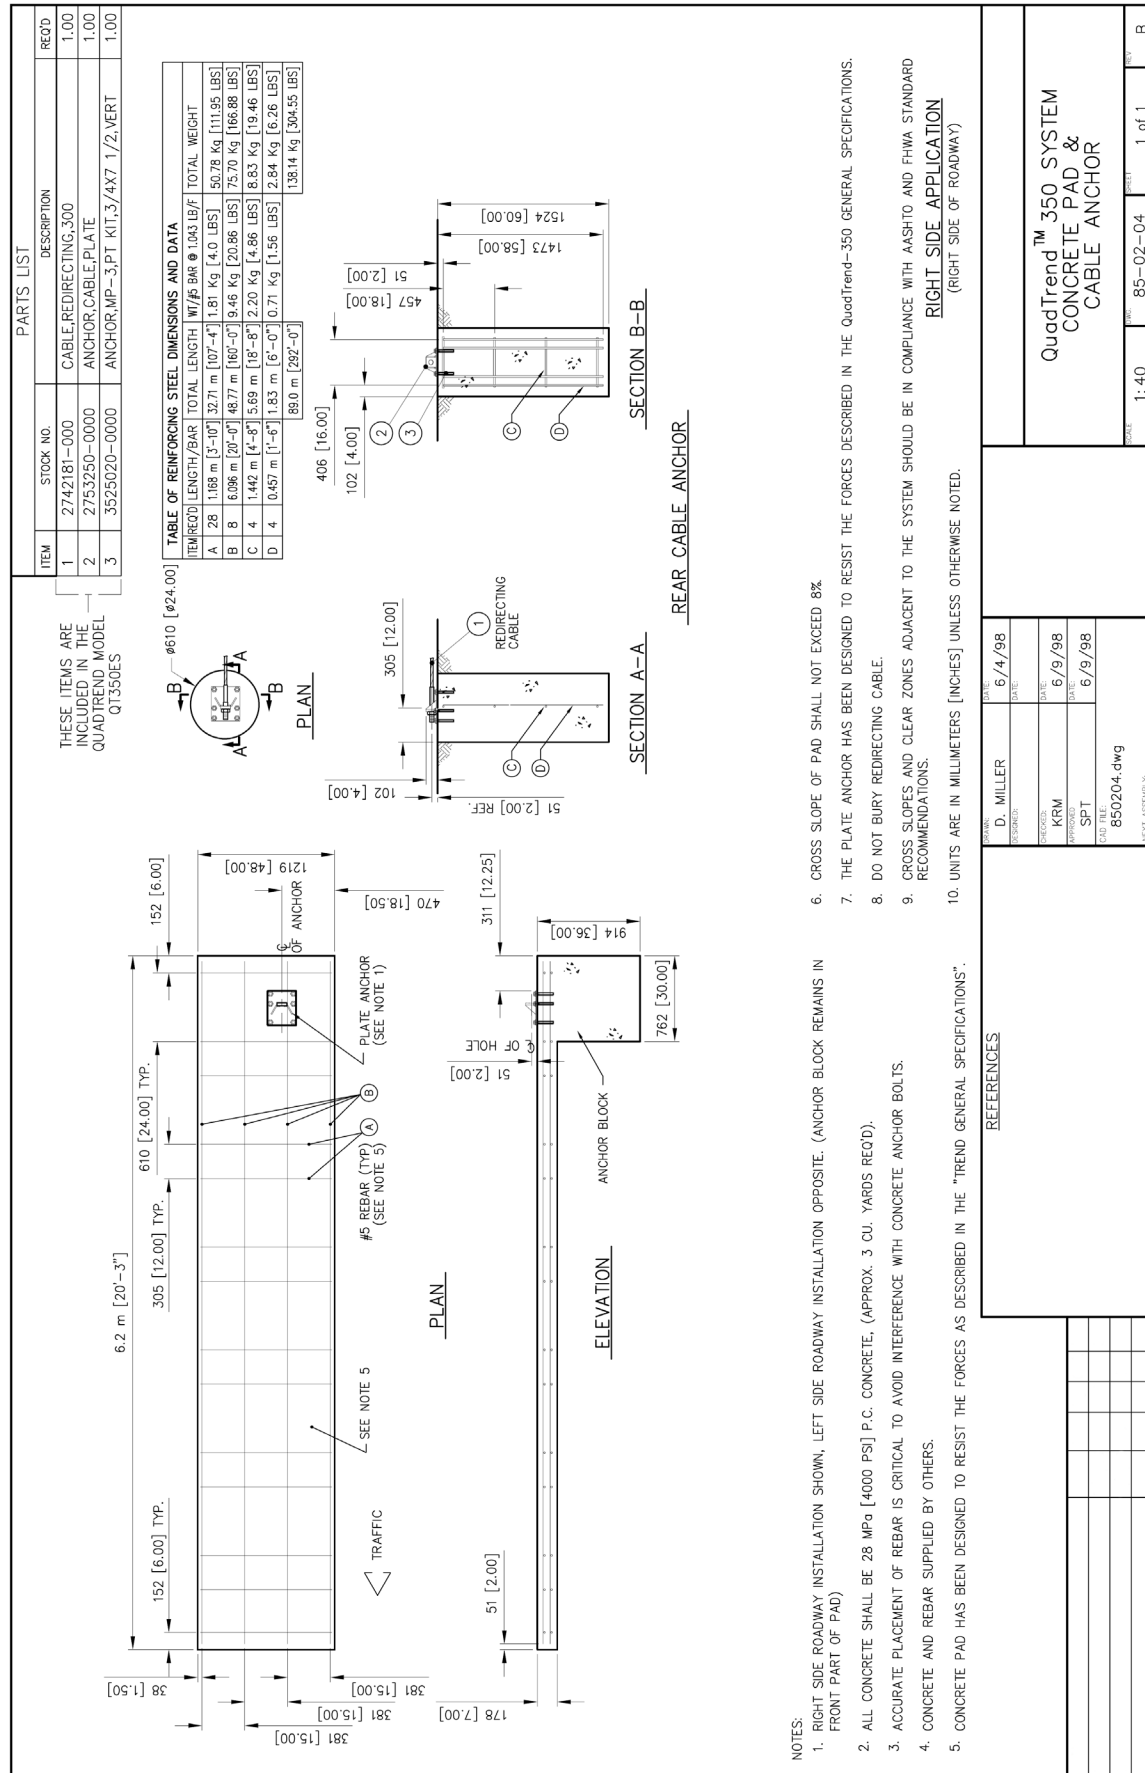
QuadTrend[®] 350 Concrete Pad & Cable Anchor 85-02-04

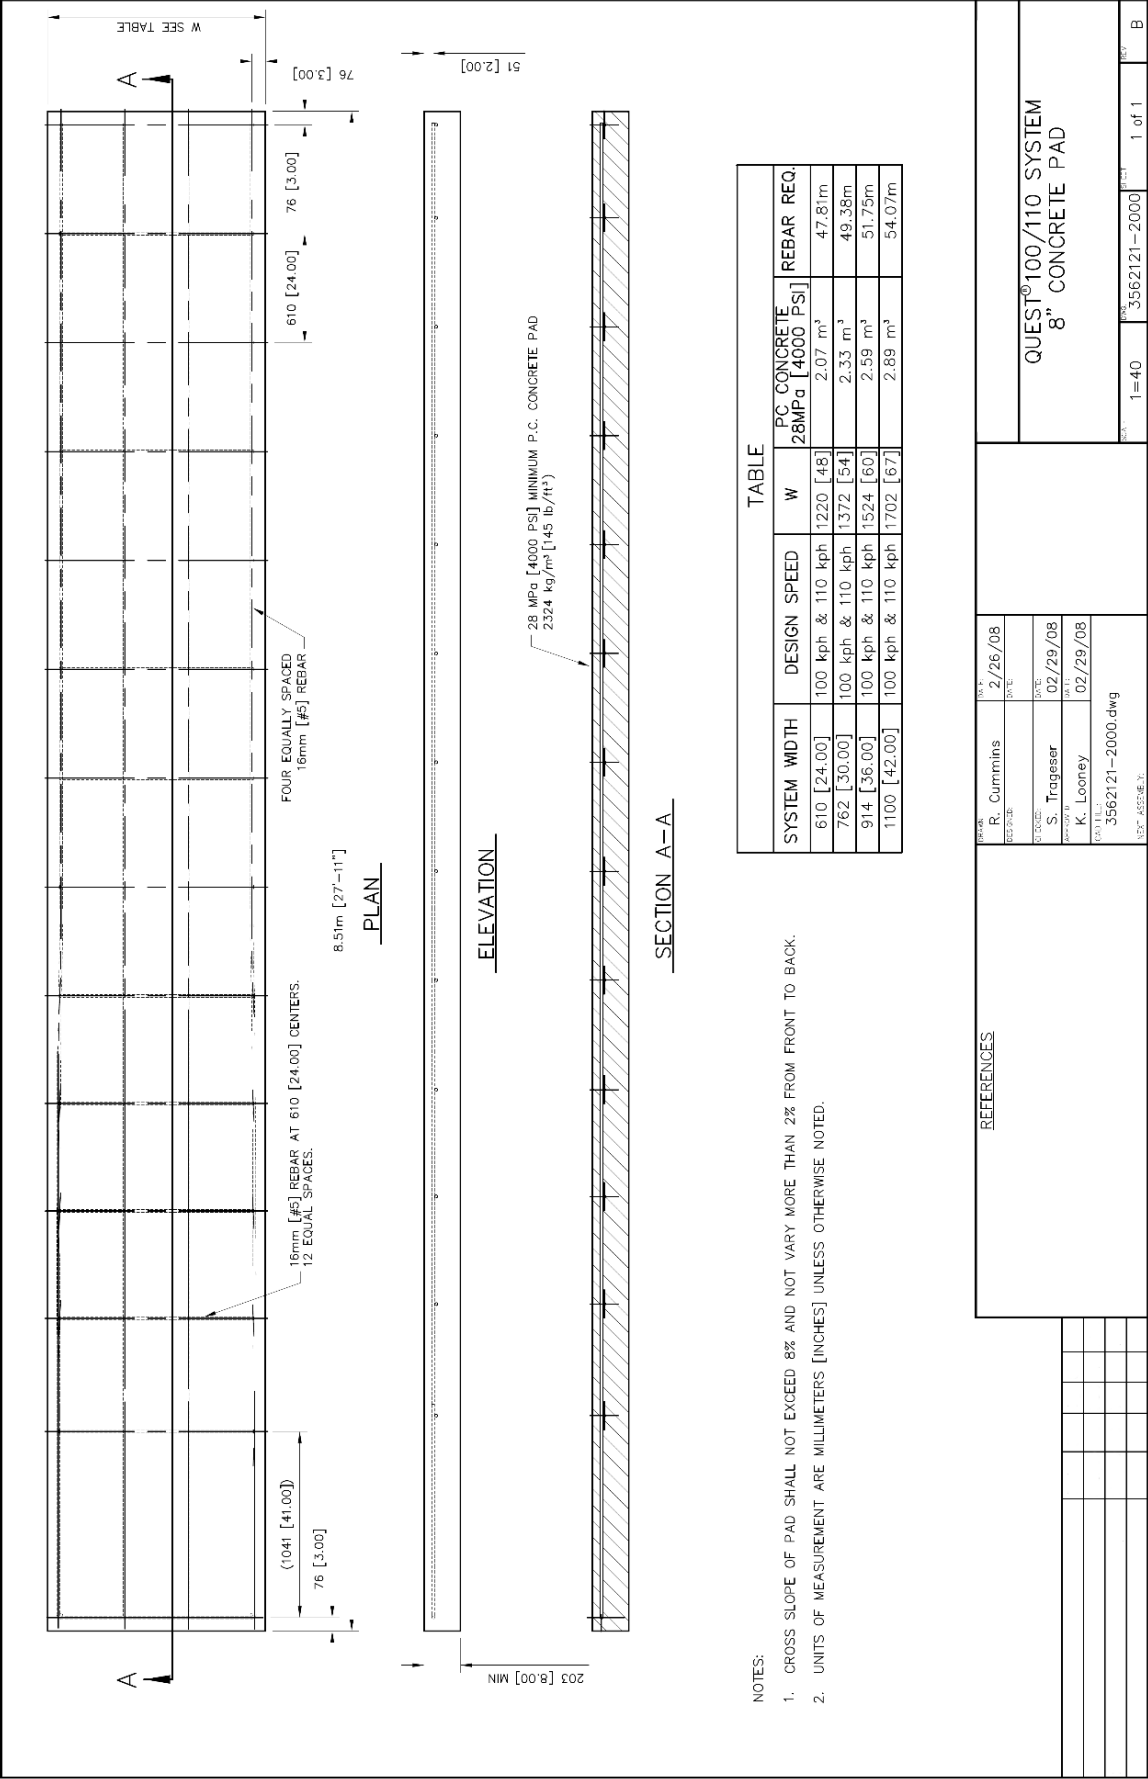


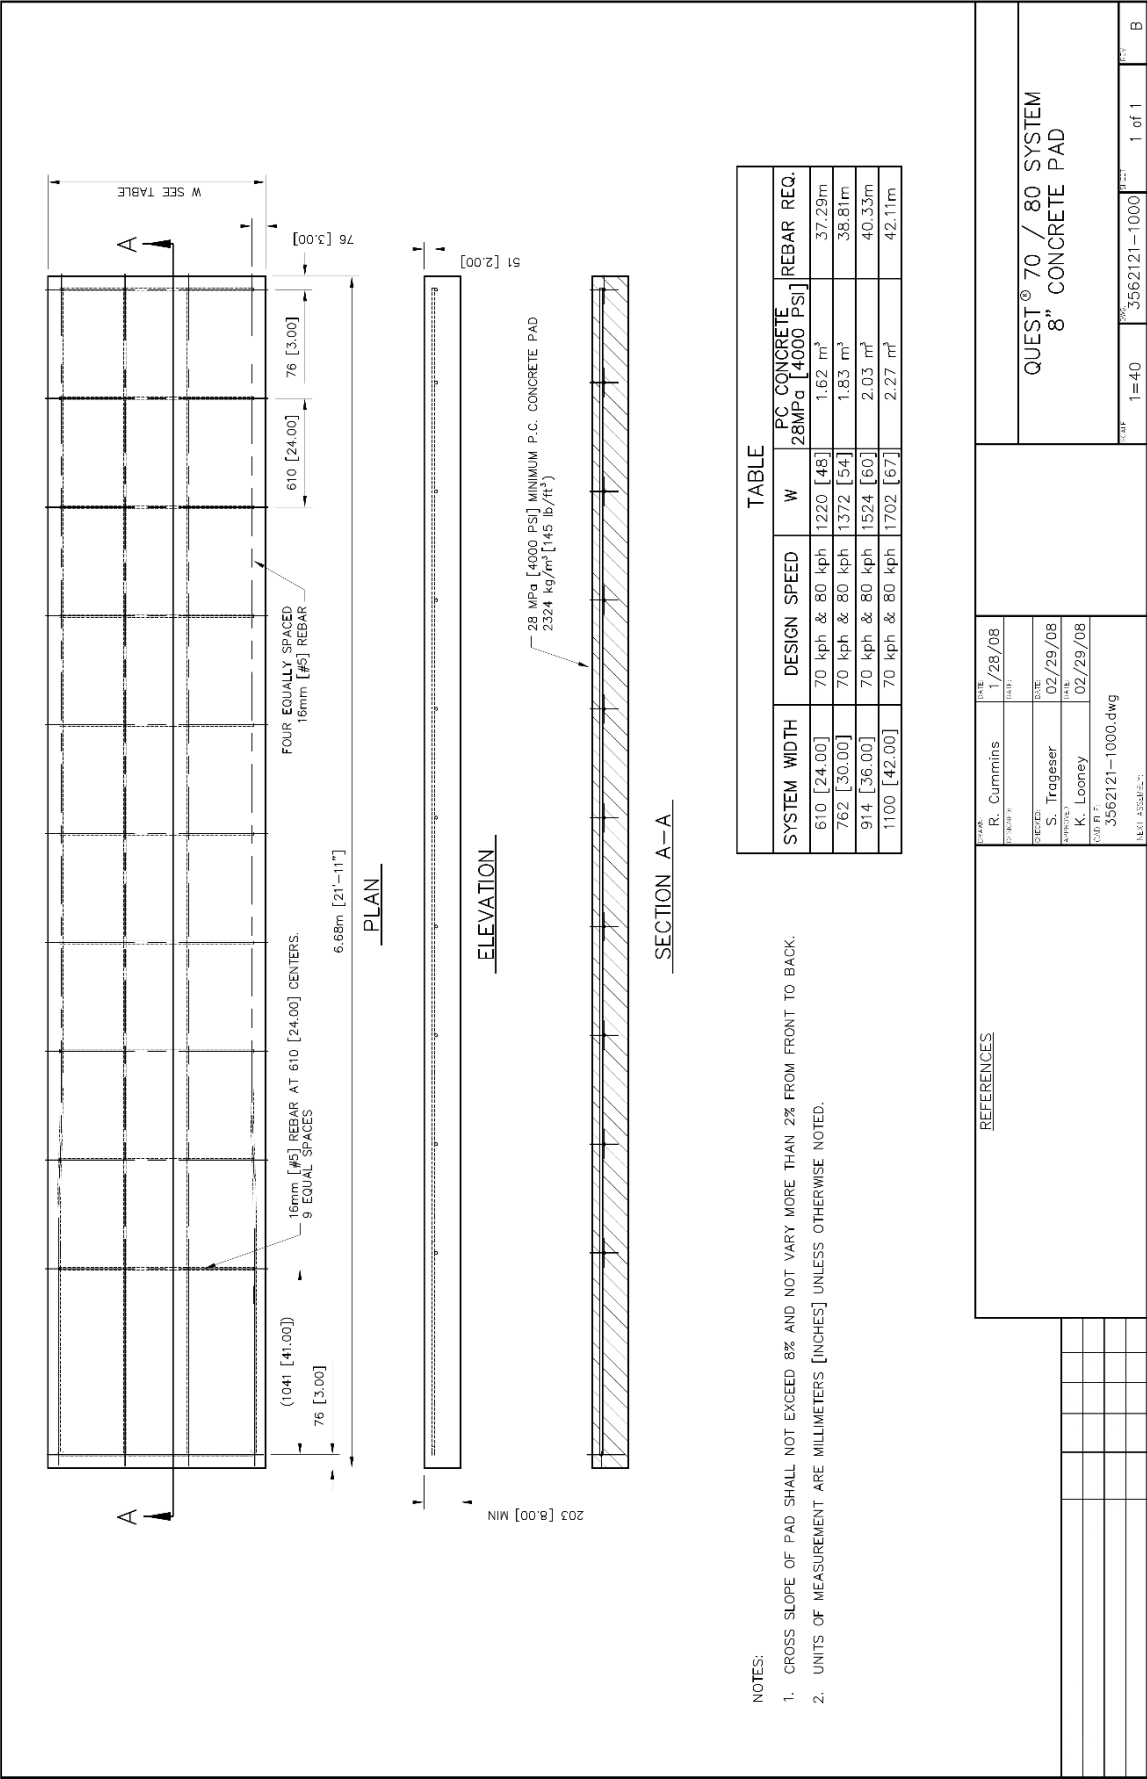

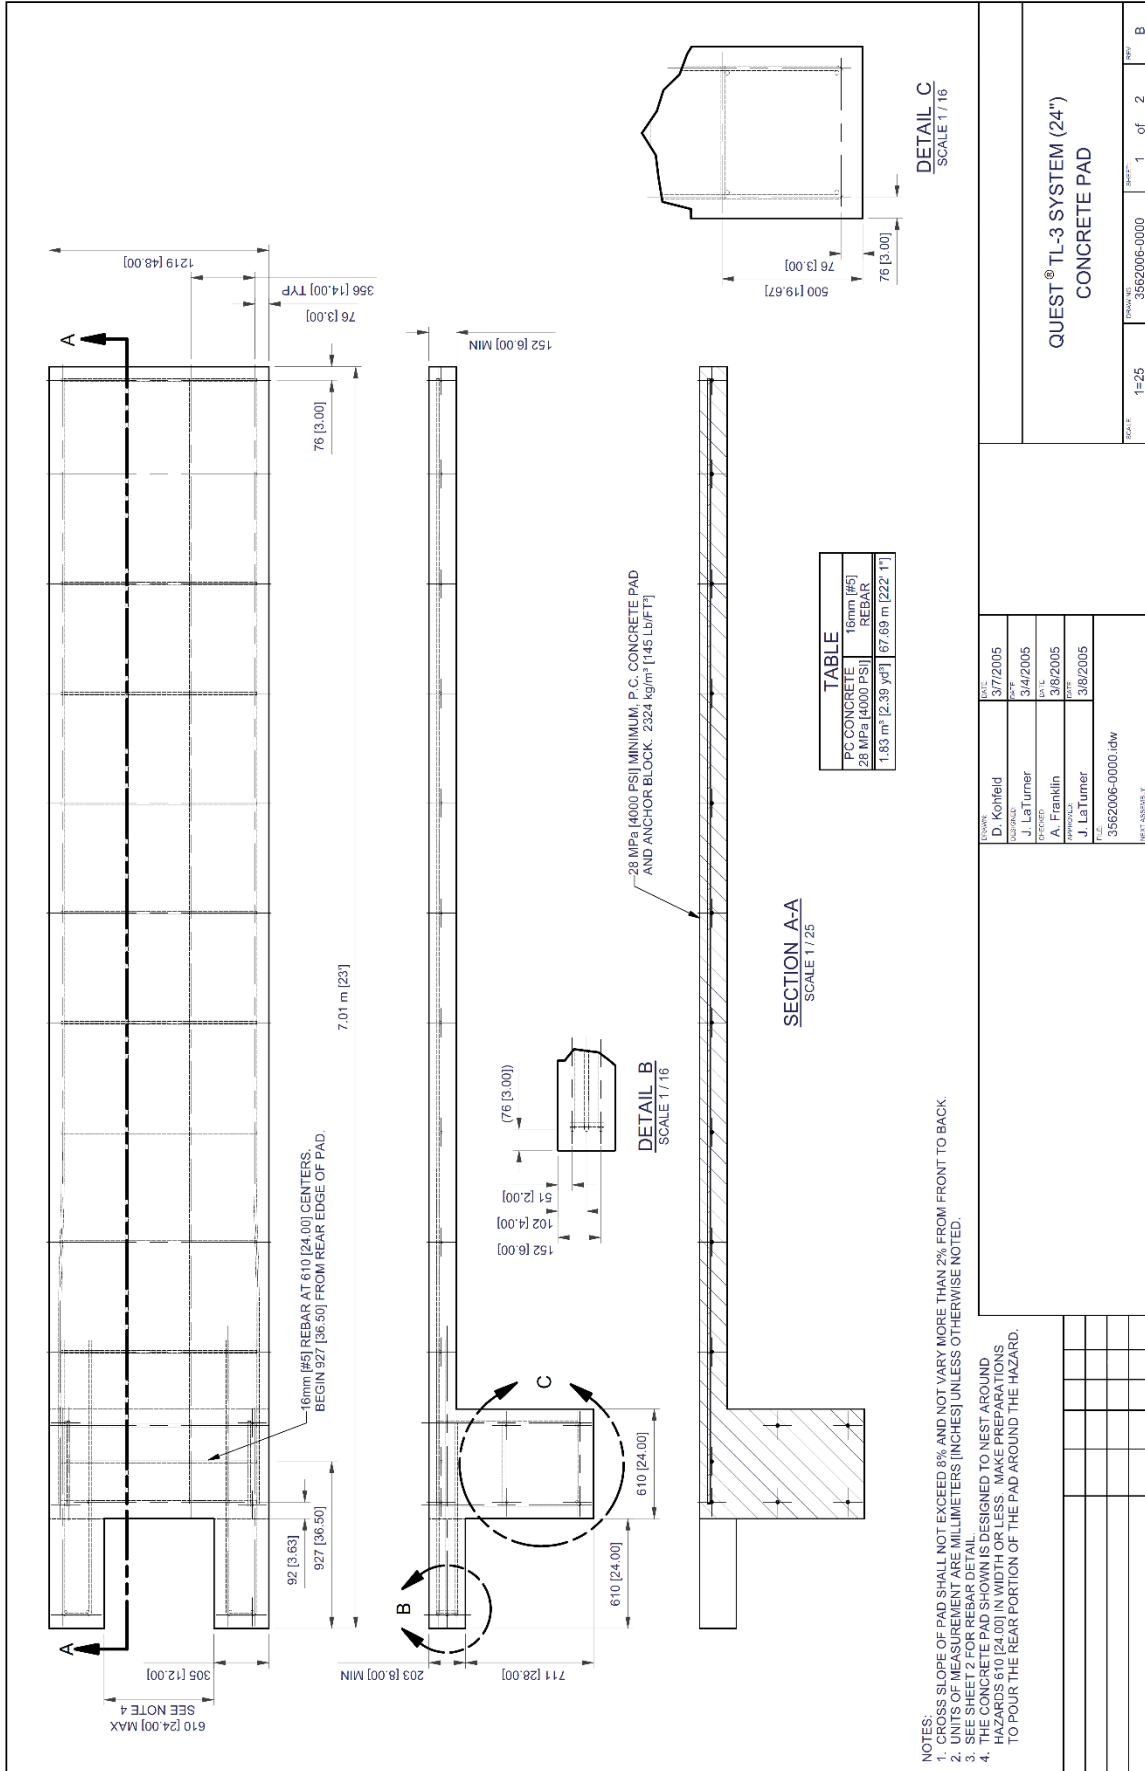


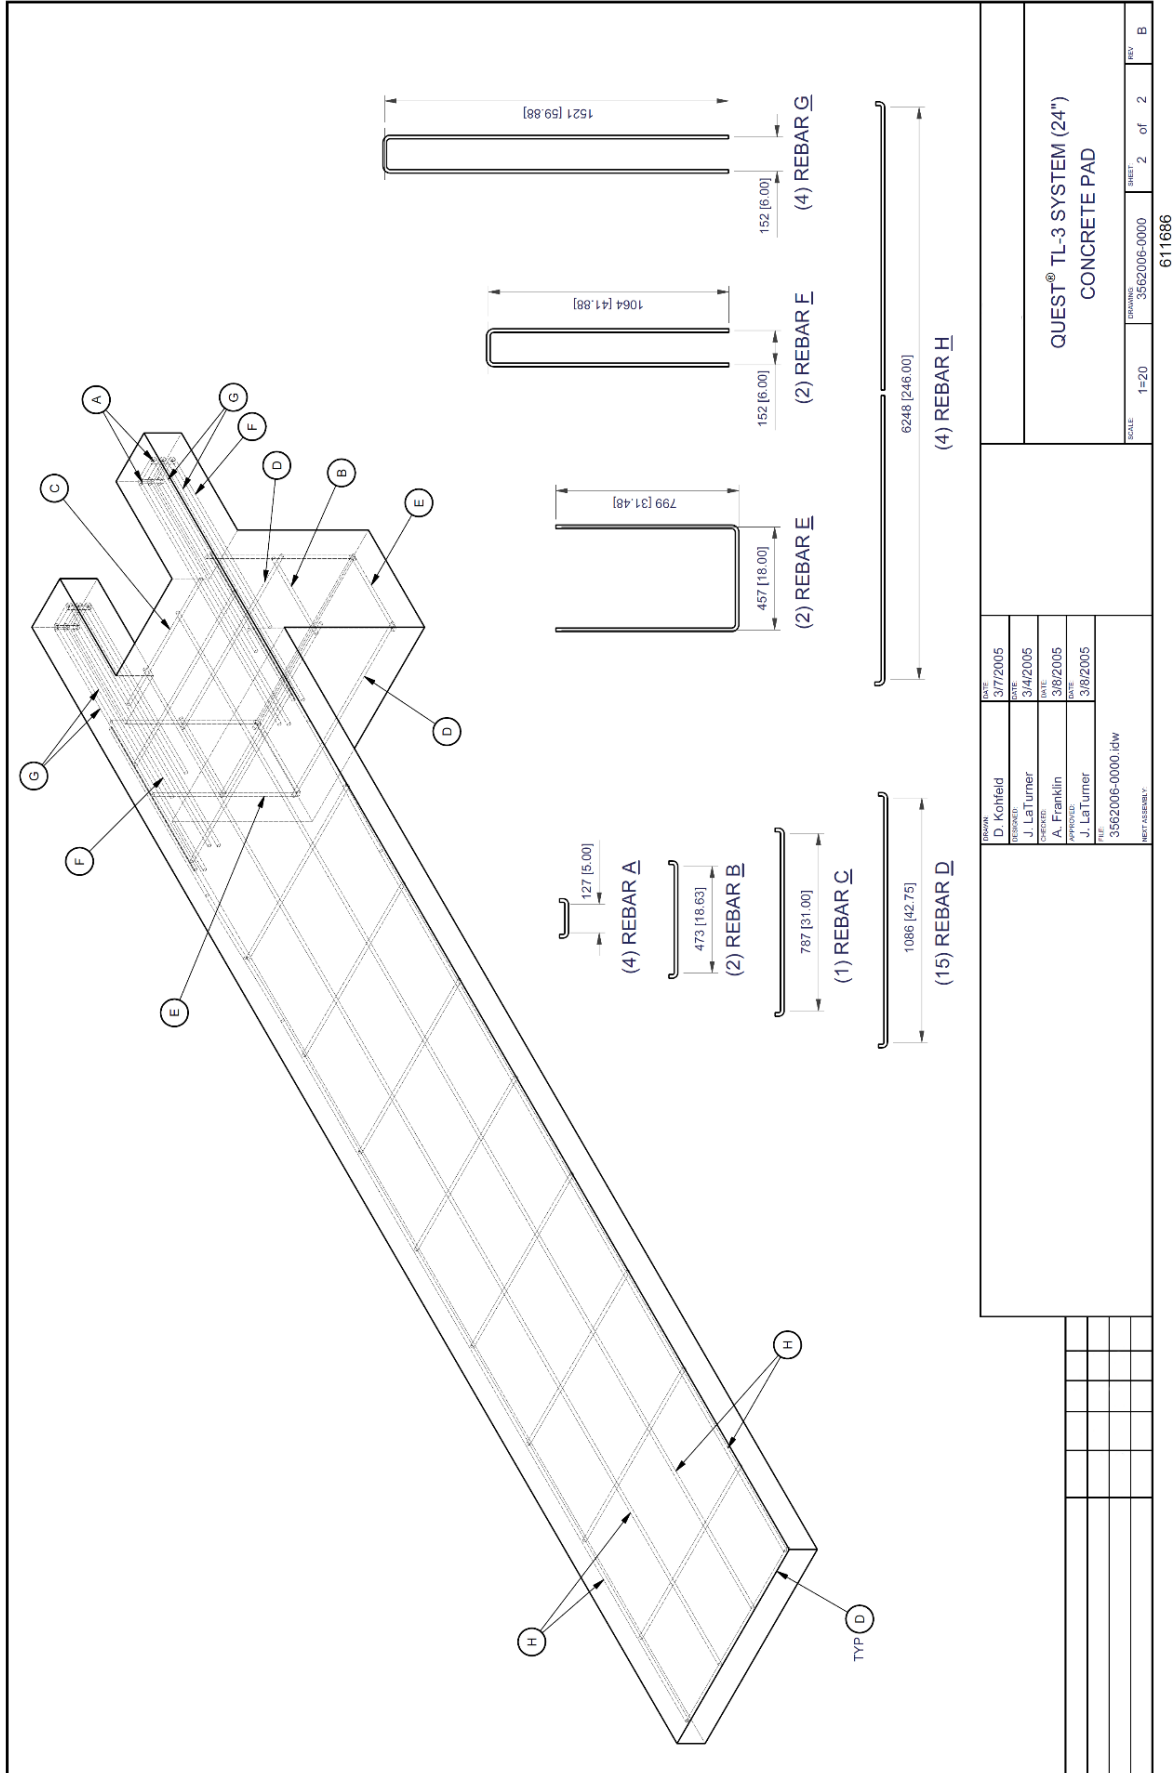

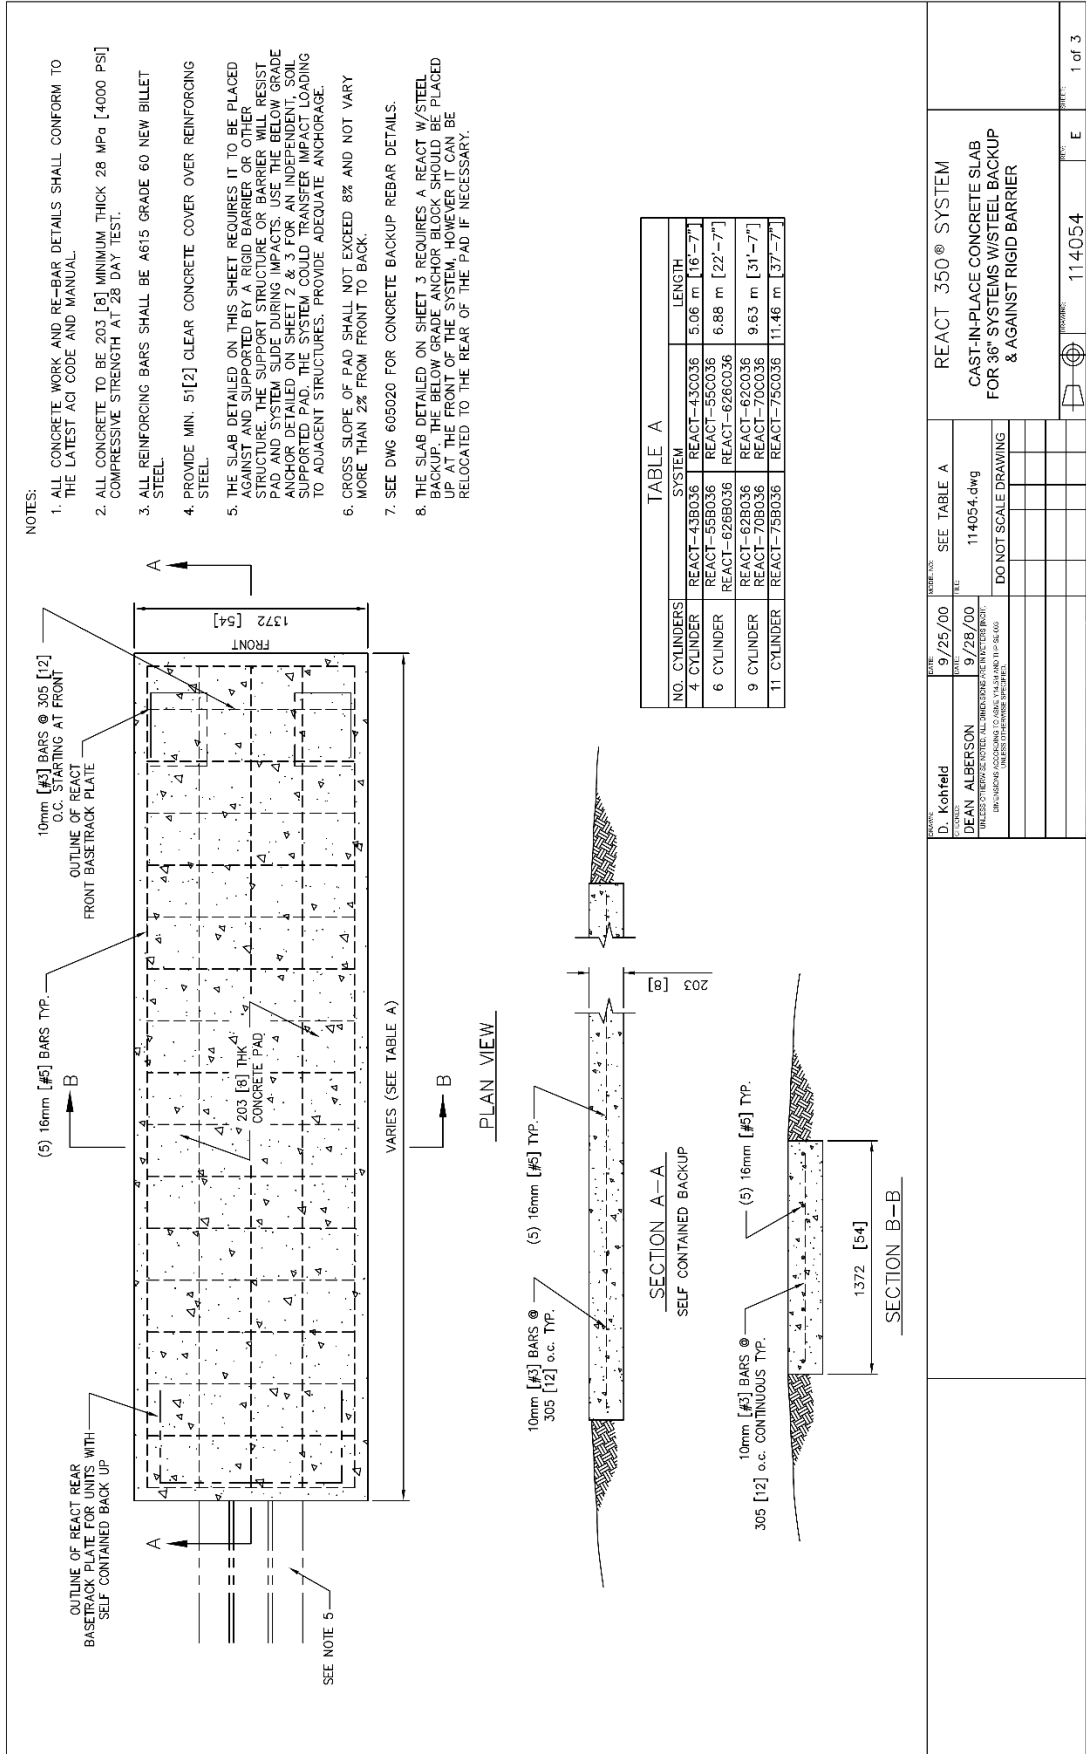


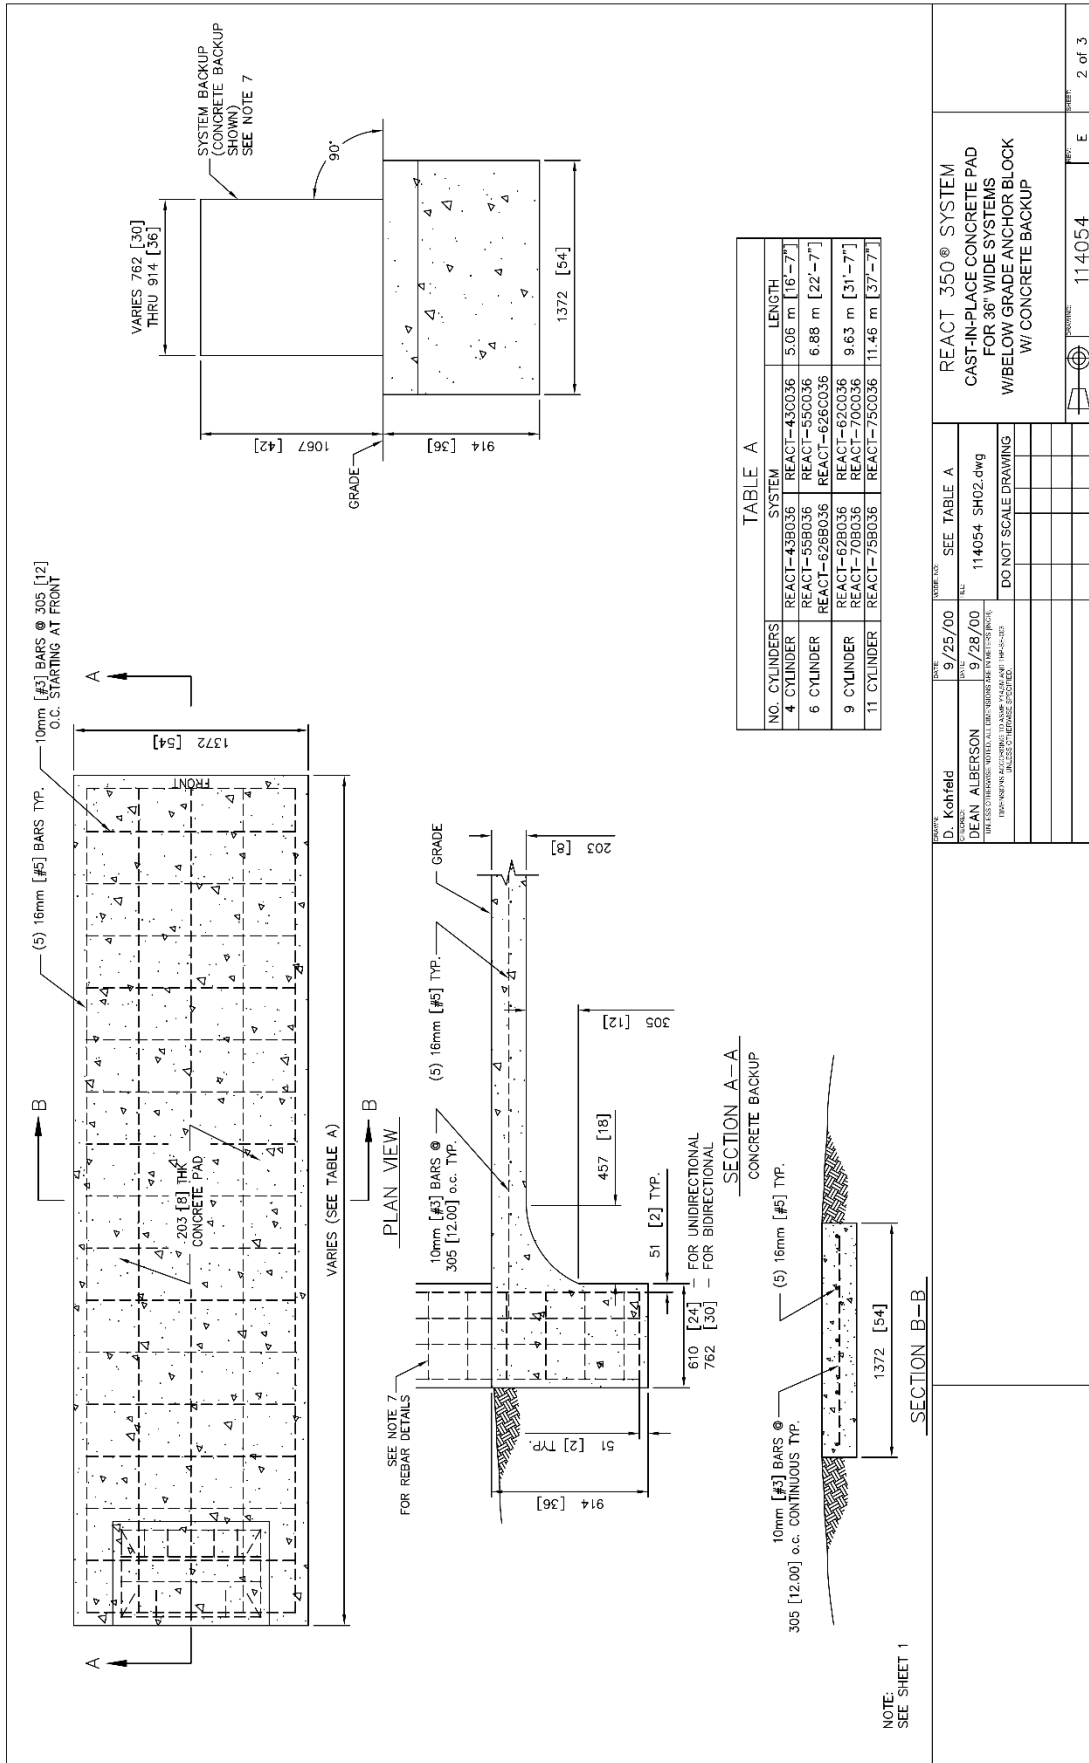


REACT 350® Concrete Backup and Below Grade Anchor Block

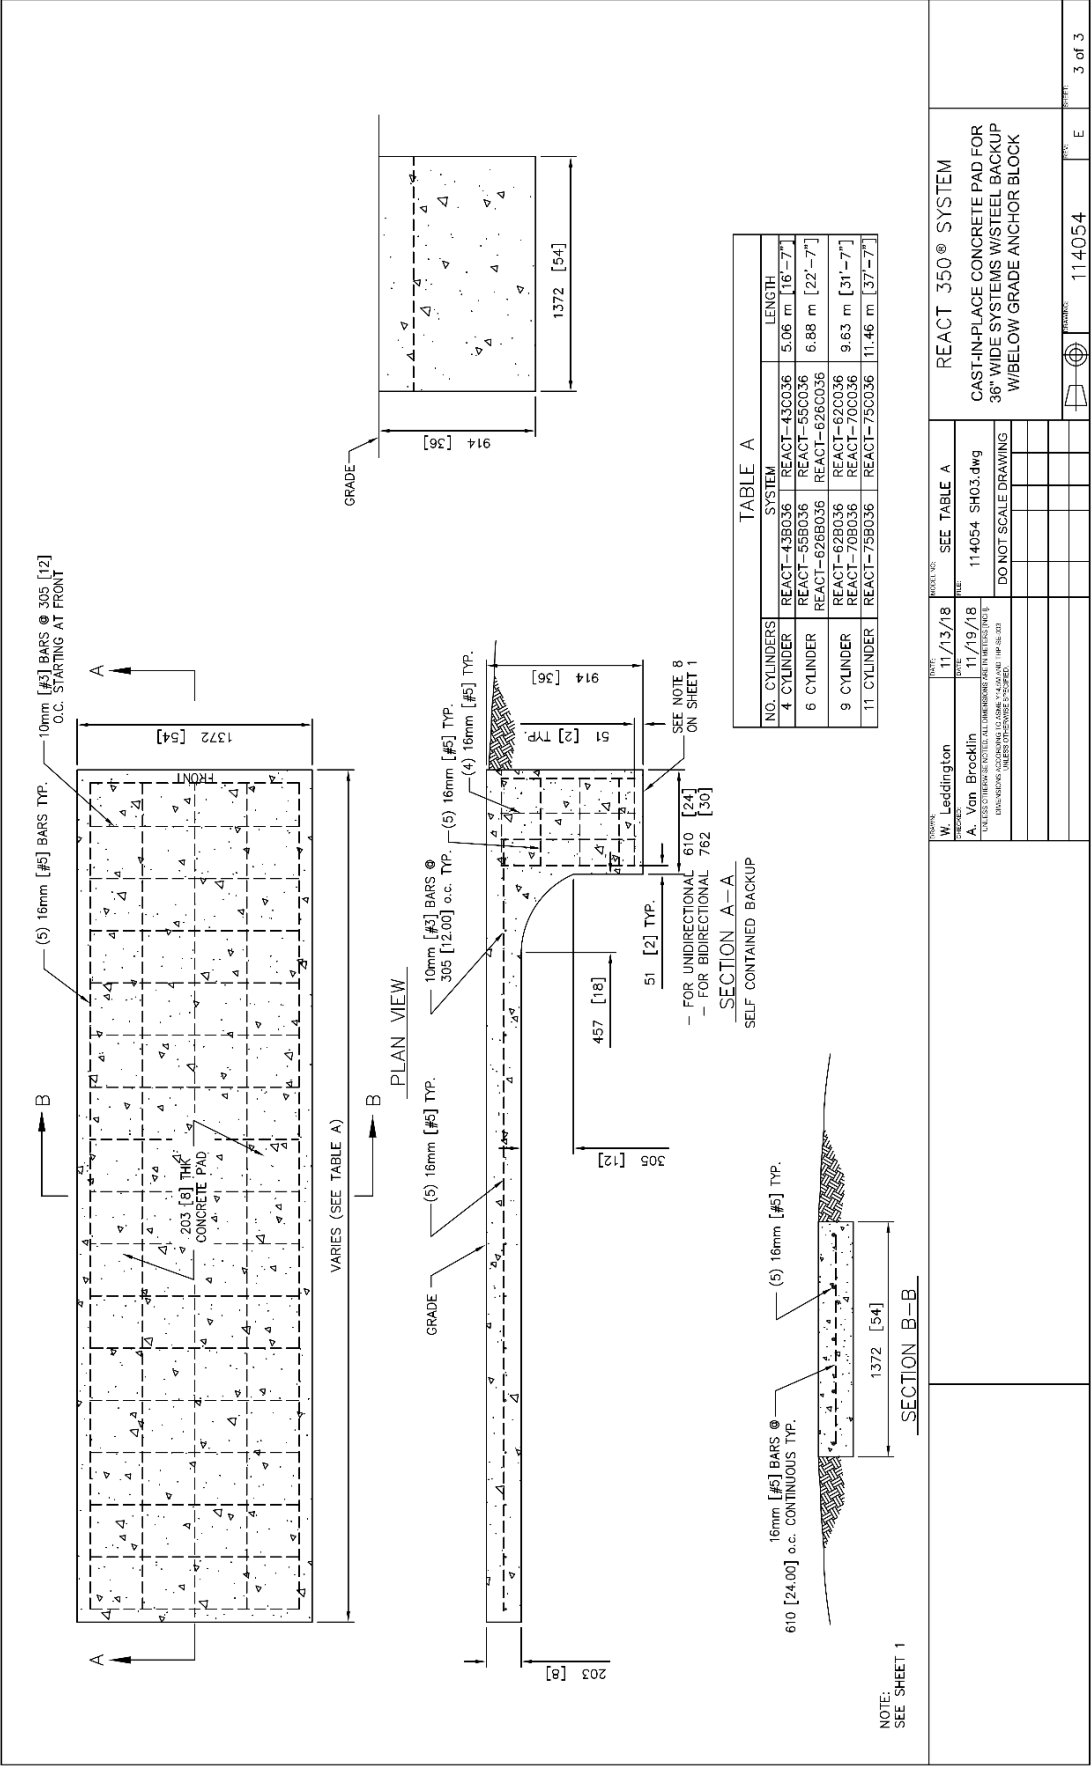


REACT 350® Steel Backup and Below Grade Anchor Block

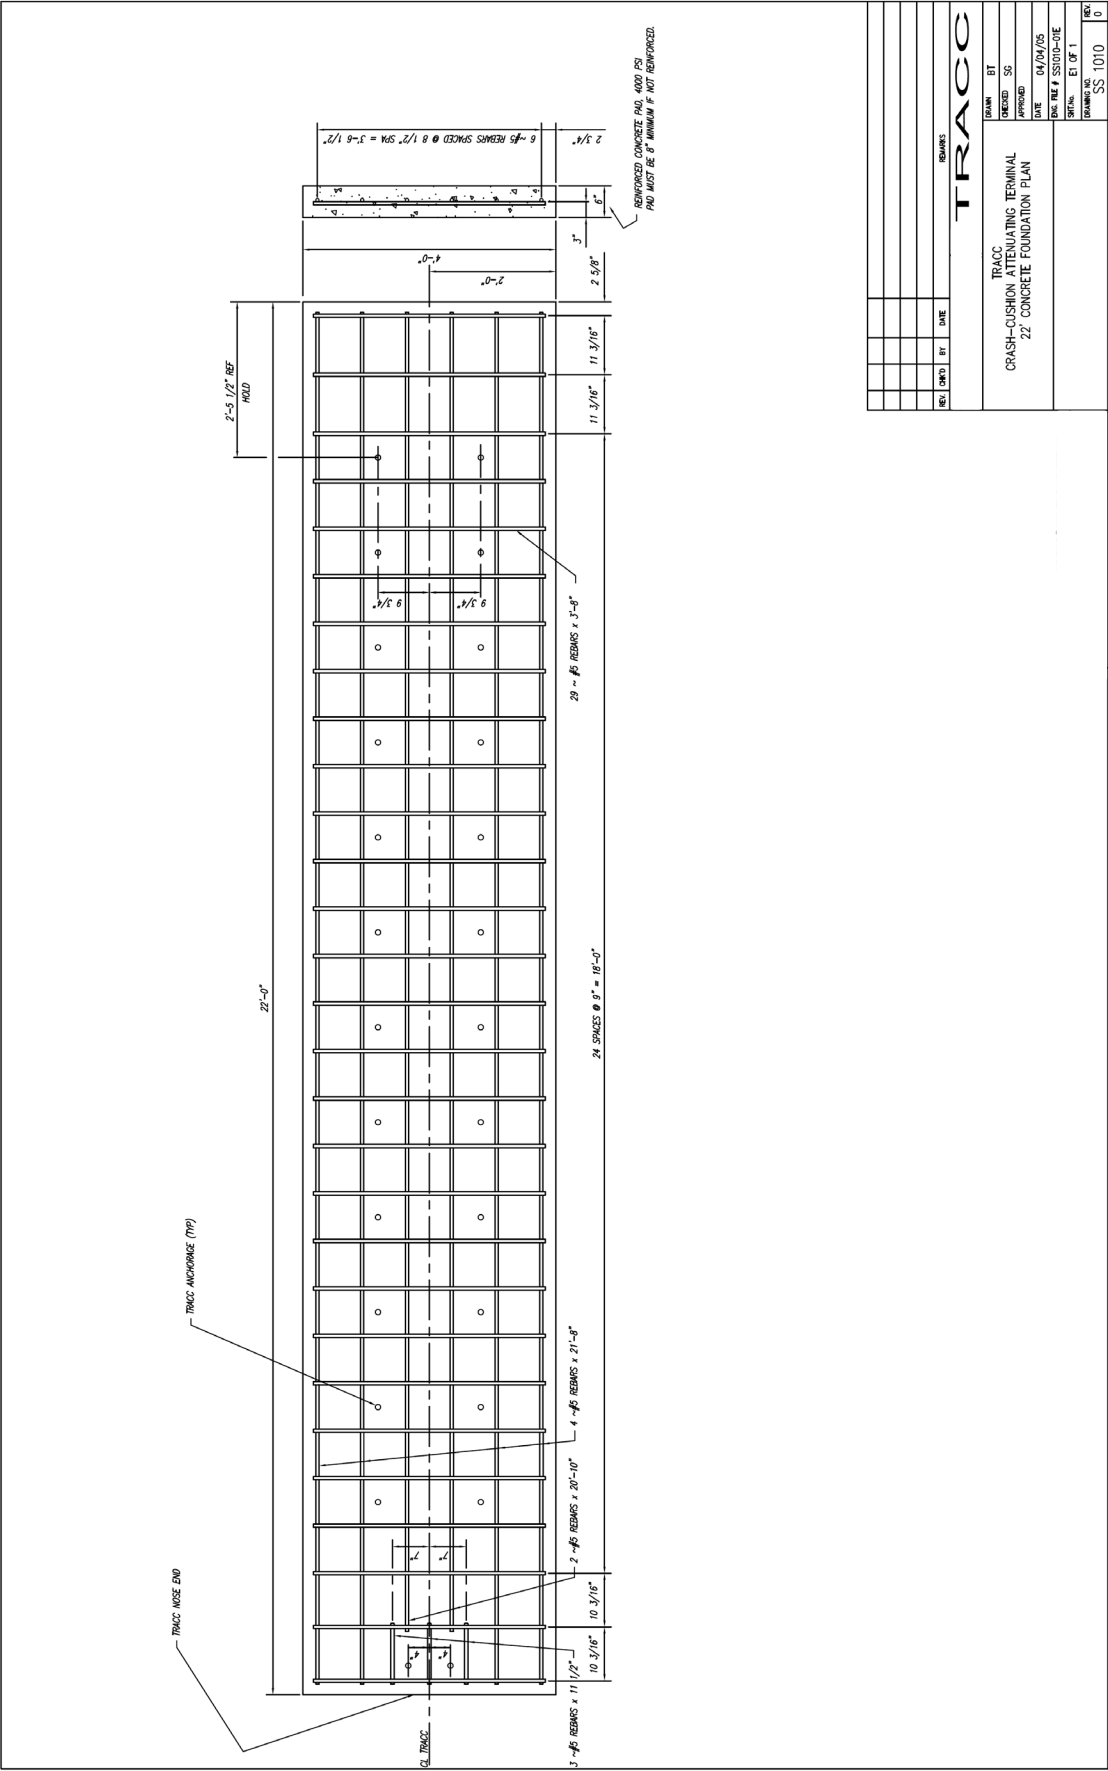


TRACC 22' SS 1010

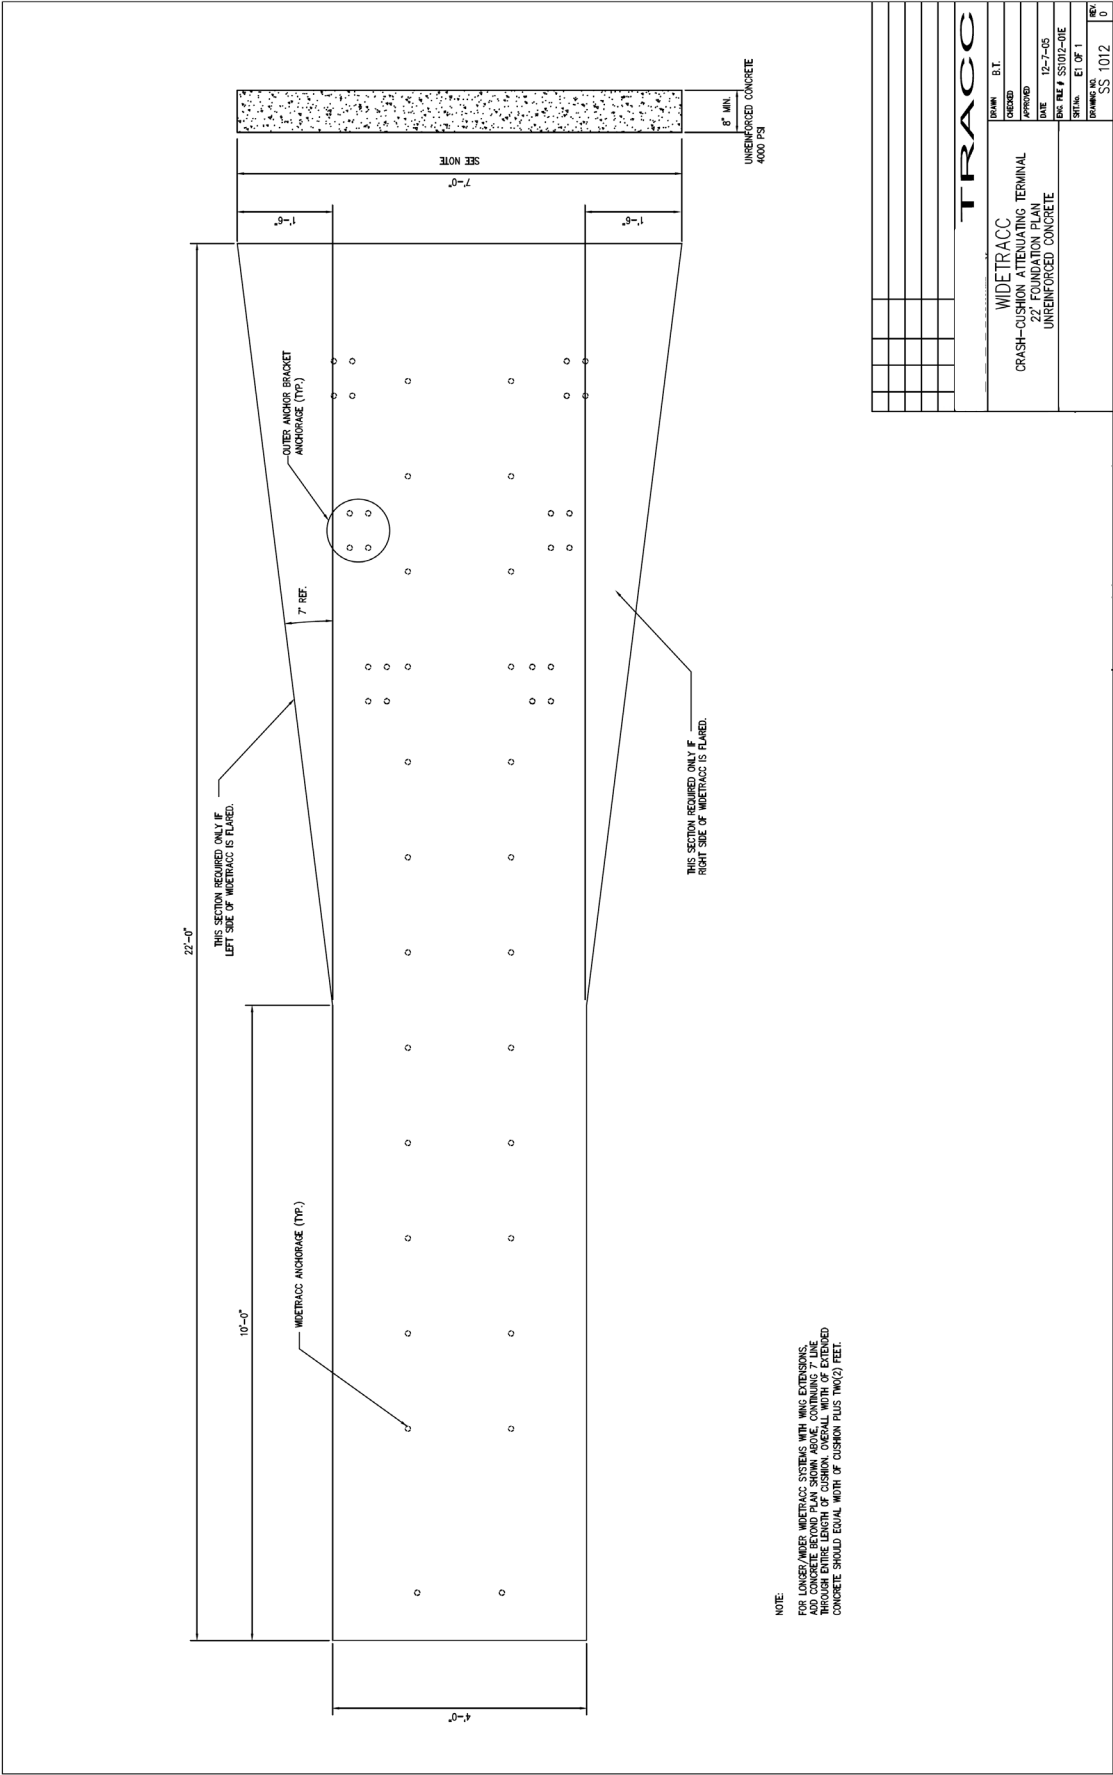


WIDETRACC 22' SS 1012

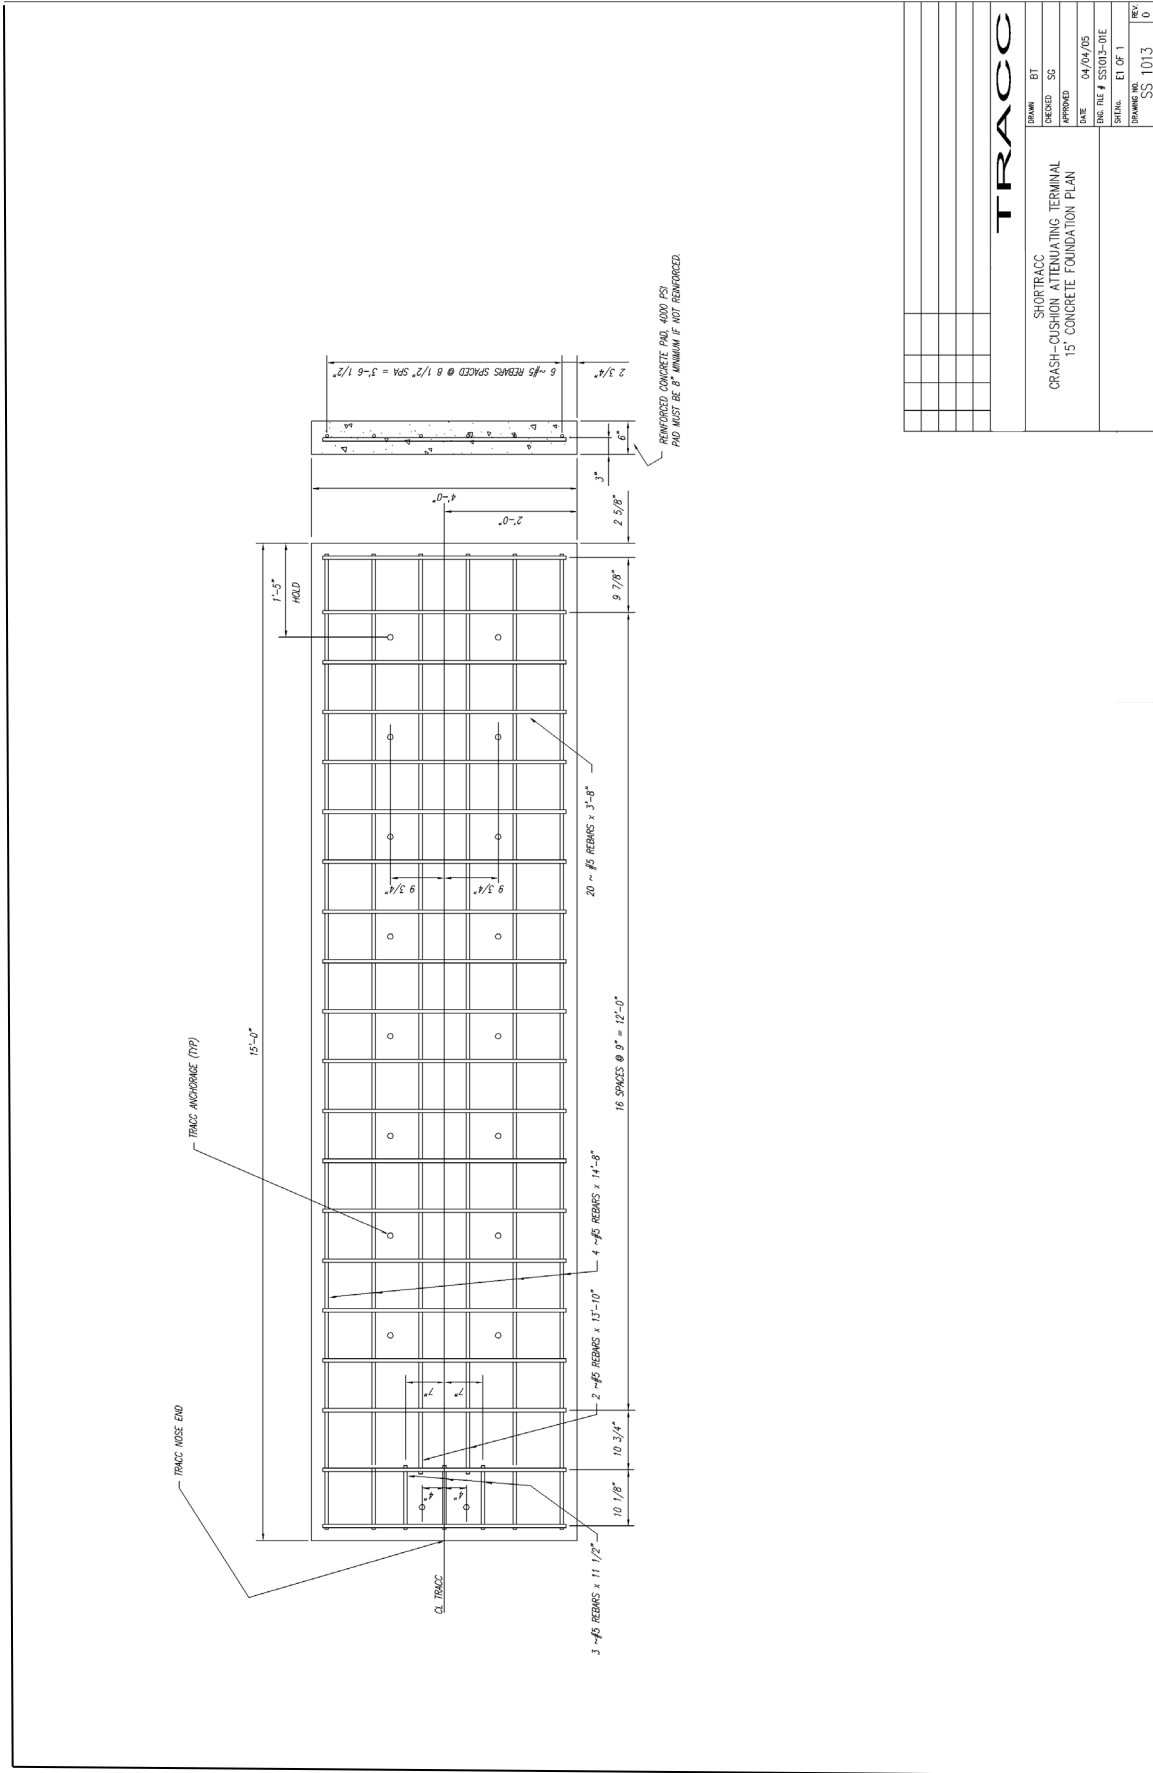


SHORTTRACC 15' SS 1013

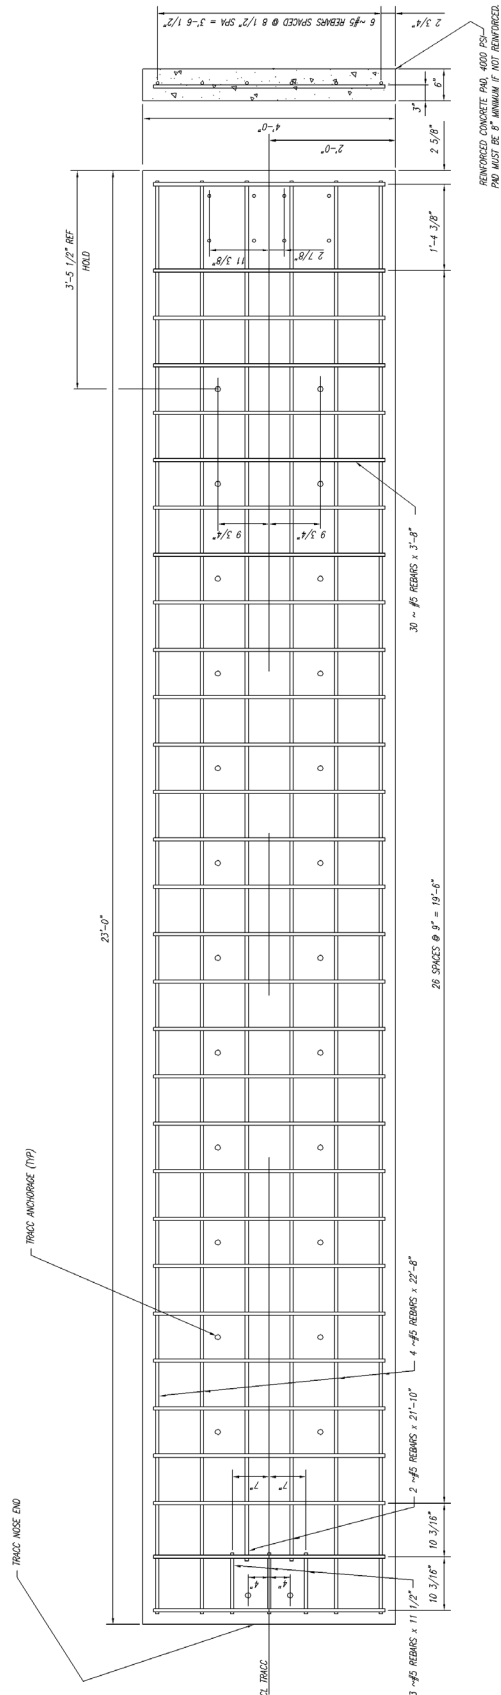

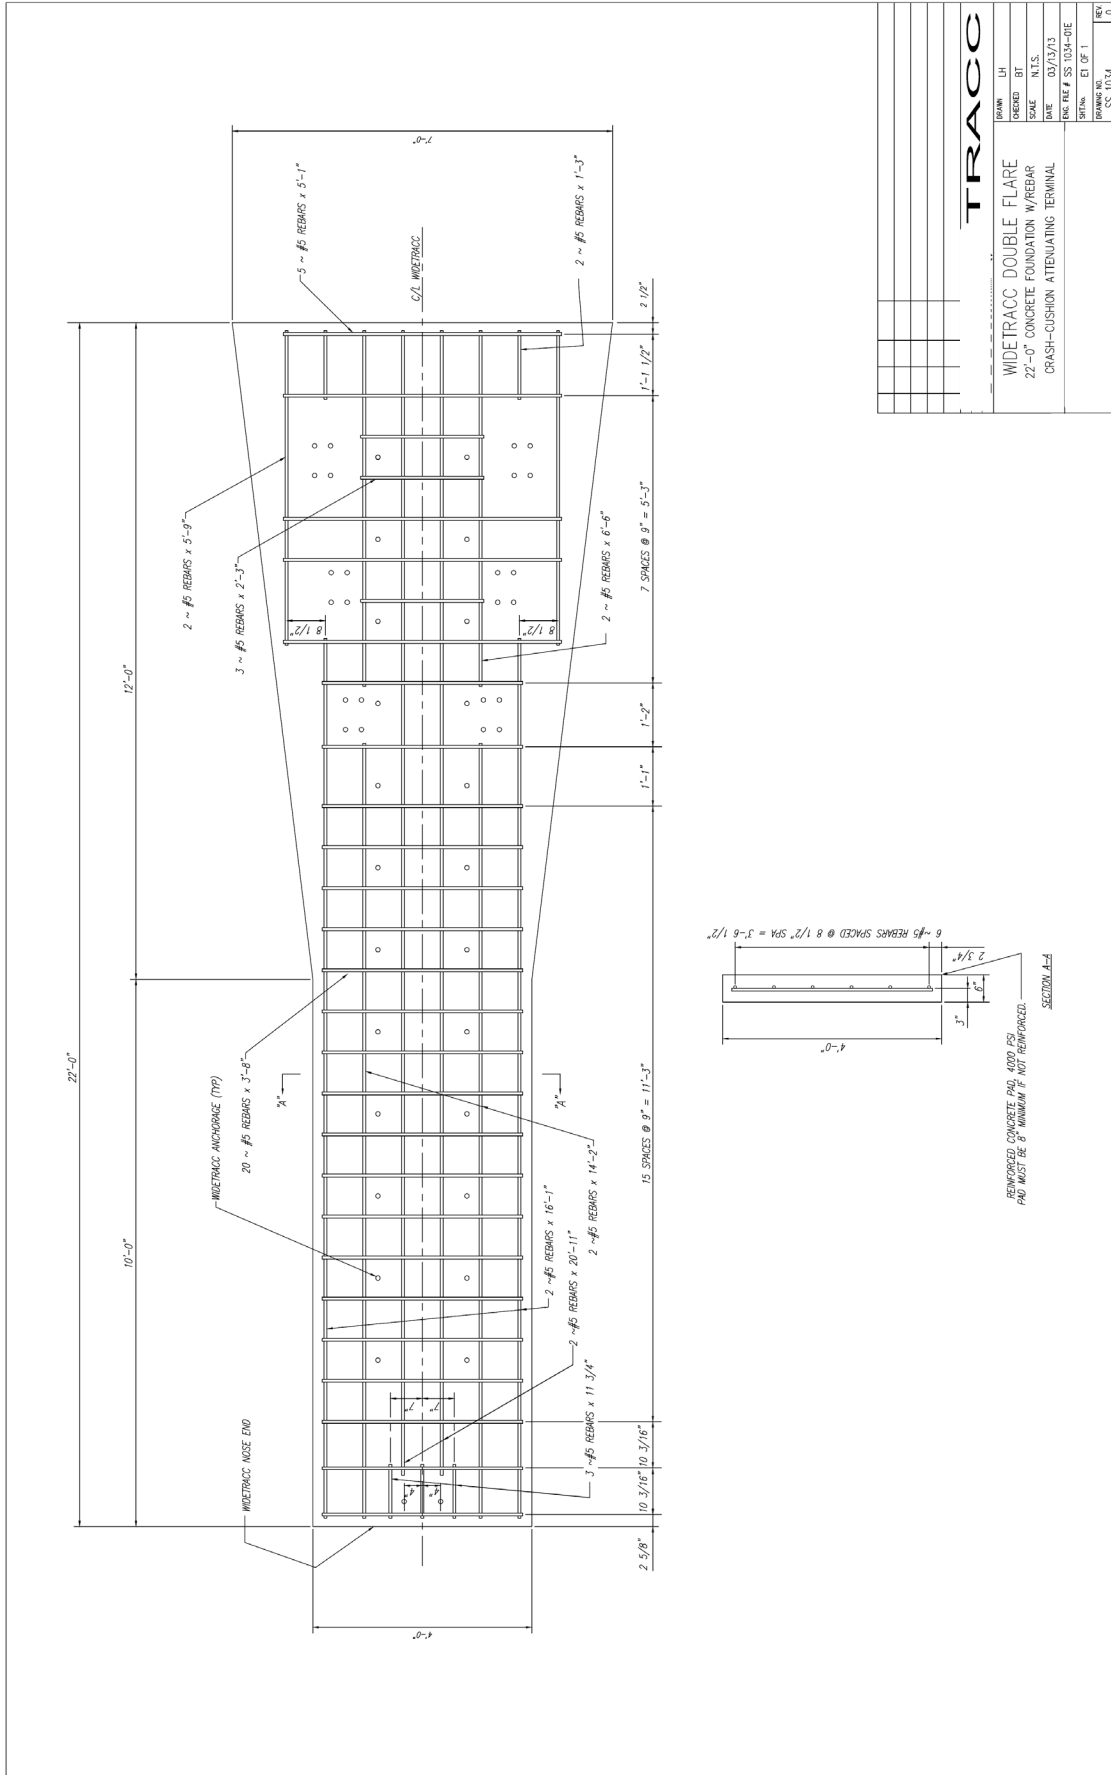

WIDETRACC Double Flare 22' SS 1034

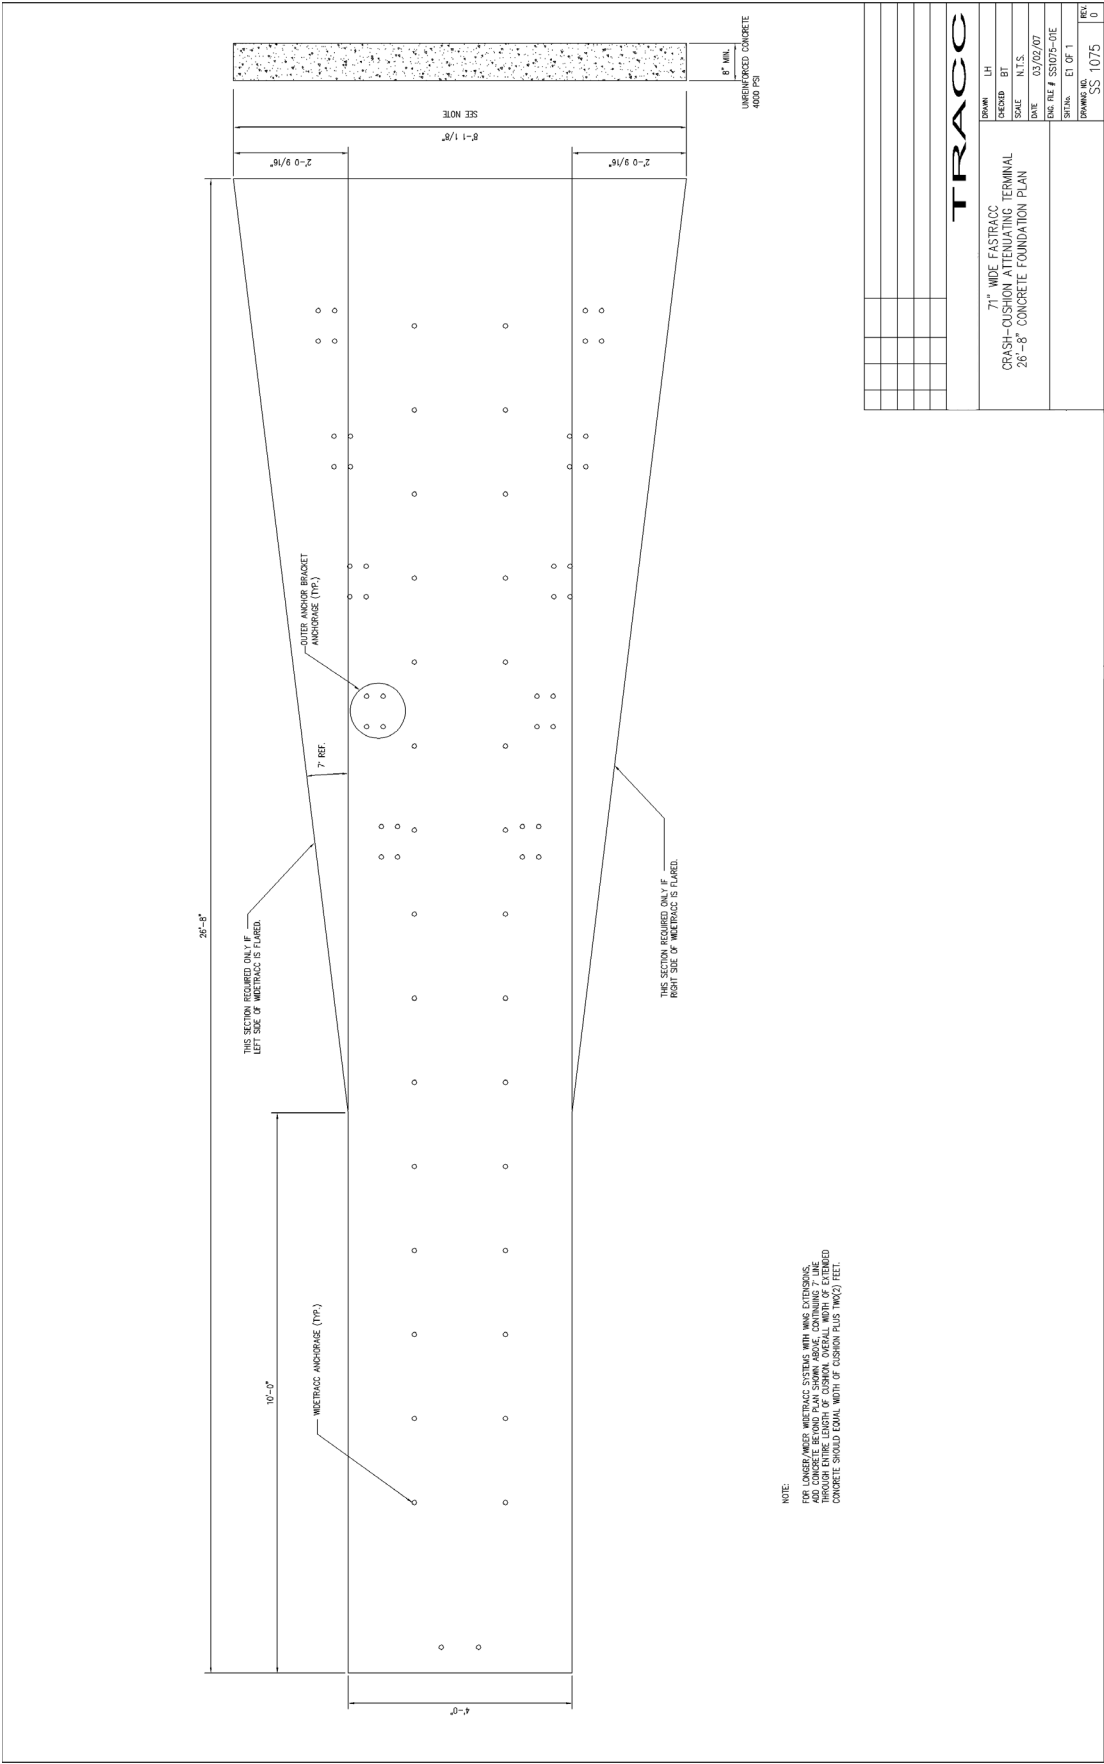

WIDE FASTRACC 26'-8" SS 1075



For more complete information on Valtir products and services, visit us on the web at www.valtir.com. Materials and specifications are subject to change without notice. Please contact Valtir to confirm that you are referring to the most current instructions.

WWW.VALTIR.COM
1.888.323.6374